



ALPHASONIK®

Owner's Manual



PSW912 / PSW915

ALPHASONIK WAS FOUNDED IN 1976 WITH ONE MISSION, TO BRING STATE OF THE ART PERFORMANCE TO THE CAR AUDIO ENTHUSIAST.

In those early years we pioneered such ground-breaking technologies as amplifier fan cooling and high voltage signal transfer which remain a benchmark in high-end audio.

Today, the new Alphasonik is committed to pushing the envelope with regard to technology, quality and value. Our electronics feature audiophile parts and circuit topology designed to let the full musical experience come through, loud and clear. Our loudspeakers employ the latest high technology materials and processes such as carbon reinforced woven glass and titanium vapor deposition to deliver your music with tremendous impact, dynamics and resolution.

We stand behind our quality with one of the best warranties in consumer electronics. Compare Alphasonik car audio products against anything competition has to offer. We're confident you will come to one conclusion...

ALPHASONIK HAS NO EQUAL



Introduction.....3

Features and Specifications.....4

Building an Enclosure.....5-10

Subwoofer Parameters.....11

Wiring Diagrams.....12-14

Troubleshooting.....15

Warning / Disclaimer.....16

Notes.....17-18

Thank you for purchasing this Alphasonik product. Alphasonik products are specifically engineered and designed for the mobile audio environment. This manual contains important information about installation, set-up procedures and integrating your new Alphasonik product into your vehicle. With proper care and installation, your new product will provide you with many years of high performance listening enjoyment. We recommend having an Authorized Alphasonik Dealer install your new product for optimal performance and to take advantage of our warranty program. Before installing your new product, please read through the manual to fully understand the application.

Before making any electrical connections, make sure that you disconnect the battery's ground cable to prevent the possibility of short circuits or damage to your electronic equipment. If your vehicle's stereo (head unit) comes with an Anti-theft code, DO NOT disconnect the battery. If you have the access code for the stereo (head unit), please refer to the vehicle's owner's manual.

All Alphasonik 900 Series cast basket subwoofers feature our patent pending input and output terminals. Configure voice coils or drivers in series or parallel with no fuss and no cramped or frayed wires. Terminals are audiophile grade nickel-plated, machined brass – compression fit with Allen head setscrews

PROPRIETARY HEAT SINK

Alphasonik 900 Series subwoofers have motor structures encased in patent , cast aluminum, machine finished heat sinks. Power handling is enhanced because excess heat is quickly absorbed and transferred to the environment.

CARBON FIBER, KEVLAR® CONE WITH ALUMINUM DUST CAP

Alphasonik 900 Series subwoofers use our Ultra Light dual layer Carbon Fiber Cone with a Aluminum dust cone.

HIGH TENSILE STRENGTH DUAL LAYER SURROUND

Alphasonik 900 Series subwoofers feature a massive 2-layer, high-travel surround for reliability and control at maximum excursion

PSW912

12" ALPHA 900 SERIES SUBWOOFER

Proprietary Cast Aluminum Alloy Machine Cut "Alpha" Basket

Proprietary Cooling Rings for Motor Assembly (Patented)

Kevlar® Reinforced Composite Balanced & Laminated Cone

High Tensile Strength Two-Layer Surround for Enhanced Control

Flat Progressive Rate Nomex® Damper w/ Spiral-Woven Leads

200 oz. Triple Stack Magnet

Rated at 2200 Watts RMS

93dB Efficiency

Frequency Response of 24Hz to 700Hz

Dual 2 ohm 3" Voice Coils

8-Gauge Sure-Lok Input and Output Terminals (Patented)

Mounting Dimensions

Depth: 222mm / 8 3/4" Through Hole: 276mm / 10 7/8" Diameter: 312mm / 12 5/16"

PSW915

15" ALPHA 900 SERIES SUBWOOFER

Proprietary Cast Aluminum Alloy Machine Cut "Alpha" Basket

Proprietary Cooling Rings for Motor Assembly (Patented)

Kevlar® Reinforced Composite Balanced & Laminated Cone

High Tensile Strength Two-Layer Surround for Enhanced Control

Flat Progressive Rate Nomex® Damper w/ Spiral-Woven Leads

200 oz. Triple Stack Magnet

Rated at 2500 Watts RMS

98dB Efficiency

Frequency Response of 20Hz to 700Hz

Dual 2 ohm 3" Voice Coils

8-Gauge Sure-Lok Input and Output Terminals (Patented)

Mounting Dimensions

Depth: 247.65mm / 9 3/4" Through Hole: 361.95mm / 14 1/4" Diameter: 390.53mm / 15 3/8"

Now that you know about subwoofer specifications it's time to learn about building subwoofer boxes. If you've done any woodworking you shouldn't have much trouble when building a subwoofer enclosure. One of the main differences will probably be the material used in building subwoofer boxes as compared to other woodworking projects. When building a custom subwoofer box you will want to use minimal MDF (medium density fiberboard).

TOOLS REQUIRED TO BUILD AN ENCLOSURE

Safety goggles

Table saw or circular saw

Powered screw gun

Router or jig saw

Variety of sizes of drill bits

Wood glue

Silicone

Wood screws

To ensure your safety while building an enclosure, please read all manuals for the power tools you will be using, as they will include valuable information on handling the tools and safety tips.

If you're planning to build your own enclosure and are confused in what type of enclosure best suits your needs this page will help you choose what enclosure fits your needs. There are many different types of enclosures. The two most common used enclosures are sealed and vented enclosure. This page will show the advantages and disadvantages of the two enclosures.

Advantages of a sealed enclosures

- *High power handling capability
- *Great transient response
- *Tolerant of minor enclosure size variation
- *Easy to construct
- *Smooth rolloff (12dB/octave)

Disadvantages of a sealed enclosures

- *Requires a woofer with a long excursion for better low bass frequency response.
- *Can have lower sensitivity than ported enclosures.
- *When using high power and small enclosures, the woofer is not in an ideal cooling environment.
- *Less low bass as compared to a properly tuned vented enclosure above the ported tuning frequency.

Advantages of a vented enclosure

- *Increased output around vented tuning
- *Higher power handling above the port tuning frequency
- *Extended frequency response
- *Magnet is in a good cooling environment
- *Handles higher bass frequencies with less distortion

Disadvantages of a vented enclosure

- *Vented enclosure transient response is not as good as sealed boxes because of the resonant effect of the vent tuning
- *Midrange sound coming from inside the enclosure through the vent can produce unpleasant sound coloration.
- *Loss of cone movement control below vent tuning, which can result in high distortion and mechanical failure of the driver.
- *Lower power handling below the port tuning frequency.

Calculating speaker enclosure volume is a five step procedure.
(Make sure you do not forget to subtract the thickness of the wood that you have selected to use to build your enclosure.)

Step One: Measure Height

Step Two: Measure Width

Step Three: Measure Depth

Step Four: Height x Width x Depth


Step Five: Divide the results were in step four by 1728
(12" x 12" x 12"=1728 which equals to 1.0 cu ft.)

Complete formula should look like this

Height x Width x Depth / 1728 = _____

Below are illustrated versions of all the steps that you should take.


(FOR EXAMPLE ONLY)

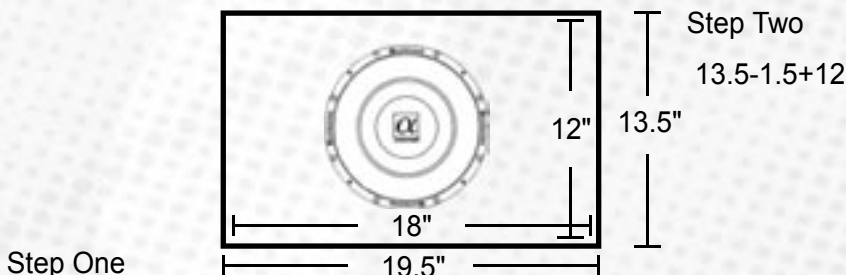

The wood that we are using is 0.75" thick

The 1.5 that you see in the formula is the thickness of the wood.

Step Three
Side View

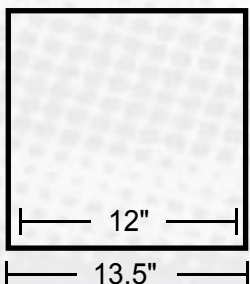

$$13.5 - 1.5 = 12$$

Calculating thickness of wood:

Measure how thick the wood is then multiply by two.

The reason that you are multiplying by two is each side of the enclosure.

Left + Right=1.5

Top + Bottom=1.5

Front + Back=1.5

$$.75 \times 2 = 1.50$$

$$18 \times 12 \times 12 = 2592$$

$$2592 / 1728 = 1.5$$


1.5 cu. ft. is the results for this enclosure

Building and calculating a wedged enclosure is a little more difficult than the previous type of enclosures. Calculating a wedged enclosure volume is a 7 step procedure.


- Step One: Measure the Height
- Step Two: Measure the Width
- Step Three: Measure the Top and Bottom of the enclosures depth
- Step Four: Add the depth together
- Step Five: Divide the depth by two
- Step Six: Height x Width x Results of step five
- Step Seven: Divide the results were in step six by 1728
(12 x 12 x 12=1728 which equals to 1.0 cu. ft.)

Complete formula should look like this

Top of Depth + Bottom of Depth = _____ / 2 = _____
 Height x Width x Depth / 1728 = _____

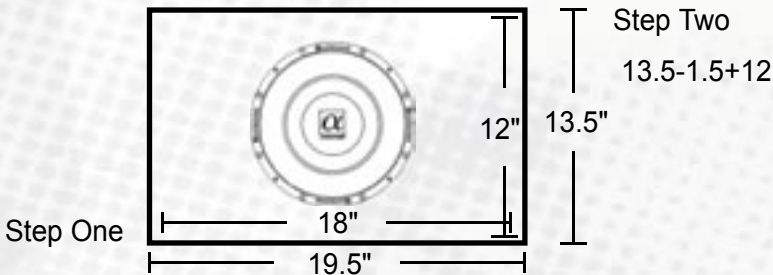

Step Three

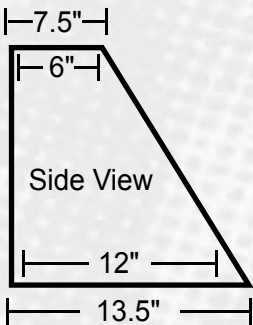

13.5 + 7.5 = 21
 21 / 2 = 10.5

The wood that we are using is 0.75" thick
 The 1.5 that you see in the formula is the thickness of the wood.

Calculating thickness of wood:
 Measure how thick the wood is then multiply by two. The reason that you are multiplying by two is each side of the enclosure.

Left + Right = 1.5
 Top + Bottom = 1.5
 Front + Back = 1.5

.75 x 2 = 1.50
 18 x 12 x 10.5 = 2268
 2268 / 1728 = 1.3


1.3 cu. ft. is the results for this enclosure

Calculating speaker enclosure volume is a five step procedure.
(Make sure you do not forget to subtract the thickness of the wood and port displacement that you used.)

- Step One: Measure Height
 - Step Two: Measure Width
 - Step Three: Measure Depth
 - Step Four: Height x Width x Depth
 - Step Five: Divide the results in step four by 1728
- (12" x 12" x 12"=1728 which equals to 1.0 cu ft.)


Complete formula should look like this
Height x Width x Depth / 1728 = _____

Below are illustrated versions of all the steps that you should take.
(FOR EXAMPLE ONLY)

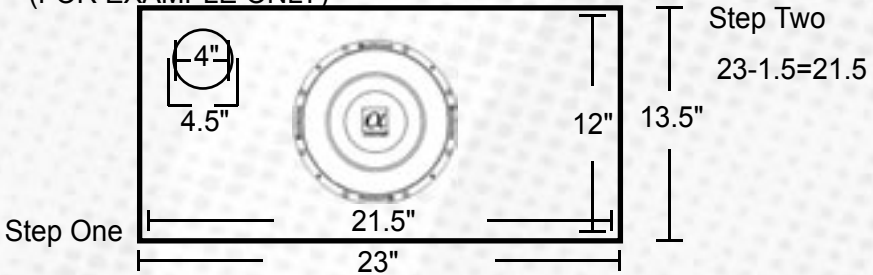

The wood that we are using is 0.75" thick
The 1.5 that you see in the formula is the thickness of the wood.

Step Three
Side View

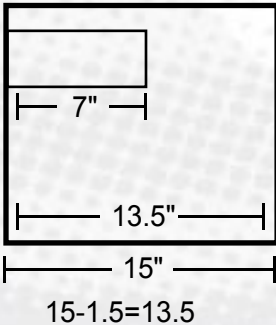

To calculate the thickness of the wood.

- Left + Right = 1.5
- Top + Bottom = 1.5
- Front + Back = 1.5
- .75 x 2 = 1.50
- 21.5 x 13.5 x 12 = 3483
- 3483 / 1728 = 2.01

2.01 cu. ft. is the result for this enclosure.

Formula to calculate port displacement

$$3.14 \times \text{Radius} \times \text{Radius} \times \text{Depth} = \text{_____} / 1728 = \text{port displacement}$$

$$3.14 \times 2.25 \times 2.25 \times 7 = 111.27 \text{ sq. in.}$$

111.27 / 1728 = .06 is the displacement of the port




2.01 - 0.06 = 1.95 cu.ft. is the final result for this enclosure.

Converting a round port to a slot port.

Calculate the area of the round port(s) being used, then use the square root function of your calculator to get the interior dimensions of an equivalent square port. The length (or depth) of the slot port will be the same as that of the round port.

To calculate area: (Area is a two dimensional measurement)

Circle = $3.14 \times \text{Radius} \times \text{Radius}$

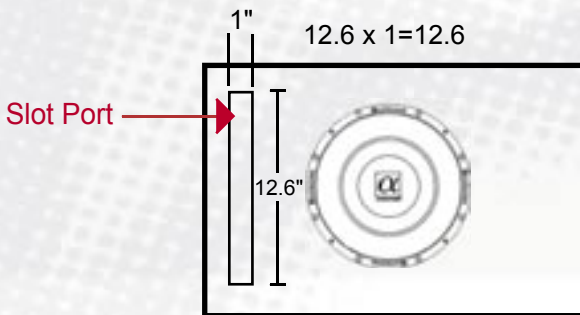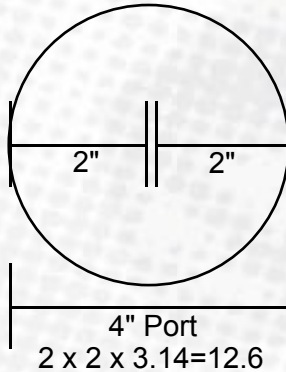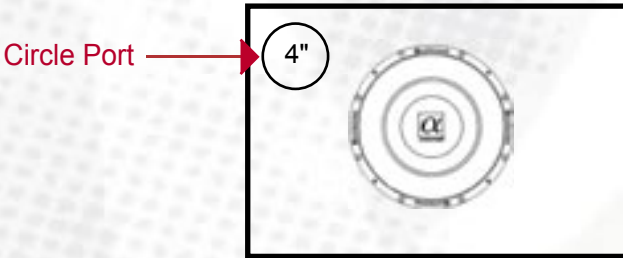

900 Series

Model #	PSW912	PSW915			
Fs	35.008	32			
Qts	0.374	0.557			
Qes	0.336	0.621			
Qms	1.485	5.44			
Vas (liters)	19.596	108			
Vas (Cu. Ft.)	0.567	3.81			
Re	2.2 x 2	2.1 x 2			
Rms	2200	2500			
Xmax +/- (mm)	14.5	15			
Le	2.042	1.98			
Sd	53	129 in ²			
SPL	93	98			
EBP	104	52			
Mmd	165.792	175			
Freq. Resp.	24Hz-700Hz	20Hz-700Hz			

Mounting Dimensions

Depth (mm)	222mm	247.65mm			
Depth (Inches)	8.75"	9 3/4"			
Through Hole (mm)	276mm	361.95mm			
Through Hole (Inches)	10 7/8"	14 1/4"			
Diameter (mm)	312mm	390.53mm			
Diameter (Inches)	12 5/16"	15 3/8"			
Displacement	.4 Cu. Ft.	0.6 Cu. Ft.			

Sealed Enclosures




Minimum Sealed Sensitivity/dB	0.75	1.75			
Maximum Sealed Sensitivity/dB	1.25	2.25			

Vented Enclosures

Minimum Vented Internal Volume	2.5	3.5			
Port Dia/Inches	4 x 2	6			
Port Length/Inches (-3dB)	10.75	10.75			
Tuning Freq.	41	37			
Port Displacement	45	40			
Maximum Vented Internal Volume	0.15	0.11			
Port Dia/Inches	4	5			
Port Length/Inches (-3dB)	3.81	4.5			
Tuning Freq.	4 x 2	6			
Port Displacement	11	8.75			
	33	35			
	35	35			
	0.15	0.09			




Rev.01.11.06

Parallel-Parallel

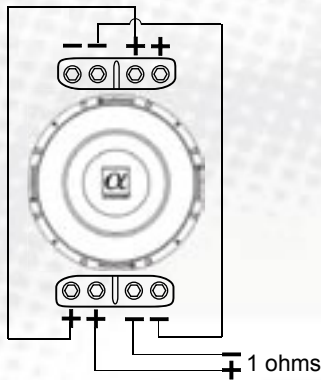
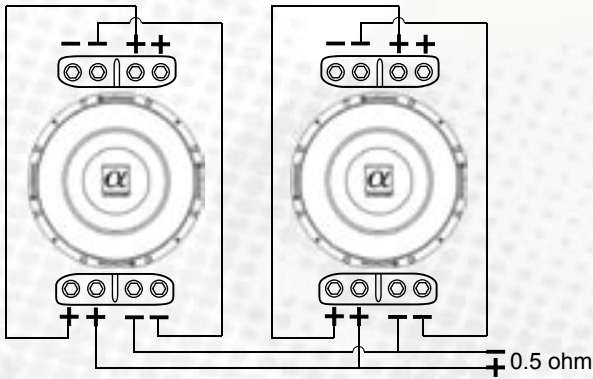
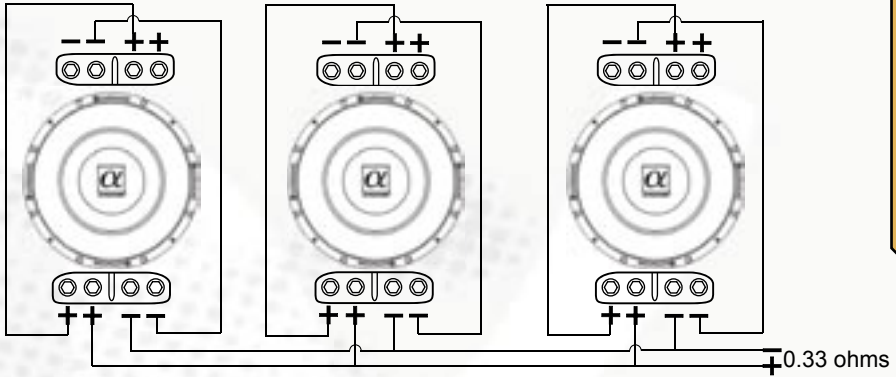


Patent No: US D478,556 S
 Patent No: US 6,601,645 B1
 Patent No: US 6,656,000 B2

Series-Parallel

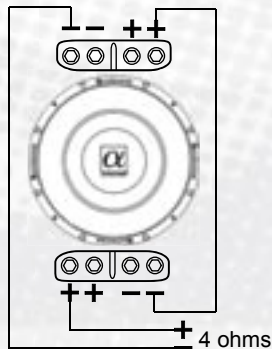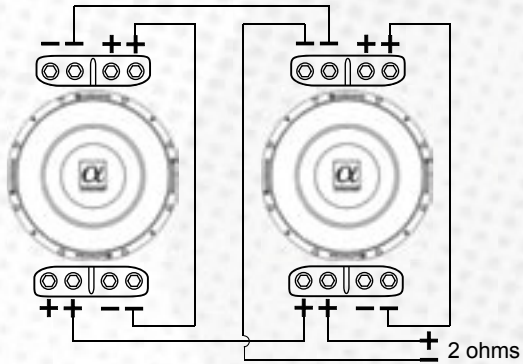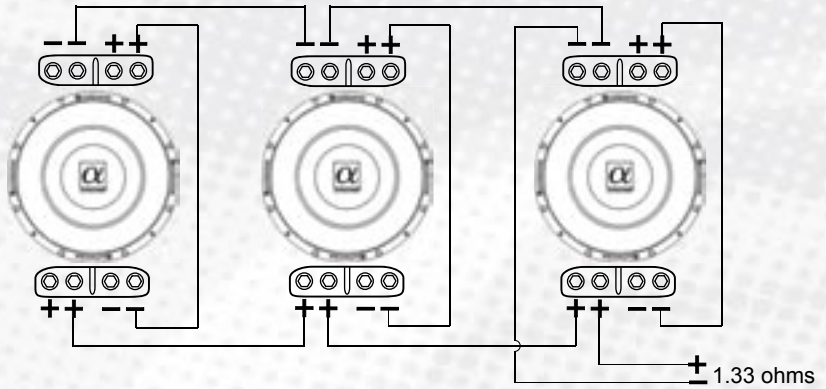

Series-Series

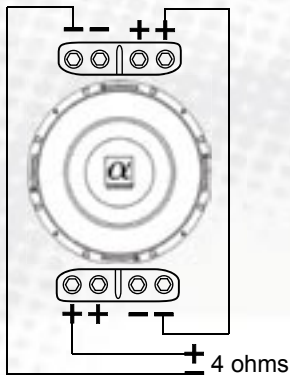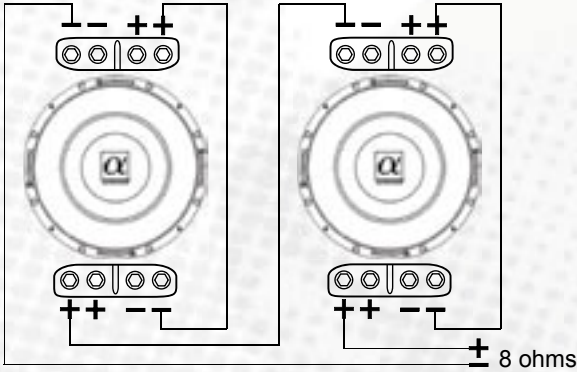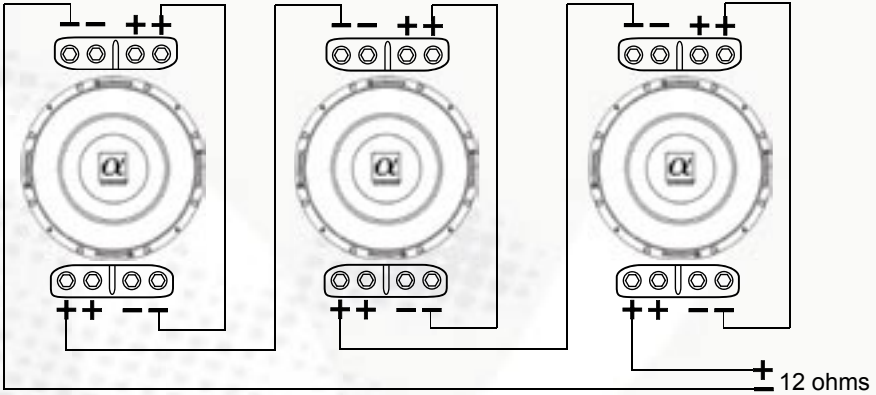

Patent No: US D478,556 S
Patent No: US 6,601,645 B1
Patent No: US 6,656,000 B2

SYMPTOM	CHECK POINT	CURE
No sound	Is the amplifier power LED illuminated?	<ol style="list-style-type: none"> 1. Check fuses in amplifier 2. Check turn-on lead 3. Check signal leads 4. Check gain control 5. Check source unit volume 6. Clean contacts on fuse holders
	Is the amplifier overload LED illuminated?	Check speaker for short or amplifier for overheating
	Check impedance with Ohm meter	If no reading, replace speaker
	Check that the speaker moves freely	If speaker won't move, replace speaker
<hr/>		
Speaker is making a rattling noise	Check that speaker is secured properly and tightened with screws	Tighten mounting screws
	Check enclosure construction	Check that the enclosure is debris free
	Check speaker polarity	Correct polarity
<hr/>		
No sound from one coil	Check speaker leads	<ol style="list-style-type: none"> 1. Inspect for short circuits 2. Check for open connections
		Reverse left and right speaker leads to determine if it is occurring before the speaker
<hr/>		
Speaker is distorting at high volume levels	Check speaker load impedance capabilities for the amplifier	Confirm that the speaker load impedance recommendations are followed. Check the wiring configuration of the speakers. (To verify proper load impedance, use an OHM meter to measure the total load for each channel of the amplifier.
	Verify that amplifier and/or crossover settings are correct	Select low-pass setting

Investigate the layout of your vehicle thoroughly before drilling or cutting. Take care when you work near the gas tank, gas lines, hydraulic lines, electrical components and electrical wiring. Do not use the equipment unmounted. Attach this system securely to prevent damage, particularly in the event of an accident or aggressive driving. Do not mount the system so that wire connections are unprotected or are subjected to pinching or damage from nearby objects. Before connecting or disconnecting power connections at the system power terminals, disconnect the +12V DC wire at the battery end. Confirm that your source unit and other equipment are turned off while connecting the input terminals. If you need to replace the power fuse, replace it only with a fuse identical to the provided fuse. Using a fuse of different type or rating may result in damage to the system, which is not covered by the manufacturer's warranty. Do not install any product where it may be subjected to excessive heat, moisture and dust or where it may be repeatedly kicked, brushed or bumped. Make absolutely sure that the terminals for the products are connected to the proper inputs and outputs from the music source. Never run the wiring on the outside of the vehicle or under it where it can be damaged by road hazards or any moving parts of the vehicle. Use existing wire channels, sills, panels and molding strips inside the vehicle to hide the wiring for safety and a neat appearance.

DISCLAIMER

IMPORTANT: Never cut any metal that is an integral part of the vehicle's safety or structural support system. If you are unsure, it is best to have the product professionally installed by an Authorized Alphasonik Dealer. Never sacrifice your safety for sound.



ALPHASONIK®

PROUD MEMBER OF



ALPHASONIK INC.

114 SOUTH BERRY STREET

BREA, CA 92821

TEL: (714)988-0370 FAX: (714)988-0371

www.alphasonik.com

Download from www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>