



User's Manual

8-Port VDSL Managed Switch

Model No.: SP3508A

<http://www.micronet.info>

Table of Contents

Chapter 1	Introduction	1
1.1	Package Contents	1
1.2	Key Features	1
Chapter 2	Installation	3
2.1	Hardware Installation	3
2.2	Pre-installation Requirements	3
2.3	Cabling Requirements	3
2.4	Connecting to Gigabit Ethernet	4
2.5	Connecting to RJ-11	5
Chapter 3	Physical Description	6
3.1	LED Definition	6
3.2	Switch Connectors	7
Chapter 4	IP Address Configuration	8
4.1	Out-Band Access	8
4.1.1	Console Port	8
4.2	Remote Access	11
4.2.1	Telnet	11
4.2.2	Web-Based UI	11
Chapter 5	Web-Based UI Management Interface	13
5.1	Home Page	13
5.2	Port Status	13
5.3	Port Statistics	14
5.4	IP Address	15
5.5	Switch Setting	15
5.5.1	TBasic	15
5.5.2	Advanced	16
5.6	Port Controls	19
5.7	Link Aggregation	20
5.7.1	Aggregator Setting	20

5.7.2	Aggregator Information.....	21
5.7.3	State Activity	21
5.8	Filter Database	22
5.8.1	IGMP Snooping.....	22
5.8.2	Static MAC Address	23
5.8.3	Port Security.....	24
5.8.4	MAC Filtering	24
5.9	VLAN Configuration	25
5.9.1	Basic	26
5.9.2	Port VID.....	27
5.10	Spanning Tree	28
5.11	Port Sniffer	30
5.12	SNMP	31
5.13	Signal to Noise Ratio	33
5.14	Security Manager	33
5.15	TFTP Update Firmware	34
5.16	Configuration Backup	35
5.16.1	TFTP Restore Configuration	35
5.16.2	TFTP Backup Configuration	35
5.17	Reset and Rebooting System	36
Chapter 6	Application.....	37
Chapter 7	Appendix.....	38
7.1	Appendix A: Specifications	38
7.2	Appendix B: Troubleshooting.....	40
7.3	Appendix C: System Diagnostics.....	41
7.3.1	Power and Cooling Problems.....	41
7.3.2	Installation	41
7.3.3	Transmission Mode	41
7.3.4	Cabling	42
7.3.5	Physical Configuration.....	42
7.3.6	System Integrity	42
7.4	Appendix D: VDSL Spectrum.....	43
7.5	Appendix E: Example of VLAN Setting	44
7.5.1	Port-Based VLAN Setting.....	44
7.5.2	Tag-Based (IEEE 802.1Q) VLAN Setting.....	45

Chapter 1 Introduction

Micronet SP3508A is an EoVDSL (Ethernet over VDSL) clustering switch that aggregates 8 VDSL lines into 2 Gigabit Ethernet uplinks. It delivers cost-effective and high-performance broadband / multimedia services to multiunit building environments, such as enterprise, campus, hospital, hotel, and telecom. With QAM-based 4-band VDSL technology, the VDSL solution dramatically extends Ethernet and supports 5M/15M/25Mbps symmetrical bandwidth over existing telephone-grade wiring up to 1.7 /1.1/0.6KM.

1.1 Package Contents

Prior to the installation of the device, please verify the following items are in the package:

- SP3508A VDSL Managed Switch
- Quick Installation Guide
- Manual CD
- Mounting Accessories
- AC Power Cord

1.2 Key Features

- Compliant with ETSI, ITU, ANSI standards
- Compliant with IEEE802.3 10BASE-T, IEEE802.3u 100BASE-TX and IEEE802.3ab 1000BASE-T standards.
- Support 8 x VDSL ports and 8 x POTS/ISDN Splitter ports
- QAM-based 4-band VDSL
- Data rate up to symmetrical bandwidth of 25Mbps
- Wiring range up to 1.7 KM
- Auto-speed function for VDSL link

- Supports SNMP v1 RFC-1493 Bridge MIBs
 - RFC-1643 Ethernet MIB
 - RFC-1213 MIB II
 - Enterprise MIBs
 - RMON groups 1(Statistics), 2(Alarm), 3(Event), 9(History)
- Supports TFTP/XMODEM for firmware upgrade
- Built-in POTS/ISDN splitter for POTS/ISDN telephone service

Chapter 2 Installation

2.1 Hardware Installation

This section describes how to install the switch and establish network connections. Users may install the user on any level surface. However, please take note of the following minimum site requirements.

2.2 Pre-installation Requirements

Prior to the start of actual hardware installation, make sure users can provide the right operating environment, including power requirements, sufficient physical space, and proximity to other network devices that are to be connected.

Verify the following installation requirements:

- Power requirements: AC 85V~265 V at 50~60 Hz.
- The Modem should be located in a cool dry place with at least 10cm of space at the front and back for ventilation.
- Place the switch out of direct sunlight, and away from heat sources or areas with a high amount of electromagnetic interference.

2.3 Cabling Requirements

Before making any connections to the Modem, note the following rules:

Connection Type	Cable Requirements	Maximum Length
Ethernet Port (RJ-45)	<ul style="list-style-type: none">• 100 Mbps: Cat 5 UTP• 10 Mbps: Cat 3-4 UTP	100 meters max for MUX or HUB to endpoint.

VDSL Port (RJ-11)	<ul style="list-style-type: none"> • 24-26 Gauge phone wiring • Do not recommend 28 or above Gauge 	<ul style="list-style-type: none"> • 5M/5M: 1.7 km • 15M/15M: 1.1km • 25M/25M: 600m
--------------------------	--	--


2.4 Connecting to Gigabit Ethernet

- The IP DSLAM has 2 X 10/100/1000 Mbps Giga Ethernet ports.
- Support full or half-duplex operation and transmission mode is using auto-negotiation.
- All network devices connected to the switch must support auto-negotiation. Devices without auto-negotiation will operate at half-duplex.
- Upgrade devices to support auto-negotiation and auto-crossover (MDI/MDIX) for full-duplex operation.
- Port 9-10 can connect to any device that uses a standard network interface such as a Cable modem, ADSL modem, Ethernet Switch, workstation and network interconnection device such as a bridge or router.
- Prepare straight through shielded or unshielded twisted-pair cables with RJ-45 plugs on both ends. Use 100Ω Category 5 cable for connections.
- Connect one end of the cable to port 9 or 10 of the IP DSLAM, and the other end to a standard RJ-45 station port on cable modem, ADSL router, wireless bridge, etc.
- When inserting an RJ-45 plug, be sure the tab on the plug clicks into position to ensure that it is properly seated.
- Do not plug a RJ-11 phone jack connector into the Ethernet port (RJ-45 port). This may damage the VDSL. Instead, use only twisted-pair cables with RJ-45 connectors that are compliant with the FCC standards.

2.5 Connecting to RJ-11

- Please ensure suitable VDSL Modem (SP3501AS) is installed before making a connection to any of the IP DSLAM (1-8) station ports. Users need to prepare 18 ~ 26 gauge one twist pair phone Line wiring with RJ-11 plugs at both ends.
- The Modem's RJ-11 ports are easy-to-use and do not require installation of additional wiring. Every RJ-11 modular phone jack in the home can become a port on the LAN.
- Networking devices can be installed on a single telephone wire that can span up to maximum of 1.7km between the two points.
- SP3508A has embedded Splitter between every VDSL side (VDSL Line) and POTS side (POTS port). It permits user to deliver broadband service on the same lines as Plain Old Telephone Service (POTS), PBX, ISDN traffic and VDSL Signal.
- When inserting a RJ-11 plug, be sure the tab on the plug clicks into position to ensure that it is properly seated.

Chapter 3 Physical Description

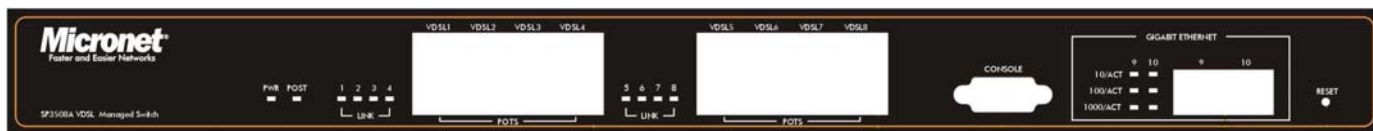

SP3508A front view



SP3508A rear view

3.1 LED Definition

LED	Status	Operation
PWR (Power LED)	Steady/Green	Device is powering on or reset ok.
POST (Power On Self Testing)	Steady/Green	Lights on when device is booting.
	Off	Turns off when booting is finished.
10/ACT (Ethernet LED)	Steady/Green	Lights up steadily to show good linkage.
	Flash/Green	Flashing to show data transmission.
100/ACT (Ethernet LED)	Steady/Green	Lights up steadily to show good linkage.
	Flash/Green	Flashing to show data transmission.
1000/ACT (Ethernet LED)	Steady/Green	Lights up steadily to show good linkage.
	Flash/Green	Flashing to show data transmission.

LINK (VDSL LED)	Steady/Green	Each VDSL port has a LED and lights up to show good linkage.
---------------------------	--------------	--

3.2 Switch Connectors

Connectors	Description	Type
VDSL	Connecting to the VDSL Modem via a RJ-11 cable	RJ-11
POTS	Connecting to the telephone, Fax or ISDN modem	RJ-11
Gigabit Ethernet	Connecting to an Ethernet network device.	RJ-45
Console	Console port for managing the switch.	RS-232
AC	AC Socket accepts AC power 85 to 265 voltage	

Chapter 4 IP Address Configuration


4.1 Out-Band Access

4.1.1 Console Port

Users can configure the product with the local serial console port. The procedure is to connect a notebook computer to the RS-232 port, then boot windows @95/98/ME/2000 system, and run “Hyper-terminal” program into terminal window. Steps are as follows:

Step 1. Set the parameters of connection according to below details.

- Bit Per Second: 9600
- Data Bits: 8
- Parity: None
- Stop Bits: 1
- Flow Control: None

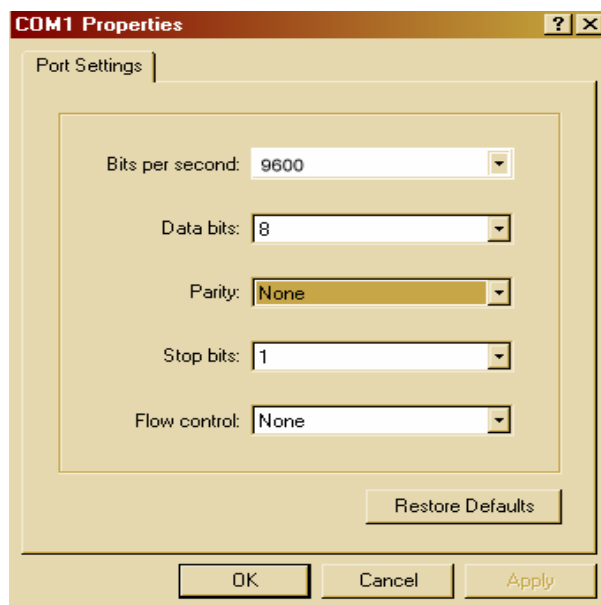

Step 2. Connects PC with the IP DSLAM, the login window will appear on the screen. Enter the default login details:

- Login: admin
- Password: 123

```

Main Menu
=====

Status and Counters
VDSL Switch Static Configuration
Protocol Related Configuration
Temperature & Fan Monitor
Reboot Switch
Command Line
Logout

Show the status of the switch.
Tab=Next Item BackSpace=Previous Item Enter=Select Item

```

The program will enter the following text-based user interface.

Step 3. Choose 'VDSL Switch Static Configuration' to enter the page below.

```


VDSL Switch : Switch Configuration
=====

Administration Configuration
Port/Trunk Configuration
Port Mirroring Configuration
VLAN Configuration
Priority Configuration
MAC Address Configuration
Misc Configuration
Main Menu


Configure the sysytm,IE,and password.
Tab=Next Item BackSpace=Previous Item Enter=Select Item

```

Step 4. Choose 'Administration Configuration' to proceed to the page below.

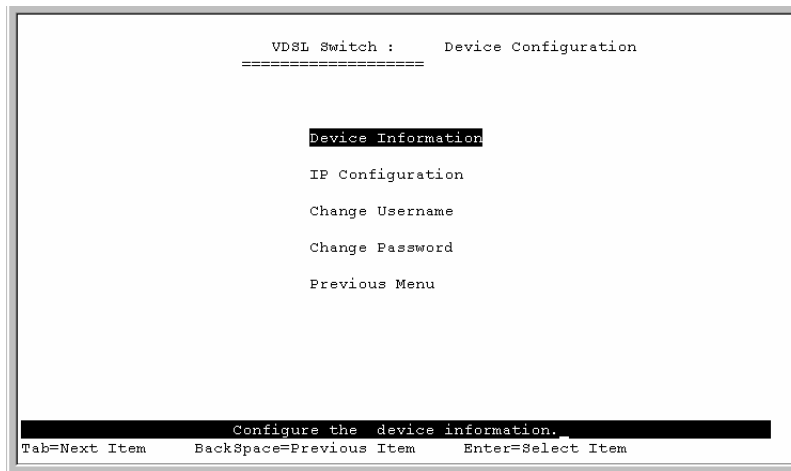

Step 5. Choose 'IP Configuration' to proceed to IP configuration page.

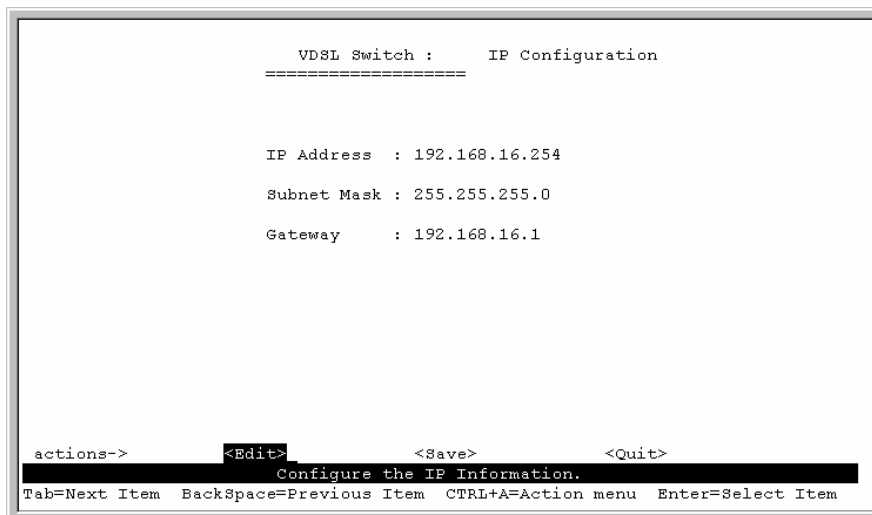

Parameter	Description
Edit	Select <Edit> to change IP address, subnet mask and gateway.
CTRL+A	Action menu.
Save	Save changes and return back to 'Device Configuration' page.
Previous Menu	Quit the current page.
Main Menu	Return to the initial 'Main Menu' page.

4.2 Remote Access

Users must setup the IP address with the local serial console port (RS-232 Port), and then use this IP address to control this VDSL switch via Telnet or Web-Based UI. Otherwise, users can change the computer's IP domain to be the same as VDSL switch. Then use the default IP address to control this VDSL switch.

4.2.1 Telnet

To enter Telnet, type the IP address of the switch to connect to management system. Type the default username and password.

- Default Username: admin
- Default Password: 123
- For security purpose, users cannot login the console port and telnet at the same time. It is necessary to log out of console port before accessing the management UI via Telnet.
- Web-Based UI does not limit the number of users logged in.

4.2.2 Web-Based UI

The VDSL switch provides a web-based UI to manage and monitor the switch. For changing IP address, users can use console port to modify it. Otherwise, users can change the IP range and subnet of PC to match the default values of the switch. The default values as follows:

- Default IP Address: 192.168.16.250
- Default Subnet Mask: 255.255.255.0
- Default Gateway: 192.168.16.1
- Default Username: admin
- Default Password: 123




Enter the default IP address of the switch into the web browser for the login confirmation window to appear.

Chapter 5 Web-Based UI Management Interface

5.1 Home Page

This is the VDSL switch's home page. The switch's image on the top indicates which port is being connected. Pressing the ports on the image will open up a window to show port statistics.

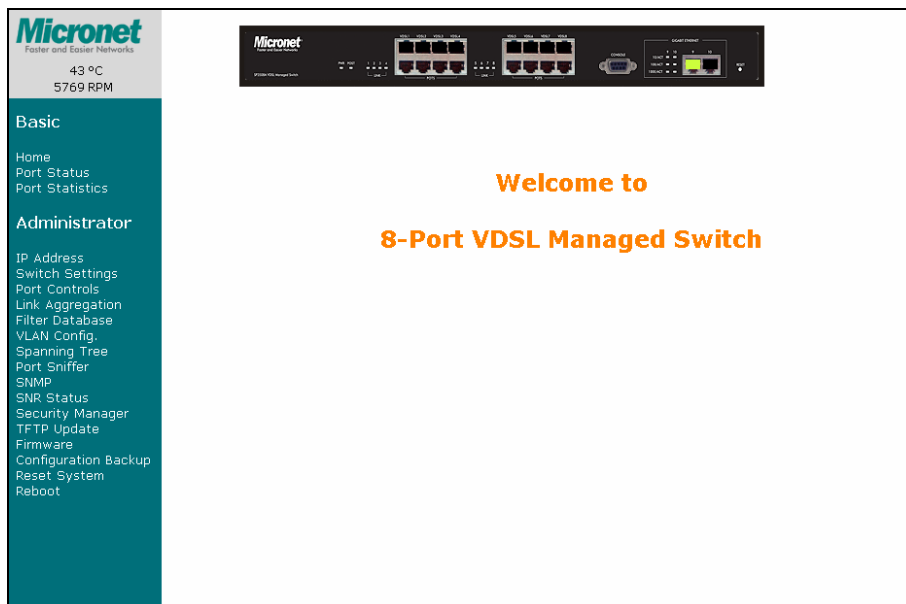

5.2 Port Status

This interface allows user to view port status.

Port Status

The following information provides a view of the current status of the unit.

Port Num	State		Link Status	Auto Negotiation		Speed Status		Duplex Status		Flow Control	
	Config	Atual		Config	Atual	Config	Atual	Config	Atual	Config	Atual
1	On	Off	Down	Auto	Auto	Auto	15M	Full	Full	On	On
2	On	Off	Down	Auto	Auto	Auto	15M	Full	Full	On	On
3	On	Off	Down	Auto	Auto	Auto	15M	Full	Full	On	On
4	On	Off	Down	Auto	Auto	Auto	15M	Full	Full	On	On
5	On	On	Up	Auto	Auto	Auto	15M	Full	Full	On	On
6	On	On	Up	Auto	Auto	Auto	15M	Full	Full	On	On
7	On	Off	Down	Auto	Auto	Auto	15M	Full	Full	On	On
8	On	Off	Down	Auto	Auto	Auto	15M	Full	Full	On	On
T	On	Off	Down	Auto	Auto	Auto	100	Full	Full	On	On
E	On	On	Up	Auto	Auto	Auto	100	Full	Full	On	On

Parameter	Description
State	Display port status with either disable or enable.
Link Status	'Down' is no link and 'Up' is link.
Auto Negotiation	VDSL Switch' auto-negotiation mode.
Speed status	Port 9-10 are 10/100/1000Mbps and port 1- 8 are 5/15/25Mbps.
Duplex status	Display full-duplex or half-duplex mode.
Flow control:	Display flow control status with either enabled or disabled mode.
Configure	Display the state of user setup.
Actual	Display the negotiation result.

5.3 Port Statistics

The following information provides a view of the current status of transmission for each individual port.


Port Statistics

The following information provides a view of the current status of the unit.

Port	State	Link	TxGoodPkt	TxBadPkt	RxGoodPkt	RxBadPkt	TxAbort	Collision	DropPkt
1	On	Up	3299	0	0	0	0	0	0
2	On	Up	3297	0	0	0	0	0	0
3	On	Up	3297	0	0	0	0	0	0
4	On	Up	3295	0	0	0	0	0	0
5	On	Up	3295	0	0	0	0	0	0
6	On	Up	3296	0	0	0	0	0	0
7	On	Up	3295	0	0	0	0	0	0
8	On	Up	3295	0	0	0	0	0	0
T	On	Up	3296	0	0	0	0	0	0
E	On	Up	226866	0	213746	0	0	0	3695

5.4 IP Address

User can configure the IP Settings in the interface below. This interface is accessible on the menu to the left of the browser.

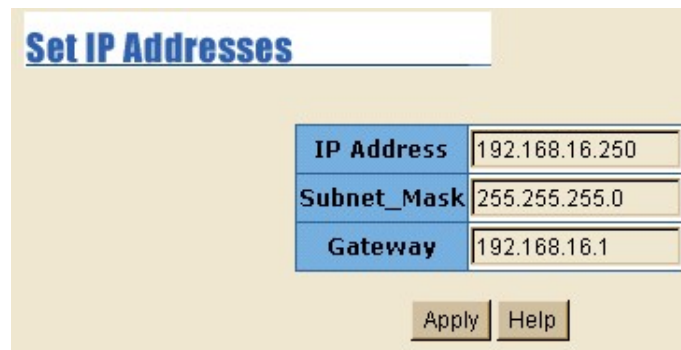

Set IP Addresses

IP Address	192.168.16.250
Subnet_Mask	255.255.255.0
Gateway	192.168.16.1

Apply Help

Parameter	Description
IP Address	Default: 192.168.16.250
Subnet Mask	Default: 255.255.255.0
Gateway	Default: 192.168.16.1

5.5 Switch Setting

5.5.1 Basic

This interface displays the basic information of the VDSL Switch such as firmware version, hardware version and MAC address.

Switch Settings

Basic		Advanced	
Description	8+2G Port VDSL SWITCH		
MAC Address	00113b1055c6		
Firmware version	B.4m		
Hardware version	B.1		
Default config value version	v26.00		

Parameter	Description
Description	Displays the name of the device.
MAC Address	The unique hardware address assigned by manufacturer.
Firmware Version	Displays the switch's firmware version.
Hardware Version	Displays the switch's hardware version.
Default config value version	Displays write to default EEPROM value tale version.

5.5.2 Advanced

The interface allow advance configuration of the VDSL Switch.

Parameter	Description
MAC Address Age-out Time	Type the number of seconds that an inactive MAC address remains in the switch's address table. <i>Range: 300~765 seconds.</i> <i>Default: 300 seconds.</i>
Max bridge transit delay bound control	Limit the packets queuing time in the switch. If enable, the packet queued that exceed the limit will be drop. <i>Range: 1sec, 2 sec, 4 sec and off.</i> <i>Default: 2 seconds.</i>

Broadcast Storm Filter	<p>To configure broadcast storm control, enable it and set the upper threshold for individual ports. The threshold is the percentage of the port's total bandwidth used by broadcast traffic. When broadcast traffic for a port rises above the threshold set, broadcast storm control becomes active.</p> <p><i>Range: 5%, 10%, 15%, 20%, 25% and off.</i></p>
-------------------------------	---

Priority Queue Service Settings

Parameter	Description
First Come First Service	The sequence of packets sent is depend on arrive order.
All High before Low	The high priority packets sent before low priority packets.
Weighted Round Robin	Select the preference given to packets in the switch's high-priority queue. These options represent the number of high priority packets sent before one low priority packet is sent. For example, 5 High: 2 Low means that the switch sends 5 high priority packets before sending 2 low priority packets.
Enable Delay Bound	<p>Limit the low priority packets queuing time in the switch. If the low priority packets exceed Max Delay Time, it will be sent. 'Max bridge transit delay bound control' must be enabled before this function will operate.</p> <p>Range: 1~255 ms.</p> <p>Default Max Delay Time: 255ms.</p>
QoS Policy: High Priority Levels	0~7 priority level can map to high or low queue.

Protocol Enable Setting

Protocol Enable Setting

Enable STP Protocol

Enable IGMP Protocol

VLAN Operation Mode: No VLAN

Assign management IP address to specific VLAN

Auto Speed SNR margin: 32 Minimum 24

Parameter	Description
Enable Spanning Tree Protocol	<p>Allow STP to be enabled.</p> <p><i>Recommended setting is 'enable'.</i></p>
Enable Internet Group Multicast Protocol	<p>Allow IGMP to be enabled.</p>
VLAN Protocol	<p>Allow selection of VLAN types. GVRP allows automatic VLAN configuration between the VDSL Switch and nodes. If the switch is connected to a device with GVRP enabled, users can send a GVRP request using the VID of a VLAN defined on the switch, the switch will automatically add that device to the existing VLAN.</p>
Assign management IP address to specific VLAN	<p>Can limit management system only for specific VLAN, This function must enable 802.1Q.</p>
Auto Speed SNR margin value setup	<p>VDSL Speed auto adaptive function is based on SNR value and users can specify target SNR margins. Priority of Minimum setup is higher than Maximum setup.</p> <p><i>Maximum: When SNR value bigger than maximum value, VDSL speed will increase.</i></p> <p><i>Minimum: When SNR value smaller than minimum value, VDSL speed will decrease.</i></p>

5.6 Port Controls

This section shows user how to change every port status and speed mode. The procedure that the VDSL Switch determines speed is as follows:

1. Confirm the phone cable have been connected with SP3508A and SP3501AS.
2. Power on both devices.
3. The device will start auto-speed function after SP3501AS re-boot.
4. SP3508A will try 25M mode to link with SP3501AS, if fail, auto speed down to 15M mode and re-link with SP3501AS. If fails again, auto-speed down to 5M and keep this mode then re-link with SP3501AS.
5. Please note any change of phone cable, SP3508A must powered off and on, due to auto-speed function only work on re-starting.
6. Await 5 ~ 120 seconds until VDSL port link up depend on length of phone cable.

Port	State	Auto Negotiation	Speed	Duplex	Flow Control
1	Enable	Enable	10	Full	Enable
2					
3					

Apply

Parameter	Description
State	Users can disable or enable VDSL port activity.
Auto Negotiation	Users can disable and enable auto negotiation for the VDSL ports.
Speed	Users can change the speed of each VDSL port.
Duplex	User can set full-duplex or half-duplex mode of Ethernet port. VDSL ports are fixed at full-duplex.
Flow Control	Full: User can set flow control function is enable or disable in full mode. Half: User can set backpressure is enable or disable in half mode.

5.7 Link Aggregation

The Link Aggregation Control Protocol (LACP) provides a standardized means for exchanging information between Partner Systems on a link to allow their Link Aggregation Control instances to reach agreement on the identity of the Link Aggregation Group. It moves the link to that Link Aggregation Group, and enables its transmission and reception functions in an orderly manner. In conclusion, Link aggregation lets user group up to eight consecutive ports into a single dedicated connection. This feature can expand bandwidth to a device on the network. LACP operation requires full-duplex mode. For more detail information refer to IEEE 802.3ad.

5.7.1 Aggregator Setting

The screenshot shows the 'Trunking' configuration page with the 'Aggregator Setting' tab selected. The 'System Priority' is set to 1. The 'Group ID' is set to 'Group1'. The 'Lacp' is set to 'Disable'. The 'Work Ports' are set to 0. There are buttons for '<< Add <<', 'Remove >>', and '<< Get'. A list of ports (port1 to port8) is visible on the right side of the configuration area. At the bottom, there are buttons for 'Apply', 'Delete', and 'Help'.


Parameter	Description
System Priority	A value used to identify the active LACP. The VDSL Switch with the lowest value has the highest priority and is selected as the active LACP.
Group ID	Users can create a link aggregation across two or more ports. Choose the "group id" and click <Get>> to use the function.

LACP	If enable, the group is LACP static trunking group. If disable, the group is local static trunking group. All ports support LACP dynamic trunking group. If connecting to the device that also supports LACP, the LACP dynamic trunking group will be created automatically. If LACP enable, users can configure LACP Active/Passive status in each ports
Work Ports	The max number of ports can be aggregated at the same time. If it belongs to LACP static trunking group, the exceed ports is put to standby and able to aggregate if work ports fail. If is belongs to local static trunking group, the number must be the same as group ports.

Click **<Apply>** to activate the setting.


5.7.2 Aggregator Information

When users are setting LACP aggregator, related information will be displayed in this interface. This page is Actor and Partner trunking one group with port 1 to port 1.

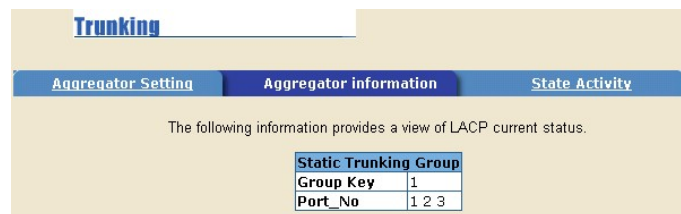

5.7.3 State Activity

A link having either two active LACP ports or one active port can perform dynamic LACP trunking. A link has two passive LACP ports will not perform dynamic LACP trunking because both ports are waiting for LACP protocol packet from the opposite device. If users are active LACP's actor, when selecting trunking port, the active status will be created automatically.

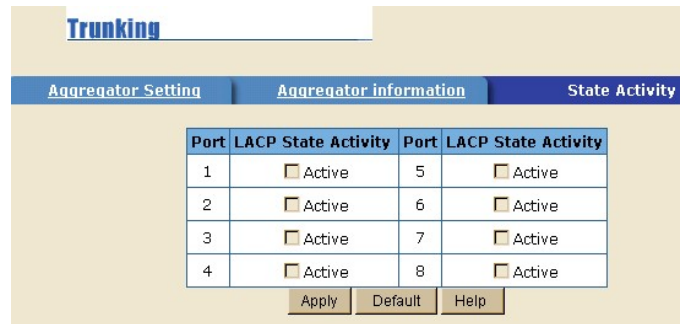

Parameter	Description
Active	The port automatically sends LACP protocol packets.
Passive	The port does not automatically sends LACP protocol packets, and responds only if it receives LACP protocol packets from the opposite device.

5.8 Filter Database


The Internet Group Management Protocol (IGMP) is an internal protocol of the Internet Protocol (IP) suite. IP manages multicast traffic by using VDSL Switch, routers, and hosts that support IGMP. Enabling IGMP allows the ports to detect IGMP queries and report packets and manage IP multicast traffic through the switch. The SP3508A supports IP multicast, users can enable IGMP protocol on the following interface. The IGMP snooping information will also be displayed on interface. User can view different multicast group, VID and member port in the following interface. IP multicast addresses range from 224.0.0.0 through 239.255.255.255.

5.8.1 IGMP Snooping

IGMP have three fundamental types of message as follows:

1. Query: A message sent from the queries (IGMP router or SP3508A) asking for a response from each host belonging to the multicast group.


2. Report: A message sent by a host to the queries to indicate that the host wants to be or is a member of a given group indicated in the report message.
3. Leave Group: A message sent by a host to the queries to indicate that the host has quit the membership of a specific multicast group.

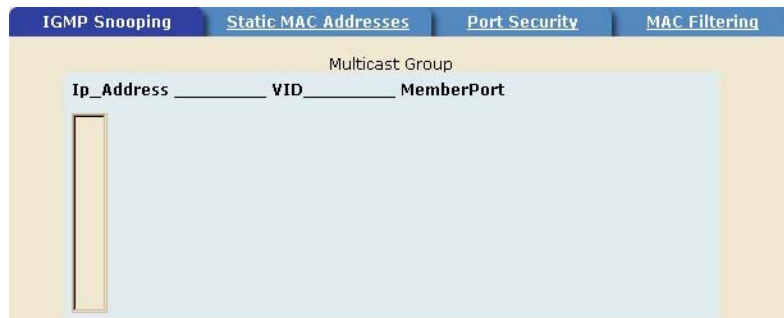

5.8.2 Static MAC Address


When users add a static MAC address, it remains in the SP3508A's address table, regardless of whether the device is physically connected to the switch. This saves the SP3508A from having to re-learn a device's MAC address when disconnected or powered-off. Following is the procedure for adding a static MAC address.

1. From the main menu, click administrator, then click Filter Database.
2. Click Static MAC Addresses.
3. In the MAC address box, enter the MAC address to and from which the port should permanently forward traffic, regardless of the device's network activity.
4. In the Port Number box, select a port number.
5. If tag-based (IEEE 802.1Q) VLANs are set up on the SP3508A, static addresses are associated with individual VLANs. Type the VID (tag-based VLANs) to associate with the MAC address.
6. Click **<Add>**.

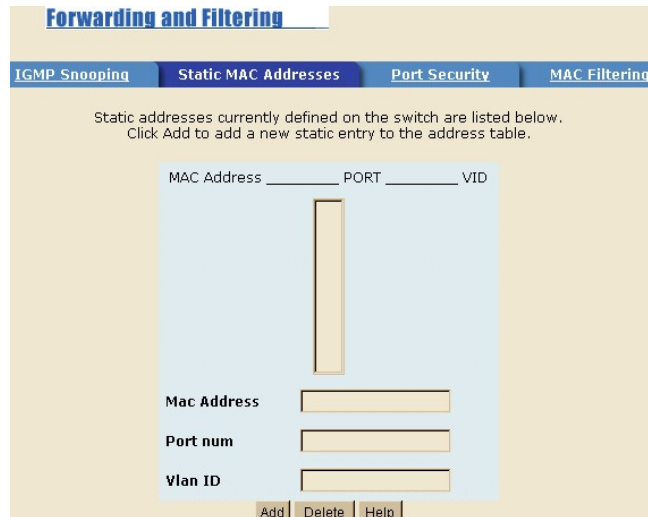


5.8.3 Port Security

A port in security mode will be “locked” without permission of address learning. Only the incoming packets with SMAC already existing in the address table can be forwarded normally. User can disable the port from learning any new MAC addresses, then use the static MAC addresses screen to define a list of MAC addresses that can use the secure port. Enter the settings, and then click **<Submit>** to apply the changes on this page.

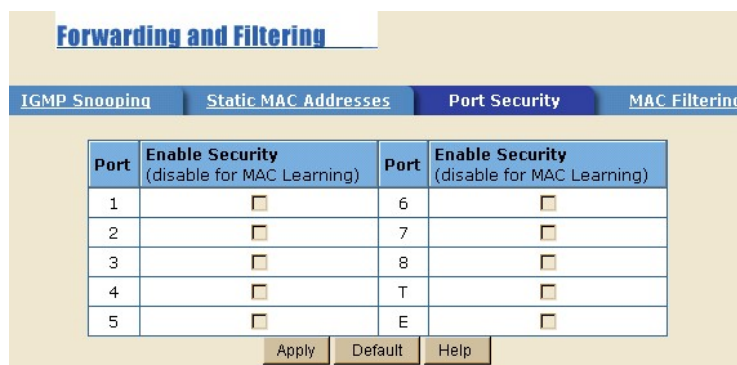

5.8.4 MAC Filtering

MAC address filtering allows the SP3508A to drop unwanted traffic. Traffic is filtered based on the destination addresses. For example, if the network is congested because of high utilization from one MAC address, users can filter all traffic transmitted from that MAC address.

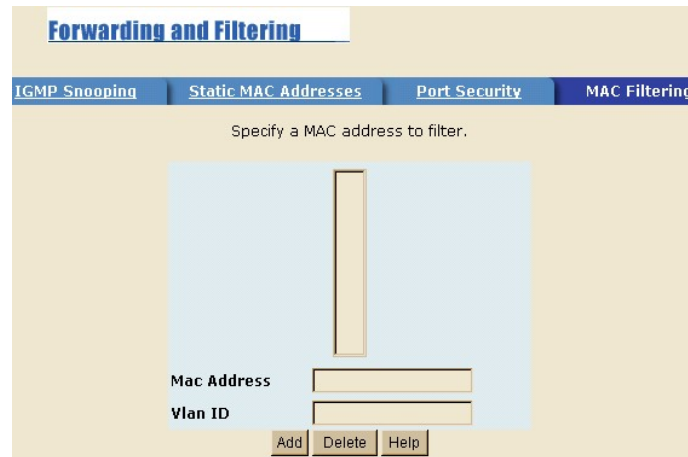

5.9 VLAN Configuration


A Virtual LAN (VLAN) is a logical network grouping that limits the broadcast domain. It allows user to isolate network traffic so only members of the VLAN receive traffic from the same VLAN members. Basically, creating a VLAN from a SP3508A is logically equivalent of reconnecting a group of network devices to another Layer 2 switch. However, all the network devices are still plug into the same SP3508A physically. The VDSL Switch supports port-based and protocol-base VLAN in web management page. In the default configuration, VLAN support is enabling and all ports on the SP3508A belong to default VLAN (VID: 1).

Support Multiple VLAN (IEEE 802.1Q VLAN)

Port-based Tagging rule VLAN is an IEEE 802.1Q specification standard. Therefore, it is possible to create a VLAN across devices from different SP3508A venders. IEEE 802.1Q VLAN uses a technique to insert a “tag” into the Ethernet frames. Tag contains a VLAN Identifier (VID) that indicates the VLAN numbers.

Support Protocol-based VLAN


In order for an end station to send packets to different VLAN, it has to be either capable of tagging packets with VLAN tags or attached to a VLAN-aware bridge that is capable of classifying and tagging the packet with different VLAN ID based on not only default PVID but also other information about the packet, such as the protocol. VDSL Switch will support protocol-based VLAN classification by means of both built-in knowledge of layer 2 packet formats used by selected popular protocols, such as Novell IPX and AppleTalk's EtherTalk, and some degree of programmable protocol matching capability.

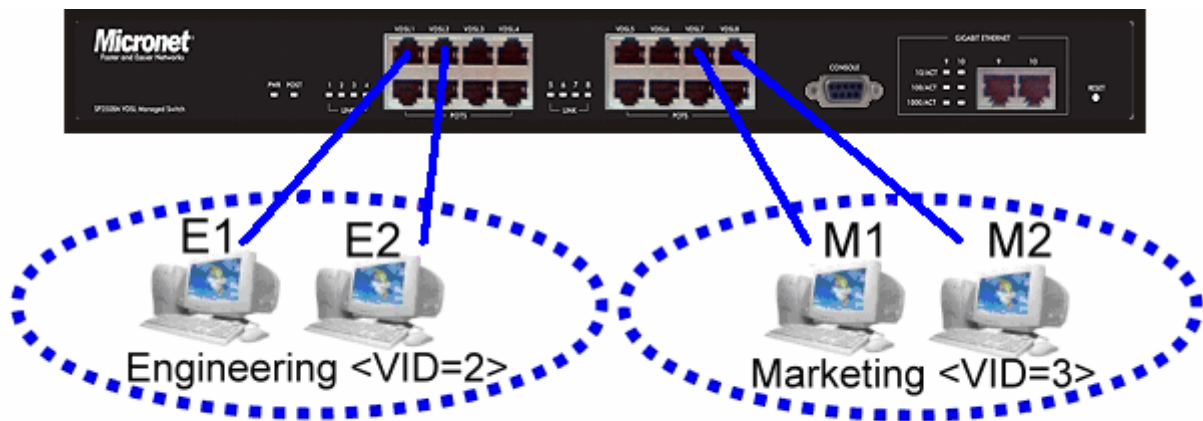

5.9.1 Basic


This interface allows users to assign VLAN membership to each port. The procedure for setting VLAN member is as follow.

1. From the main menu, under 'Administrator', click on **<VLAN config>**.
2. Click **<Add>**.
3. Type a VID (Valid Range: 2-4094). The default is 1.
4. From the Available ports box, select ports to add to the VLAN and click **<Add>**.
5. Click **<Apply>**.

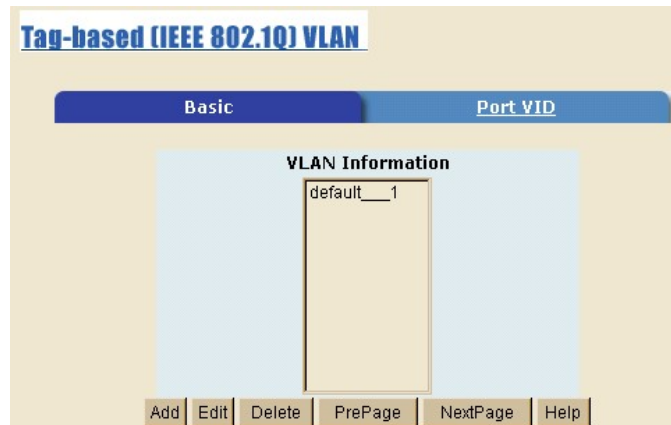

5.9.2 Port VID

The interface sets the Port VLAN ID that will be assigned to untagged traffic on a given port. For example, if port 10's Default PVID is 100, all untagged packets on port 10 will belong to VLAN 100. The default setting for all ports is VID 1. This feature is useful for accommodating devices that you want to participate in the VLAN but that don't support tagging. Only one untagged VLAN is allowed per port.

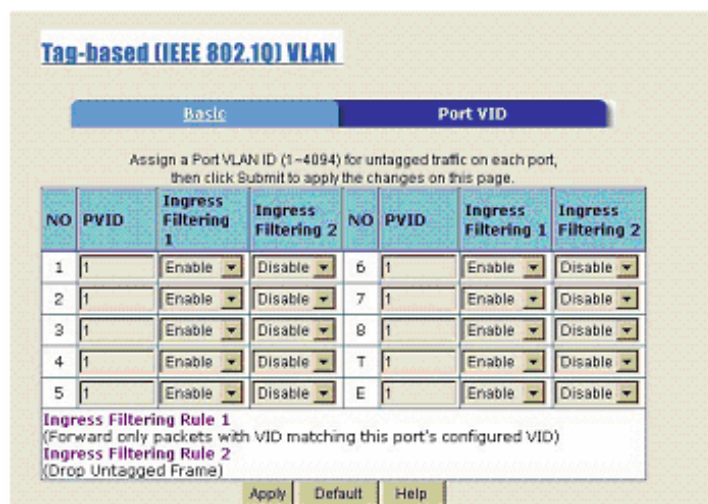


Parameter	Description
Ingress Filtering	Ingress filtering lets frames belonging to a specific VLAN to be forwarded if the port belongs to that VLAN.
Ingress Filtering Rule 1	Forward only packets with VID matching this port's configured VID.
Ingress Filtering Rule 2	Drop Untagged Frame.

5.10 Spanning Tree

The Spanning-Tree Protocol (STP) is a standardized method (IEEE 802.1D) for avoiding loops in SP3508A networks. When STP enabled, ensure that only one path at a time is active between any two nodes on the network. It is recommended that users enable STP on all SP3508A to ensure a single active path on the network.


1. User can view spanning tree information about the Root Bridge in the following screen.

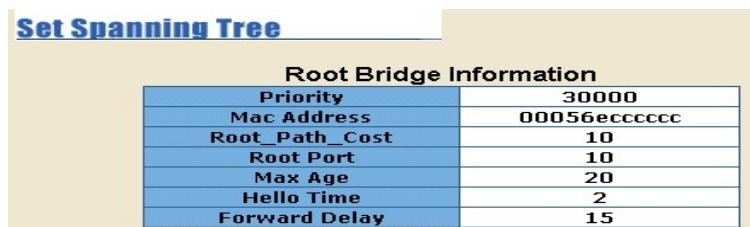

The screenshot shows a configuration window titled "Set Spanning Tree". Inside, there is a section titled "Root Bridge Information" which contains a table with the following data:

Root Bridge Information	
Priority	30000
Mac Address	00056ecccccc
Root_Path_Cost	10
Root Port	10
Max Age	20
Hello Time	2
Forward Delay	15

2. Users can view the spanning tree status of the SP3508A in the following screen.

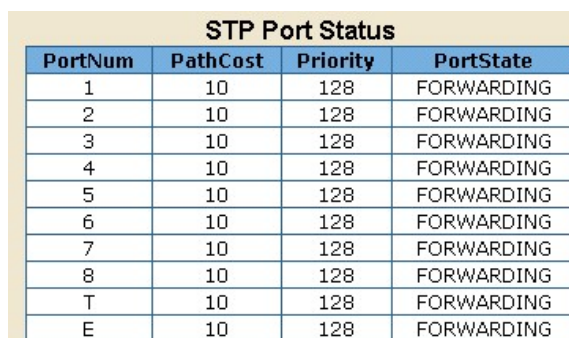

The screenshot shows a table titled "STP Port Status" with the following data:

PortNum	PathCost	Priority	PortState
1	10	128	FORWARDING
2	10	128	FORWARDING
3	10	128	FORWARDING
4	10	128	FORWARDING
5	10	128	FORWARDING
6	10	128	FORWARDING
7	10	128	FORWARDING
8	10	128	FORWARDING
T	10	128	FORWARDING
E	10	128	FORWARDING

3. Users can set new value for STP parameter, then click <Apply> button to modify.

Configure Spanning Tree Parameters	
Priority (1-65535)	32768
Max Age (6-40)	15
Hello Time (1-10)	3
Forward_Delay_Time(4-30)	5
Apply	

Parameter	Description
Priority	Users can change priority value to identify the root bridge. The bridge with the lowest value has the highest priority and is selected as the root. <i>Range: 1~65535.</i>
Max Age	Users can change Max Age value, the number of seconds a bridge waits without receiving. Spanning-Tree Protocol configuration messages before attempting a reconfiguration. <i>Range: 6~40.</i>
Hello Time	Users can change Hello Time value, the number of seconds between transmissions of Spanning-Tree Protocol configuration messages. <i>Range: 1~10.</i>
Forward Delay Time	Users can change forward delay time, The number of seconds a port waits before changing from its Spanning-Tree Protocol learning and listening states to the forwarding state. <i>Range: 4 ~30.</i>

- The following parameter can be configured on each port and click **<Apply>** button to modify.


Configure Spanning Tree Port Parameters

Port Number	Priority (0 - 255; Default 128)	Path Cost (1 - 65535; Default 10)
<input type="button" value="1"/> ▲ <input type="button" value="2"/> <input type="button" value="3"/> <input type="button" value="4"/> <input type="button" value="5"/> ▼	<input type="text" value="128"/>	<input type="text" value="10"/>
<input type="button" value="Apply"/> <input type="button" value="Help"/>		

Parameter	Description
Port Priority	<p>Users can make it more or less likely to become the root port. The lowest number has the highest priority. If users change the value, it is necessary to reboot the SP3508A.</p> <p><i>Range: 0~255.</i></p> <p><i>Default: 128.</i></p>
Path Cost	<p>Specifies the path cost of the port that the SP3508A uses to determine which port are the forwarding ports. The lowest number is forwarding ports. If users change the value, it is necessary to reboot the SP3508A.</p> <p><i>Range: 1~65535</i></p> <p><i>Default: 10Mb/s = 50-600</i></p> <p style="padding-left: 40px;"><i>100Mb/s = 10-60</i></p> <p style="padding-left: 40px;"><i>1000Mb/s = 3-10</i></p>

5.11 Port Sniffer

The Port Sniffer is a method for monitor traffic in SP3508A networks. Traffic through ports can be monitored by one specific port. Meaning, traffic goes in or out of monitored ports will be duplicated into sniffer port.

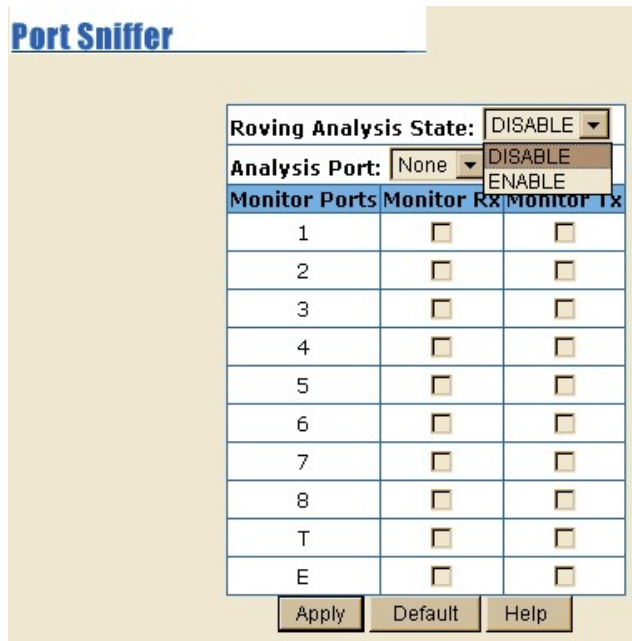

Parameter	Description
Roving Analysis State	Enable or disable the port sniffer function.
Analysis Port	Analysis port can be used to see all monitor port traffic. Users can connect sniffer port to LAN Analysis, Session Wall or Netxray.
Monitor Ports	The ports for monitoring. All monitor port traffic will be copied to sniffer port. Users can select max 9 monitor ports in the SP3508A. If users want to disable the function, select monitor port to none.
Monitor Rx	Monitored receive frames from the port.
Monitor Tx	Monitoring sent frames from the port.

5.12 SNMP

Any Network Management running the Simple Network Management Protocol (SNMP) can manage the SP3508A, provided the Management Information Base (MIB) is installed correctly on the management station. The SNMP is a Protocol that governs the transfer of information between management and agent. The SP3508A VDSL Switch supports SNMP V1.

1. Use this page to define management stations as trap managers and to enter SNMP community strings. User can also define a name,

location, and contact person for the SP3508A. Fill in the system options data, and then click **<Apply>** to update the changes on this page.

Parameter	Description
Name	Enter a name to be used for the SP3508A.
Location	Enter the location of the SP3508A.
Contact	Enter the name of a person or organization.

- Community strings serve as passwords and can be entered as one of the following.

Parameter	Description
Read only	Enables requests accompanied by this string to display MIB-object information.
Read write	Enables requests accompanied by this string to display MIB-object information and to set MIB objects.

- A trap manager is a management station that receives traps, the system alerts generated by the SP3508A. If no trap manager is defined, no traps are issued. Create a trap manager by entering the IP address of the station and a community string.

Trap Managers

Current Managers : <div style="border: 1px solid black; padding: 5px; width: 80px; margin: 5px 0;">(none)</div>	New Manager : <input style="margin: 5px 0;" type="button" value=" << Add << "/> <input style="width: 100px; margin: 5px 0;" type="text"/> IP Address : <input style="margin: 5px 0;" type="button" value=" Remove "/> <input style="width: 100px; margin: 5px 0;" type="text"/> Community :
---	--

Parameter	Description
'Temperature Alarm' trap	When VDSL Switch's internal temperature is greater than 70°C, system will send a "Temperature alarm" trap.
'Fan Speed Alarm' trap	When the VDSL Switch's internal cooling FAN doesn't run, the system will send a "FAN speed alarm" trap.

5.13 Signal to Noise Ratio

The following information provides a view of the current VDSL Attenuation value of the unit.

SNR Status


The following information provides a view of the current VDSL Attenuation value of the unit.

SNR (Signal to Noise Ratio)

Port Num	SNR	
	Value	unit
1	42	db
2	No Link	db
3	No Link	db
4	No Link	db
5	No Link	db
6	No Link	db
7	No Link	db
8	No Link	db

5.14 Security Manager

This interface allows users to change the username and password.

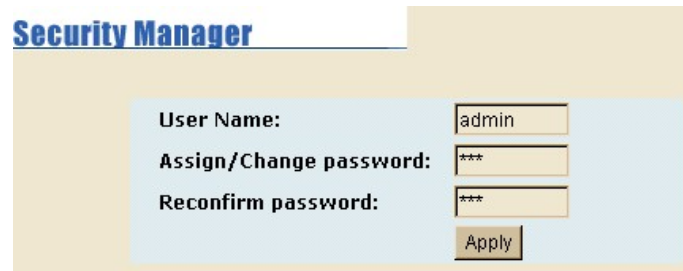

Parameter	Description
Username	This field provides the users to enter the desired username. <i>Default: admin</i>
Assign/Change Password	Allow users to enter the desired password. <i>Default: 123</i>
Reconfirm Password	Re-enter the password in this section for verification.

5.15 TFTP Update Firmware

The following menu options provide some system control functions to allow a user to update firmware and remote boot SP3508A's system


1. Install TFTP Turbo98 and execution.
2. Copy firmware update version image.bin to TFTP Turbo98 directory.
3. In web management select **<TFTP>** on the left menu to update firmware.
4. Download new image.bin file then in web management press **<update firmware>**.



5.16 Configuration Backup

5.16.1 TFTP Restore Configuration


Use this page to set TFTP server address. Users can restore EEPROM value from here, however it is necessary to enter image in TFTP server and the SP3508A will download back the flash image.

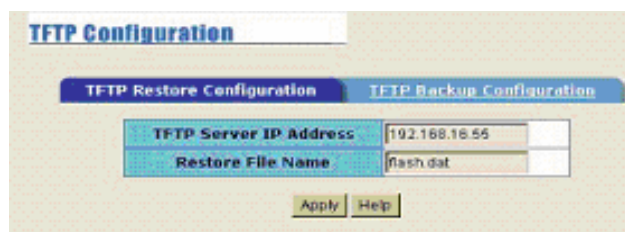

The screenshot shows a web interface titled "TFTP Configuration". There are two tabs: "TFTP Restore Configuration" (selected) and "TFTP Backup Configuration". Under the "TFTP Restore Configuration" tab, there are two input fields: "TFTP Server IP Address" with the value "192.168.16.55" and "Restore File Name" with the value "flash.dat". Below these fields are two buttons: "Apply" and "Help".

5.16.2 TFTP Backup Configuration

Use this page to set TFTP server IP address. Users can save current EEPROM value from here, then go to the TFTP restore configuration page to restore the EEPROM value.

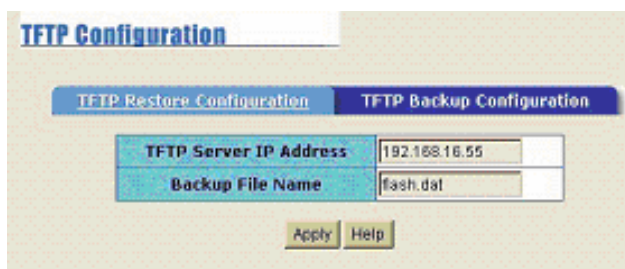

The screenshot shows a web interface titled "TFTP Configuration". There are two tabs: "TFTP Restore Configuration" and "TFTP Backup Configuration" (selected). Under the "TFTP Backup Configuration" tab, there are two input fields: "TFTP Server IP Address" with the value "192.168.16.55" and "Backup File Name" with the value "flash.dat". Below these fields are two buttons: "Apply" and "Help".

5.17 Reset and Rebooting System

These two interfaces allow users to reset and reboot the system.

Parameter	Description
Reset	The interface will reset the device back to factory default settings. Please ensure SP3508A is detached from the VDSL modem when performing this function.
Reboot	This interface allows user to restart the device with settings remaining unaltered.

Chapter 6 Application

The VDSL provides home network architecture. Transforming an apartment into a Multiple-Family Home network area and sharing a single internet account for multiple users via Router & Cable Modem. It can provide unlimited access time in the internet at a reasonable low price.

Bridging Functions

The SP3508A provides full transparent bridging function. It automatically connects node addresses that are later used to filter and forward all traffic based on the destination address. When traffic passes between devices attached to the shared collision domain, those packets are filtered from the VDSL Switch. However, when traffic must be passed between unique segments (i.e., different ports of the VDSL Switch), a temporary link is set up between the switch's port in order to pass this traffic, via the high-speed VDSL fabric.

Transceiver Function

The SP3508A supports Ethernet to VDSL convert. It can transmit or receive packet between Ethernet RJ-45 port and VDSL RJ11 port.

Flexible Configuration

The SP3508A is not only designed to segment the network, but also to provide a wide range of options in the configuration of home network connections. It can be used as a simple stand-alone VDSL Switch or can be connected with another VDSL Switch, Cable modem, Router, XDSL, ISDN, gateway or other network interconnection devices in various configurations.

Chapter 7 Appendix

7.1 Appendix A: Specifications

Model	SP3508A
Standards	IEEE802.3 10BASE-T, IEEE802.3u 100BASE-TX, and IEEE802.3ab 1000BASE-T standards
Interface	<ul style="list-style-type: none"> • 2 X RJ-45 10/100/1000Mbps Ethernet port • 8 X RJ-11 connector for telephone connection • 8 X RJ-11 connector for EoVDSL
MAC Address Table	8k Entries
Flow Control	<ul style="list-style-type: none"> • IEEE802.3x for Full Duplex • Back Pressure for Half Duplex
Distance	<ul style="list-style-type: none"> • Data Rate 5M/5M: up to 1.7 km • Data Rate 15M/15M: up to 1.1km • Date Rate 25M/25M: up to 600m
Features	<ul style="list-style-type: none"> • POTS/ISDN voices pass through • SNR (Signal to Noise Ratio) indications • IEEE 802.1Q Tag-Based VLAN • IEEE 802.1V protocol VLAN • Port-Based VLAN • IEEE 802.1p QOS/CoS (2 Level Priority Queue) • Multicast IP table/IGMP v2 with 512 groups • IEEE 802.3ad LACP • IEEE 802.1d Spanning trees • Port Mirror • SNMP v1 RFC-1493 Bridge MIBs • RMON groups • Temperature and Fan Alarm • Multicast IP table/IGMP v2 • Spectral compatibility with XDSL, ISDN(2B1Q/4B3T) • On-board splitter • Surge protected
Management	<ul style="list-style-type: none"> • Web-Based • Telnet • Console Port (RS-232) • TFTP protocol
VDSL Frequency Spectrum	<ul style="list-style-type: none"> • Transmitter : 0.9 ~ 3.9 MHz • Receiver : 4 ~ 7.9 MHz • POTS/ISDN pass filter Spectrum : 0 ~ 630 kHz
Power Supply	Input: AC 85-265 volts/50-60Hz/1A
Operating Temperature	0°C ~ 50°C (32F ~ 122F)
Humidity	10% ~ 90% non-condensing

Dimension	435 x 255 x 44mm
Certification	CE, FCC, RoHS

7.2 Appendix B: Troubleshooting

- Symptom: Power indicator does not light up (Green).
 - Causes: Defective external power supply.
 - Solution: Check the power plug by attaching with a functioning one. Check the power cord with other devices. If both tests fail, have the power supply replaced by qualified distributor.
- Symptom: Link indicator does not light up (Green).
 - Causes: Network interface, network cable or switch port may be faulty.
 - Solution:
 - Power off and reconnect the VDSL switch.
 - Verify attached network devices are powered on.
 - Verify the cables are connected properly on both ends.
 - Verify the proper cable is used and the distance does not exceed the specified limit.
 - Phone wire must be connected between SP3508A and VDSL modem prior to powering on of devices.
 - Replace the defective cable or modem if necessary.
- Symptom: VDSL always link on 5M/5M speed mode at short phone cable.
 - Cause: VDSL auto speed lock up.
 - Solution: Please re-power VDSL Modem (SP3501AS).
 - SP3508A will redo auto speed function while SP3501AS being re-powered on.

7.3 Appendix C: System Diagnostics

7.3.1 Power and Cooling Problems

If the POWER indicator does not turn on when the power cord is plugged in, users may have a problem with the power outlet, power cord, or internal power supply as explained in the previous section. However, if the unit should turn itself off after running for a while, check for loose power connections, power loss or surges at the power outlet, and verify that the fan on back of the unit is unobstructed and running prior to shutdown. If you still cannot isolate the problem, then the internal power supply may be defective. In this case, contact the supplier for assistance.

7.3.2 Installation

Verify that all system components have been properly installed. If one or more components appear to be malfunctioning (e.g., the power cord or network cabling), then test them in an alternate environment where you are sure that all the other components are functioning properly.

7.3.3 Transmission Mode

The selections of the transmission mode for the RJ-45 ports are auto-negotiation using the default method. Therefore, if the Link signal is disrupted (e.g., by unplugging the network cable and plugging it back in again, or by resetting the power), the port will try to reestablish communications with the attached device via auto-negotiation. If auto-negotiation fails, then communications are set to half duplex by default. Based on this type of industry-standard connection policy, if users are using a full-duplex device that does not support auto-negotiation, communications can be easily lost (i.e., reset to the wrong mode) whenever the attached device is reset or experiences a power fluctuation. The best way to resolve this problem is to upgrade these devices to version that will support auto-negotiation.

7.3.4 Cabling

1. Verify that the cable type is correct. Be sure RJ-45 cable connectors are securely seated in the required ports. Use 100Ω straight-through cables for all standard connections.
2. Use Category 5 cable for 100/1000Mbps Fast Ethernet connections, or Category 3, 4 or 5 cables for standard 10Mbps Ethernet connections.
3. Be sure RJ-11 phone wiring uses 18~26 gauge.
4. Make sure all devices are connected to the network.
5. When cascading two devices using RJ-45 station ports at both ends of the cable (i.e., not an MDI port), make sure a crossover cable is used. Crossover cable should only be used if a MDI port is not available.


7.3.5 Physical Configuration

If problems occur after altering the network configuration, restore the original connections, and try to track the problem down by implementing the new changes, one step at a time. Ensure that cable distances and other physical aspects of the installation do not exceed recommendations.


7.3.6 System Integrity

As a last resort verify the SP3508A integrity with a power-on reset. Turn the power to the SP3508A off and then on several times. If the problem still persists and you have completed all the preceding diagnoses, contact your dealer for assistance.

7.4 Appendix D: VDSL Spectrum

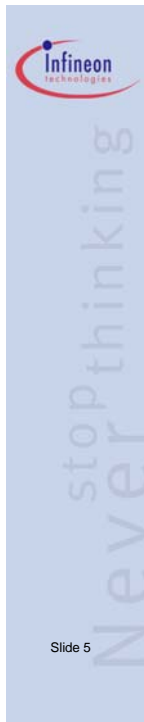

VDSL Technology – Requirements & Definitions Spectral Allocation

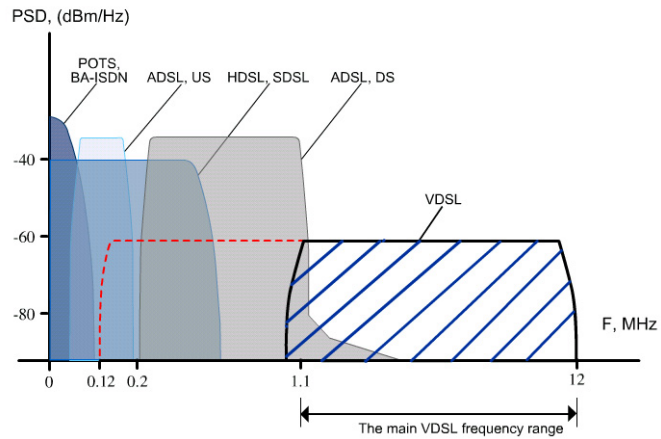

- Co-exists with legacy Voice and ISDN services
- Co-exists with other xDSL technologies
- Programmable notch filter to avoid Radio Frequency Interference

Slide 5


© 2002 Infineon Technologies COM/AC

All rights reserved

7.5 Appendix E: Example of VLAN Setting

7.5.1 Port-Based VLAN Setting

1. Web management → Administrator → SP3508AS settings → Advanced: Protocol Enable Setting → VLAN Operation Mode: Select “Port-Based”.

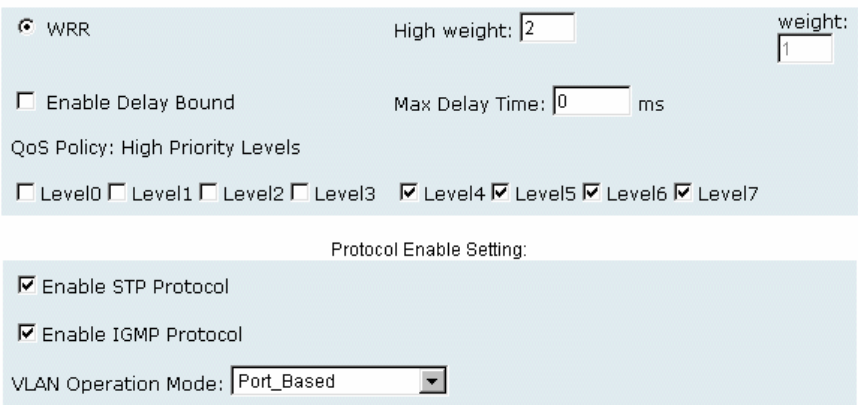

WRR High weight: 2 weight: 1

Enable Delay Bound Max Delay Time: 0 ms

QoS Policy: High Priority Levels

Level0 Level1 Level2 Level3 Level4 Level5 Level6 Level7

Protocol Enable Setting:


Enable STP Protocol

Enable IGMP Protocol

VLAN Operation Mode: Port_Based

Apply Default Help

2. Web management → Administrator → SP3508AS settings → VLAN Configuration.

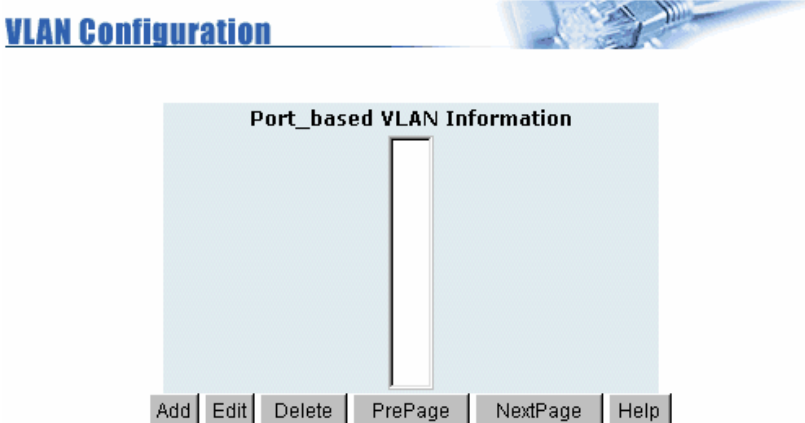

VLAN Configuration

Port_based VLAN Information

Port_based VLAN Information

Add Edit Delete PrePage NextPage Help

3. Add VLAN Group 1, member: port 1 and port 9.

VLAN Name: 1
Grp ID: 1

2
3
4
5
6
7
8
9
10

1
9

Add >>
<< Remove

Apply Help

7.5.2 Tag-Based (IEEE 802.1Q) VLAN Setting

1. Web management → Administrator → SP3508A settings → Advanced: Protocol Enable Setting → VLAN Operation Mode: Select “802.1Q without GVRP”.

Protocol Enable Setting

Enable STP Protocol
 Enable IGMP Protocol

VLAN Operation Mode: 802.1Q without GVRP

Apply Default Help

2. Administrator → VLAN Configuration: Select “Port VID” in this stage, users can define each port’s PVID and set traffic rules for each port.

Tag-based (IEEE 802.1Q) VLAN

Basic				Port VID			
Assign a Port VLAN ID (1~4094) for untagged traffic on each port, then click Submit to apply the changes on this page.							
No.	PVID	Ingress Filtering 1	Ingress Filtering 2	NO	PVID	Ingress Filtering 1	Ingress Filtering 2
1	1	Enable	Disable	6	1	Enable	Disable
2	1	Enable	Disable	7	1	Enable	Disable
3	1	Enable	Disable	8	1	Enable	Disable
4	1	Enable	Disable	T	1	Enable	Disable
5	1	Enable	Disable	E	1	Enable	Disable

Ingress Filtering Rule 1
 (Forward only packets with VID matching this port's configured VID)
Ingress Filtering Rule 2
 (Drop Untagged Frame)

- VLAN Configuration: Select "Basic". Highlight default_1 and click **<Edit>** button to add/remove each port.

Tag-based (IEEE 802.1Q) VLAN

Basic		Port VID	
802.1Q with\without GVRP VLAN Information <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;"> default_1 </div>			
<input type="button" value="Add"/>	<input type="button" value="Edit"/>	<input type="button" value="Delete"/>	<input type="button" value="PrePage"/>
		<input type="button" value="NextPage"/>	<input type="button" value="Help"/>

- In default_1 group, add in or remove group members.

Tag-based (IEEE 802.1Q) VLAN

Basic Port VID

VLAN Name: default
VID: 1
Protocol Vlan: NONE

7		1
8		2
T		3
E		4
		5
		6

5. Click **<Next>** button to set Tag or Untag for each assigned port.

Tag-based (IEEE 802.1Q) VLAN

VLAN Name: default
VLAN ID: 1

Port_NO	Setting	Port_NO	Setting
1	Untag	6	Tag
2	Untag	7	N/A
3	Untag	8	N/A
4	Untag	T	N/A
5	Tag	E	N/A

6. Click **<Add>** button to create new group.

Tag-based (IEEE 802.1Q) VLAN

Basic Port VID

802.1Q with\without GVRP VLAN Information

default__1

Add Edit Delete PrePage NextPage Help

7. Fill in new group name into VLAN Name. Set the VID number. Add in new group members. Click **<Next>** button.

Tag-based (IEEE 802.1Q) VLAN

Basic Port VID

VLAN Name: Sample

VID: 2

Protocol Vlan: NONE

3	1
4	2
5	T
6	E
7	
8	

Add >>

<< Remove

Next Help

8. Set Tag or Untag for group members and click **<Apply>** button.

Tag-based (IEEE 802.1Q) VLAN

VLAN Name: Sample			
VLAN ID: 2			
Port_NO	Setting	Port_NO	Setting
1	Untag	6	N/A
2	Untag	7	N/A
3	N/A	8	N/A
4	N/A	T	Untag
5	N/A	E	Tag

Apply

9. New group has been created, now users can highlight each group and click **<Edit>** or **<Delete>** button to modify or delete VLAN Group.

Tag-based (IEEE 802.1Q) VLAN

Basic Port VID

802.1Q with\without GVRP VLAN Information

default	1
Sample	2

Add Edit Delete PrePage NextPage Help



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>