

InstantWave[™] High Rate
11Mbps Wireless Networking
Access Point

User's Guide

Rev.10
DEC 2000

National Datacomm Corporation.

4F, No. 24-2, Industry East 4th Road, Science Park,

Hsin-Chu, Taiwan, R.O.C.

Tel: 886-3-5783966

Fax: 886-3-5777989

Technical Support

E-mail: techsupt@ndc.com.tw

NDC World Wide Web

www.ndc.com.tw

TRADEMARKS

NDC and InstantWave are trademarks of National Datacomm Corporation. All other names mentioned in this document are trademarks/registered trademarks of their respective owners.

NDC provides this document “as is”, without warranty of any kind, neither expressed nor implied, including, but not limited to, the particular purpose. NDC may make improvements and/or changes in this manual or in the product(s) and/or the program(s) described in this manual at any time. This document could include technical inaccuracies or typographical errors.

FCC WARNING

This equipment has been tested and found to comply with the limits for a Class B Digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation

Table Of Contents

Introduction	1
INSTANTWAVE HIGH RATE FAMILY	1
SYSTEM REQUIREMENTS	1
CABLING	1
Glossary	2
How to Use this Guide	3
Planning Your Network	4
INFRASTRUCTURE NETWORK TYPES.....	4
PLANNING AN INFRASTRUCTURE NETWORK.....	6
Single AP Installation	6
Multiple AP Installation	6
ROAMING.....	7
ACCESS POINT PLACEMENT GUIDELINES.....	8
Placing For Performance	8
Placement Tools	8
MOUNTING THE AP	8
Getting Started	9
ACCESS POINT HARDWARE INSTALLATION	9
LED INDICATORS	9
AP MANAGEMENT SOFTWARE INSTALLATION/UNINSTALLATION .	11
Installation.....	11
Uninstalling.....	11
AP COMFig Tool	12
USING THE AP COMFIG TOOL.....	12
AP COMFig Password	12
AP COMFig Service	13
Perform AP Self Diagnostic Test	18

Upgrade AP Firmware	18
Reset AP Configuration	18
Trouble Shooting	19
Operational Problems	19
Technical Support	21
NDC Limited Warranty	22
Index	26

List of Figures

FIGURE 1. SIMPLE WIRELESS INFRASTRUCTURE NETWORK	4
FIGURE 2. AP TO WIRED ETHERNET BRIDGE	5
FIGURE 3. MULTIPLE AP NETWORK	5
FIGURE 4. ACCESS POINT	9
FIGURE 5. ACCESS POINT	9
FIGURE 6. ACCESS POINT LEDs	10
FIGURE 7. LED FUNCTIONS	13
FIGURE 8. AP COMFIG TOOL/SERVICE	13
FIGURE 9. CONFIGURATION/GENERAL	13
FIGURE 10. ENCRYPTION	16
FIGURE 11. CONFIGURATION/FILTER	117

Packing List

The package should contain the following items:

- One Access Point
- One diskette for AP Management Software
- One AC Power Adapter
- This User's Guide

Introduction

Congratulations on choosing one of NDC's InstantWave High Rate wireless networking product's family. InstantWave High Rate was one of the first IEEE 802.11b wireless standard compliant products in the industry and was designed to maximize the convenience of networking. You will find InstantWave High Rate products very easy to setup and use.

The User's Guide gives comprehensive instructions on installing and using the InstantWave High Rate Access Point (AP). The AP provides a transparent bridged connection between a wired network and a wireless network and allows your wireless stations to communicate with devices attached to your wired network. It manages the flow of data packets from the wired LAN to the wireless LAN, and vice versa.

InstantWave High Rate Family

The InstantWave High Rate Access Point is part of a family of easy to use high performance wireless communication products. The family products include:

- InstantWave High Rate Access Point (NWH660, NWH650)
- InstantWave High Rate PCI Card (NWH630)
- InstantWave High Rate PC Card (NWH610)

System Requirements

System requirements to install and operate the InstantWave High Rate Access Point are:

- A RS-232 cable
- An Ethernet drop (UTP)
- A PC (only used when configuration of the AP's Network properties is necessary)

Cabling

Connecting the AP to an Ethernet network requires an Unshielded Twisted-Pair cable. The AP fits into the network just as any other node would do. An LED will light to indicate a connection. The cable length should follow Ethernet standards in each case.

Glossary

Group ID/BSSID

A Group ID (the 802.11 standard uses the term BSSID) is the ID of a wireless cell. A wireless cell is usually made up of stations in an area that the radio signal can comfortably cover. In other words, any wireless station in the cell can communicate with any other within reach of the radio signal.

Domain Name/ESSID

A “Domain” is most commonly used to refer to a group of computers whose hostnames share a common suffix. The domain is usually defined by the network administrator as a segment/subnet of a large network and may be made up of overlapping wireless cells. Wireless nodes can roam freely within the same domain without disconnecting from the network.

Roaming

The convenience of a mobile PC is the ability to move freely. The concept is similar to that of a cellular phone moving from one base station to another. InstantWave High Rate offers built-in high performance and seamless roaming capabilities.

Regulatory Domain

InstantWave High Rate products use the unlicensed ISM (Industrial, Scientific, Medical) band to communicate through radio waves. Different countries offer different radio frequencies to be used as the ISM band. There are four frequency bands defined by 802.11: Japan (2.471GHz – 2.497 GHz), USA, Extended Japan, Canada, and Europe (2.4 GHz – 2.4835 GHz), Spain (2.445 GHz – 2.475 GHz), and France (2.4465 GHz – 2.4835 GHz). To use InstantWave High Rate in a country not listed above, check with your government’s regulating body to find the correct frequency band to use. All InstantWave High Rate products are supplied preset to the country of sale’s frequency band.

How to Use this Guide

InstantWave High Rate is extremely versatile in providing varying levels of network management. For Small Office/Home Office users, setup and configuration is a quick, four-step process. The Access Point Hardware Installation section, on page 9, provides simple instructions to get your network up and running within minutes. Go to the Access Point Hardware Installation section if your network will meet the following criteria:

- You will accept all default values
- Your network will have only one Access Point

The AP COMFig Tool, see page 12, permits AP configuration from a PC via a COM port connection. The program enables the user to change the default Access Point IP configuration settings before introducing a new AP to an already established wireless network.

Before using the setup tool, you should read through the next section “Planning Your Network”, in order to get the best possible performance from your InstantWave High Rate wireless network.

Planning Your Network

Infrastructure Network Types

An Infrastructure network is formed by several stations and one or more Access Points (APs), with the stations within a set distance from the AP. **Figure 1** depicts a typical Infrastructure network topology.

There are three infrastructure network setups that are commonly used. It is a good idea to understand the possible network setups and configuration requirements before planning your wireless network.

- Type 1. The simplest wireless infrastructure network is composed of one Access Point (AP) and a few wireless Stations communicating via radio waves (**Figure 1**). This setup enables mobile stations to communicate with each other. The main benefit of this type of network is to extend the range of the network. If an AP is placed between Station-1 and Station-2, the radio transmission distance is effectively doubled since Station-1 can talk to Station-2 through the AP. The drawback of this configuration is that the effective bandwidth is halved since all communication is relayed by the AP.



Figure 1. Simple Wireless Infrastructure Network

- Type 2. The next simplest wireless network is very similar to the Type 1 network. This time the AP is connected to a wired Ethernet network as a node. In this configuration the AP is effectively performing as a bridge between the wired Ethernet and the wireless networks (**Figure 2**).

Wireless users have the same access to the network resources as they would have if they were wired. This type of network is usually used to extend an existing network into a difficult to wire or a roaming environment.

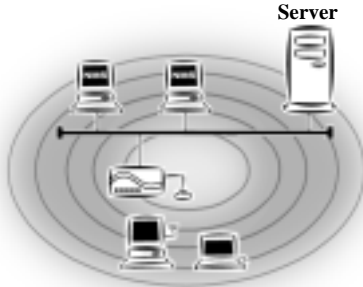


Figure 2. AP to Wired Ethernet Bridge

Type 3. The third type of network is composed of multiple APs and multiple Stations (**Figure 3**). The APs could also be connected to servers on the wired Ethernet network. The shadowed area represents signal overlap between subnet1 (AP-1) and subnet2 (AP-3).

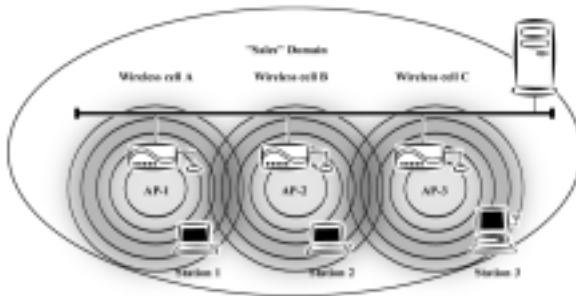


Figure 3. Multiple AP Network

The reasons for having multiple APs installed are:

1. To increase bandwidth in order to boost overall network performance
2. To extend the coverage range

Any other type of configuration is usually a mix of these commonly used types.

Planning an Infrastructure Network

This section explains some of the things you need to consider in planning an Infrastructure network. Setting up is a two step process.

1. Install and configure the InstantWave High Rate products
2. Decide the best physical location of the InstantWave High Rate products so as to optimize performance

The following sections give quick guidelines for these two steps. Before we go into detail, the network planner should first decide whether to have a single AP wireless network or a multiple APs network.

Single AP Installation

If you are setting up a simple network with only one AP and a few Stations (a Type 1 or Type 2 network configuration as described in Infrastructure Network, page 4), the installation can be performed painlessly. All you need to do is make sure the AP and all the wireless Stations hold the same “Domain Name” in their configuration.

Adding a new Station to an existing Infrastructure Network is easy. Again, all you need to do is to set the newly added Station’s “Domain Name” to the same as that of the AP’s.

Multiple AP Installation

Install multiple APs in the same network (or Domain) with an overlapping signal (Figure 3)

- Use the same Domain Name
- Enable the roaming function in the Station if roaming is required

Note: A Station will automatically connect to whichever AP in the same domain is offering the best signal

Roaming

InstantWave High Rate products are equipped with seamless roaming capabilities. Roaming is necessary to prevent mobile Stations from being disconnected from the network as they move around.

InstantWave High Rate is designed to allow wireless Stations to roam freely within an infrastructure domain composed of multiple APs with overlapping signal coverage (as in the Type-3 network configuration described in the previous section). For example, roaming enables Station-1 to move from the AP-1 signal coverage area to the AP-2 signal coverage area without disconnecting from the network. The handover is achieved transparently; the Station-1 user would not realize he had moved from AP-1 to AP-2.

The requirements for a roaming environment are:

- a) Multiple APs with overlapping signal coverage (see Multiple AP Installation, page 6)
- b) The APs must be configured to have the same Domain name (see AP COMFig Service, page13)
- c) The mobile Stations must have the same Domain name as that of the APs
- d) *It is advisable that APs on different TCP/IP subnets be given different Domain names to avoid roaming confusion (see AP COMFig Service , page13)

Note: If you want to move your mobile PC between different APs without terminating the existing networking link, you need to enable the roaming function on the Mobile Station. The APs that a Mobile Station will roam to must also be configured with the same domain name. If a Station detects that the signal quality with the current linked AP is weak, it will search for an AP in the same domain with a better signal quality and automatically establish a new connection with it. When a Station is roaming, it will always use the same IP address. The TCP/IP router will not route information packets to a Mobile Station if it re-associates with a AP that is in a different TCP/IP subnet. In other words, if your network consists of two subnets connected by a router, a Mobile Station may roam to a different subnet with the same domain name and then fail to communicate with other network devices via TCP/IP. To avoid running into such an awkward situation, you must assign different domain names to different TCP/IP subnets.

Access Point Placement Guidelines

A characteristic of radio communication is the “interference” problem. Radio is receptive to interference. Therefore, the more interference you can avoid, the better performance you will get from wireless products. The following section describes how the InstantWave High Rate AP should be placed to reduce possible interference.

A few tips to mention that are particularly significant in a radio wave communications system:

1. Radio waves reflect or refract from buildings, walls, metal furniture, or other objects. This could result in performance degradation due to the fluctuation of the received signal.
2. Microwave ovens use the 2.45 GHz frequency band. InstantWave High Rate also functions in the 2.4 ~ 2.5 GHz band, and therefore shares some of the band with microwave ovens. This means that when a nearby microwave oven is in use, it may interfere with InstantWave High Rate, resulting in performance degradation on the wireless network.

Placing For Performance

For the best performance, it is advisable that users follow the guidelines below in placing the product:

- Place the AP as high as possible, in as open an area as possible
- Avoid placing the AP (especially the antenna) close to metal objects (e.g., file cabinets, metal cubicles, etc.)
- Keep APs and Stations as far away as possible from microwave ovens (10 meters min. is advisable)

Placement Tools

InstantWave High Rate includes a Station utility program to help users find the best location in which to place the AP relative to the location of the Stations.

1. Start the AP
2. Allow a wireless Station to connect with the AP
3. From the Station, run the InstantWave High Rate Station Monitor RF Signal Quality Program
4. Move the AP and the AP’s antenna to find the best signal quality

Mounting the AP

The AP may be either freestanding or wall-mounted. Screws and a paper template are provided for easy installation.

Getting Started

Access Point Hardware Installation

Access Point Hardware Setup explains how to quickly setup the Access Point for use via a wired Ethernet connection, and using the factory default settings. For installation in networks using other than the default settings, i.e. into existing networks, complete the Hardware Setup and refer to AP COMFig Tool, page 12. To setup a wireless station, refer to the PCI/PC Card User's Guide.



Figure 4. Access Point

- step1.** Connect the Ethernet network cable to the UTP port in the back panel of the Access Point.
- step2.** Connect the power adapter to the electricity outlet and then to the Access Point DC-In port in the back panel of the access point.
- step3.** Turn on the AP power switch

The Access Point is now ready to communicate with the wireless stations using its factory default settings. Refer to the InstantWave High Rate PCI/PC Card User's Guide for card setup instructions.

LED Indicators

The Access Point LEDs show the status of the connections. **Figure 5** shows the LEDs and their functions.

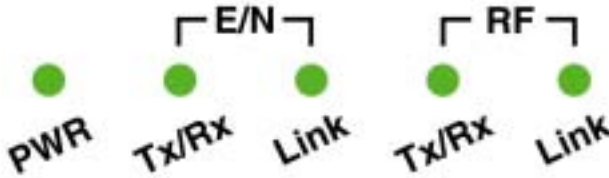


Figure 5. Access Point LEDs

<i>General</i>	<i>Color</i>	<i>Function</i>
PWR (Power/Status)	Green	Unlit: Power OFF Blinking: Diagnostic test On: Healthy condition
	Red	On: Abnormal Condition

<i>E/N(Ethernet)</i>	<i>Color</i>	<i>Function</i>
Link	Green	Indicates an Ethernet link. If the radio fails, this LED will not light
TX/RX	Orange	Blinks to indicate Ethernet transmission/reception activity

<i>RF</i>	<i>Color</i>	<i>Function</i>
Link	Green	Indicates a wireless link. If the radio fails, this LED will not light
TX/RX	Orange	Blinks to indicate radio transmission/reception activity

Figure 6. LED Functions

AP Management Software Installation/Uninstallation

Installation

- step1.** Insert the InstantWave High Rate setup disk 1 into drive A:
- step2.** From the *Start* menu select *Run*, and type **A:\SETUP.EXE**
- step3.** Click the *Next* button to start the setup program

- step4.** From the *Choose Destination Location* dialog box accept the program files default location, C:\Program Files\Wireless LAN AP SB, or click **Browse** to choose another location. Then click **Next**
- step5.** To install the full program, choose **Typical**. Choosing *Custom* to open another screen with the option to install only selected parts of the management program. Click **Next**
- step6.** The setup program will copy the necessary files into the specified directory. When the installation is progressing, the setup program will ask you to insert disk 2. File copying progress will be displayed in the setup screen. You can stop the process anytime by clicking **Cancel**
- step7.** After the program files have been copied, click **Start/Programs/Wireless LAN AP SB**. You will find the AP COMFig Tool and on the menu
- **The AP COMFig Tool.** A simple Windows based AP configuration tool working through a direct COM port connection to the AP. The AP COMFig tool is intended for simple first time configuration of AP parameters, or to be used as a last resort to communicate with an AP (see AP COMFig Tool, page 12)

Uninstalling

Should you wish to uninstall InstantWave from a Windows environment, click **Start/Programs/Wireless LAN AP SB**.

Click **Uninstall Wireless LAN AP SB**. A confirmation box will ask if you are sure you wish to remove the program(s). Click **Yes**.

AP COMFig Tool

The AP COMFig Tool is a Windows 95/98/ME/NT/2000 based utility that is used via a COM port connection between the AP and a PC.

It provides the following functions:

- Sets necessary AP parameters (e.g., IP address, Domain name, etc.)
- Diagnoses the AP hardware and shows the diagnostic results
- Upgrades the AP firmware
- Resets the AP Configuration
- Manages the APMS Host table

Click **Start/Programs/Wireless LAN AP SB/AP COMFig Tool** to start the program. The program opens with the AP COMFig Tool *Connect* screen. Then follow the steps below to begin using the AP COMFig Tool.

- step1.** Connect the null modem cable to the serial port on the AP and connect the other end to a serial port on the PC
- step2.** Select the COM port
- step3.** Power on the AP. The AP COMFig Tool will connect with the AP automatically

Note: You have to go through the steps above each time you want to use the AP COMFig Tool.

Using the AP COMFig Tool

AP COMFig Password

Click on the *Password* tab to open the *Password* screen. Here you may set a password if so desired. Setting a password prevents unauthorized changes to the AP configuration settings.

Note: The password will be shared with the APMS program on the same PC.

AP COMFig Service

After connecting with the AP, click on the *Service* tab to open the *Service* screen (Figure 7). The *Service* screen provides access to the management features.

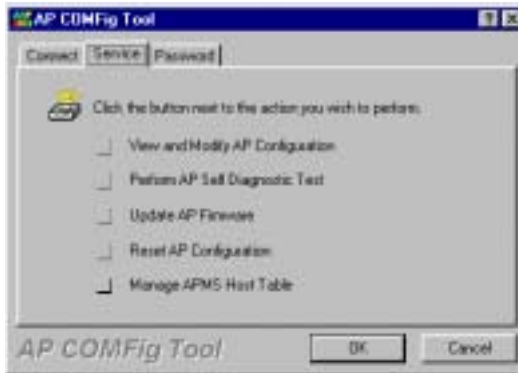


Figure 7. AP COMFig Tool/Service

Click the *View and Modify AP Configuration* button. The *Configuration* screen will open (Figure 8).

General

The *General* card (Figure 8) is the first card on the *Configuration* Screen.



Figure 8. Configuration/General

Here you may:

AP Alias Name	Assign the AP a unique name
Domain Name (ESSID)	This is more commonly called the Domain Name but is defined in the 802.11 Wireless Standard as ESSID. Stations and AP(s) in the same group must use the same Domain Name
Transmission Rate	The transmission rate at which the data packets are transmitted by the AP. Click <i>Down selector</i> arrows, found to the right of Transmit Rate to select which rate you want to use
Basic Rates	This value determines the basic rates used and reported for this BSS by the AP. The highest rate specified will be the rate that the AP will use when transmitting broadcast / multicast and management frames. Available options are: <ul style="list-style-type: none">• 1 and 2 Mbps All (1, 2, 5.5, and 11 Mbps)
Channel Number	You can change the channel number. Channels supported on every carrier set as below table
Regulatory Domain	Identify the country where the AP is used (see Glossary, page 2). Read-only
BSS ID	Read-only
Firmware Version	Read-only

Channels supported on each carrier set:

Channel Number	Center Frequency (MHz)	FCC/ Canada	ETSI	Spain	France	Japan
1	2412	O	O			O
2	2417	O	O			O
3	2422	O	O			O
4	2427	O	O			O
5	2432	O	O			O
6	2437	O	O			O
7	2442	O	O			O
8	2447	O	O			O
9	2452	O	O			O
10	2457	O	O	O	O	O
11	2462	O	O	O	O	O
12	2467		O		O	O
13	2472		O		O	O
14	2484					O

Important:

In a multiple cell network topology, overlapping and/or adjacent cells using different channels can operate simultaneously without interference if the frequency distance between the center frequencies is at least 30MHz. For example **channels 1, 7 and 13** are non-overlapping frequency channels.

After making any changes, click the **Apply** button to make the changes effective immediately, without closing the dialog box, or click **OK** to accept the changes and close the box. Clicking **Add to APMS Host Table** will add the information to the host table referred to by the APMS program.

Encryption

Click the **Encryption** tab to setup the security options (**Figure 9**). This page allows you to create up to four data encryption keys and enable encryption to keep your data secure.



Figure 9. Encryption

Click the arrow to the right of the *Method* field. The pull-down method lists four options:

Disabled (default)

The station communicates with this Access Point without any data encryption.

40 bit WEP

Allows station to communicate with this Access Point through 40 bit WEP key data encryption.

128 bit WEP

Allows station to communicate with this Access Point through 128 bit WEP key data encryption.

Proprietary

The station communicates with this Access Point through NDC proprietary data encryption.

You must set the security keys before you enable use of encryption.

WEP stands for Wired Equivalent Privacy. It is an encryption scheme that provides secure wireless data communications to users. WEP uses a 40-bit or 128-bit key to control network access. In order to decode the data transmission, each wireless client on the network must use identical keys.

Key Generation - There are two ways to generating a security key.

The first is by entering any text in the **Passphrase** field. Click the **Generate** button. It will generate four keys, **Key 1**, **Key 2**, **Key 3** and **Key 4**. Select a key number from the dropdown list of the Default Key box. If you do not select a key, key 1 is selected, as it is the default key. Click **Apply**.

Another key generation method is to insert key values directly into the key fields using a keyboard. Select the Key number in the Default Key box. If the Key is not entered correctly, a client cannot access the wireless LAN resources. Click **Apply**

Filter:

The next tab on the dialog box is **Filter (Figure 10)**. This is a one-way protocol filtering mechanism that prevents the AP from transmitting certain protocols from the Wired Ethernet LAN into the Wireless zone. If you do not require particular protocols on the wireless part of your network you can save bandwidth by enabling the protocol filter.

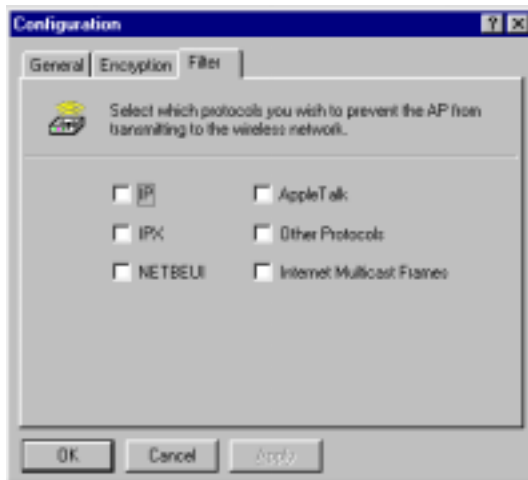


Figure 10. Configuration/Filter

From the **Filter** tab, some, all, or none of the protocols listed may be selected for filtering out:

- IP protocol
- IPX protocol
- NetBEUI protocol
- AppleTalk protocol
- Other protocols

- Internet Multicast Frames

After selecting a protocol for filtering, click the **Apply** button to make the changes effective immediately, without closing the dialog box, or click **OK** to accept the changes and close the box.

Perform AP Self Diagnostic Test

On the *Service* card, click *Perform AP Self Diagnostic Test*. The *Hardware Diagnosis* screen will open (**Figure 11**)



Figure 11. Hardware Diagnosis



Start and the tests will commence. As each item is tested a yellow arrow will appear alongside it. If the test is successful, the arrow will change to a green tick. If a failure occurs, an “X” will appear. You can click **Cancel** at any time to stop the tests. When the tests have completed, the *Cancel* button changes to a *Close* button. Click **Close** to return to the *Service* card.

Upgrade AP Firmware

The Access Point’s (AP’s) embedded software is burned into the flash ROM. However, an updated AP code may be installed via a COM port using the AP COMFig program. Click on *Update AP Firmware* (**Figure 7**, page 13). The *Update AP Firmware* dialog box will open.

Use the *Browse* button to choose the file to be uploaded to the AP, or type the file location and name in the *File Name* field.

The **Update** button will then become enabled. Click **Update** to start loading the file to the Access Point. The AP COMFig tool will upload the new executable into the AP’s flash memory area.

When the file transfer is complete, click **Close** to close the window.

Reset AP Configuration

Restores the factory default configurations.

Trouble Shooting

Operational Problems

The Wireless adapter appears to be functioning. The Activity LED is active. However, no network PC can be found when run in Infrastructure Wireless Network mode

- ***You have only one AP, and the PC is not placed too far from it, but the PC still has difficulties finding the AP***
 1. ***Check that the antennas are properly connected to the AP and the station***
 2. ***Make sure that the AP is powered on and working***
 3. ***Use Network Watcher to find and join with the AP***

Radio signal quality indicates Yellow or Red whilst in Infrastructure mode

- The connected AP is too far away
 1. ***Use Network Watcher to find an AP with a stronger signal***
 2. ***Move your PC closer to the connected AP***
- The adapter antenna is not connected, or its signal path is blocked by metal casing, e.g. metal filing cabinets
 1. ***Make sure the antenna is firmly screwed in***
 2. ***Arrange the antenna position to get the best radio signal quality***

Transmission or reception throughput is low during network file accessing

- Many stations are connected to the same group and heavily utilizing the network
 1. ***On an Infrastructure wireless network, use Network Watcher to find, and connect to, a different AP with only a few PC connections***
 2. ***In an Ad-Hoc environment, form your own wireless group with a different wireless domain name to start a different channel hopping pattern***

Ad-Hoc stations can't join each other

- Two stations started at the same time
 1. ***Reboot one station***
- Different Domain Name (ESSID)

Change the ESSID, using the 11Mbps Wireless LAN Utility program, to match that of the other stations on the Ad-hoc network

OR Go to Control Panel/Network/11Mbps Wireless LAN PCI Card /Properties/Advanced/ESSID, and change it there

Technical Support

If you are having a problem using an NDC product and cannot resolve it, please note the following information and contact NDC Technical Support:

- What you were doing when the error occurred
- What error messages you saw
- Whether the problem can be reproduced
- The serial number of your product
- The firmware version number.
- A copy of the AP configuration file.

NDC Technical Support is available via e-mail at:
techsupt@ndc.com.tw

For other information about NDC, please visit us at:
www.ndc.com.tw

NDC Limited Warranty

Hardware

NDC (NDC Communications, Inc.) warrants its products to be free of defects in workmanship and materials, under normal use and service, for a period of 12 months from the date of purchase from NDC or its Authorized Reseller and for the period of time specified in the documentation supplied with each product.

Should a product fail to be in good working order during the applicable warranty period, NDC will, at its option and expense, repair or replace it, or deliver to the purchaser an equivalent product or part at no additional charge except as set forth below. Repair parts and replacement products are furnished on an exchange basis and will be either reconditioned or new. All replaced products and parts will become the property of NDC. Any replaced or repaired product or part has a ninety (90) day warranty or the remainder of the initial warranty period, whichever is longer.

NDC shall not be liable under this warranty if its testing and examination disclose that the alleged defect in the product does not exist or was caused by the purchaser's, or any third party's misuse, neglect, improper installation or testing, unauthorized attempt to repair or modify, or any other cause beyond the range of the intended use, or by accident, fire, lightning, or other hazard.

Software

Software and documentation materials are supplied "as is" without warranty as to their performance, merchantability, or fitness for any particular purpose. However, the diskette media containing the software are covered by a 90-day warranty which protects the purchaser against failure within that period.

Limited Warranty Service Procedures

Any product (1) received in error, (2) in a defective or non-functioning condition, or (3) exhibiting a defect under normal working conditions, can be returned to NDC by following these steps:

You must prepare:

- dated proof of purchase
 - product model number & quantity
 - product serial number
 - precise reason for return
 - your name/address/email address/telephone/fax
1. Inform the distributor or retailer
 2. Ship the product back to the distributor/retailer with prepaid freight. The purchaser must pay the shipping freight from the distributor/retailer to NDC. Any package sent C.O.D. (Cash On Delivery) will be refused
 3. Charges: Usually RMA (Returned Material Authorization) items will be returned to the purchaser via AIR MAIL, prepaid by NDC. If returned by another carrier, the purchaser will pay the difference. A return freight and handling fee will be charged to the purchaser if NDC determines that there was "No Problem Found" or that the damage was caused by the user

Warning

NDC is not responsible for the integrity of any data on storage equipment (hard drives, tape drives, floppy diskettes, etc.). We recommend that our customers back their data up before sending such equipment in for diagnosis or repair.

Services after Warranty Period

After the warranty period expires, all products can be repaired for a reasonable service charge. The shipping charges to and from the NDC facility will be borne by the purchaser.

Return for Credit

In the case of a DOA (Dead on Arrival) or a shipping error, a return for credit will automatically be applied to the purchaser's account, unless otherwise requested.

Limitation of Liability

All expressed and implied warranties of a product's merchantability, or of its fitness for a particular purpose, are limited in duration to the applicable period as set forth in this limited warranty, and no warranty will be considered valid after its expiration date.

If this product does not function as warranted, your sole remedy shall be repair or replacement as provided for above. In no case shall NDC be liable for any incidental, consequential, special, or indirect damages resulting from loss of data, loss of profits, or loss of use, even if NDC or an authorized NDC distributor/dealer has been advised of the possibility of such damages, or for any claim by any other party.

EC DECLARATION OF CONFORMITY

For the following equipment:

Product Name : InstantWave Wireless Access Point
Model Number : NWH650

Produced by:

Manufacturer Name : NATIONAL DATACOMM CORPORATION
Manufacturer : 2F, NO. 28, INDUSTRY EAST 9TH ROAD
Address : SCIENCE PARK, HSINCHU, TAIWAN,
R.O.C.

is hereby confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to R&TTE Directive (99/5/EC). For evaluation regarding electromagnetic compatibility, the following standards were applied:

EN 300 328 (November 1996/A1 (July 1997))

EN 300 826 (November 1997)

En 60950:1992 + A1:1993 + A2:1993 + A3:1995 + A4:1996 + A11:1997

The manufacturer/importer is responsible for this declaration:

Company Name : NDC (EUROPE) CO., LTD
Company : 1, EARLSFORT CENTRE, HATCH STREET,
Address : DUBLIN 2, IRELAND

Person authorized to make this declaration:

Name : CHUNG-HUA CHIANG
Position/Title : President and CEO

Date

Legal Signature

Index

A

- Access Control21, 28, 31–32
- Access Point
 - Ethernet Connection to..... 25
- Access Rights. Setting..... 21, 31
- Alias name..... 15, 34
- AP COMFig Password 13
- AP COMFig Service 14
- AP COMFig Tool..... 13
- AP Information..... 36
- AP Setting 30

B

- BSSID 2

C

- Cabling 1
- COM port connection..... 13
- Community..... 28
- Connecting to an AP 28

D

- Default Gateway
 - Assigning..... 18, 30
- Default IP 18, 30
- Default subnet mask..... 18, 30
- Domain Name2, 15, 34
 - Assigning..... 27

E

- Extended Service Set ID..... 15, 34

F

- Filter Protocols 20, 31
- Flash ROM..... 22

G

- General 14
- Group ID 2

H

- Host Table..... 23

I

- Information, AP 36
- IP Address
 - Assigning 26
 - Assigning 30
- IP Default..... 18

L

- LEDs..... 11

M

- MAC Address 37
- Modify AP Configuration..... 14

N

- Network
 - Infrastructure..... 4
 - Multiple APs..... 5

P

- Password
 - AP COMFig..... 13
- Placement Guidelines 8
- Placing
 - for performance 8
 - Tools 9
- Protocol Filtering 20, 31

R

- Radio Frequencies 2
- Regulatory Domain..... 2
- Reset AP Configuration 23
- Resetting the AP 36
- Roaming..... 2

S

- Self Diagnostic Test..... 22

SNMP24, 26, 36

Subnet Mask

 Assigning..... 27

 Assigning..... 18, 30

System Requirements 1

T

TCP/IP address 18, 30

Troubleshooting 39

U

Uninstalling 12

Upgrade AP Firmware 34–36

Upgrade Firmware 22

V

View 36

W

Wireless Cell..... 2

Wireless Stations 37

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>