



2-9398

Caller ID Telephone User's Guide



FCC REGISTRATION INFORMATION

Your GE telephone equipment is registered with the Federal Communications Commission and is in compliance with parts 15 and 68, FCC Rules and Regulations.

1 Notification to the Local Telephone Company

On the bottom of this equipment is a label indicating, among other information, the FCC Registration number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

Notes

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.

2 Rights of the Telephone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations of procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

INTERFERENCE INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-00345-4 when ordering copies.

Hearing Aid Compatibility

This telephone is judged to be hearing aid compatible per FCC standards

FCC NUMBER IS LOCATED ON THE CABINET BOTTOM REN NUMBER IS LOCATED ON THE CABINET BOTTOM
--

INTRODUCTION



Your GE Caller ID Telephone is designed to give you flexibility in use and high quality performance. To get the most from your new Caller ID Telephone, we suggest that you take a few minutes right now to read through this instruction manual.

TABLE OF CONTENTS

INTRODUCTION	1	MEMORY DIALING	15
GETTING STARTED	2	STORING A NUMBER IN MEMORY	15
BEFORE YOU BEGIN	2	STORING THE LAST NUMBER DIALED	16
POWERING THE CALLER ID		STORING A CALLER ID NUMBER	16
TELEPHONE	2	IMPORTANT CALL INDICATOR	16
INSTALLING THE BATTERY	3	REVIEWING AND DELETING	
TELEPHONE INSTALLATION	4	STORED NUMBERS	17
SETUP	6	CHANGING A STORED NUMBER	18
TELEPHONE OPERATION	8	DIALING A STORED NUMBER	18
UNDERSTANDING THE LCD	8	DIALING LONGER NUMBERS	
THE DISPLAY	9	FROM MEMORY	18
USING THE MENU BUTTON	9	CALLER ID OPERATION	19
PLACING A CALL	9	RECEIVING AND STORING CALLS	19
THE CALL TIMER	9	REVIEWING MESSAGES	20
RECEIVING A CALL	9	DELETING RECORDS	21
ADJUSTING VOLUMES	10	DIALING A CALLER ID NUMBER	21
REDIAL	10	CALLING OUTSIDE YOUR AREA CODE ..	22
BUSY REDIAL	11	MESSAGE INDICATORS	23
HOLD	12	TROUBLESHOOTING TIPS	24
MUTE	12	GENERAL PRODUCT CARE	26
DO NOT DISTURB	12	SERVICE	26
TEMPORARY TONE	12	INDEX	27
FLASH BUTTON	13	WARRANTY	28
PAUSE BUTTON	13		
USING THE ALARM	14		

VERY IMPORTANT: The Caller ID feature of this product requires a subscription to Caller ID service from your telephone company.

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
THE LIGHTNING FLASH AND ARROW-HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.	CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.
SEE MARKING ON BOTTOM / BACK OF PRODUCT		


GETTING STARTED

This section shows you how to install and setup your Caller ID Telephone. It's important that you follow the instructions in this section in order to get your new phone correctly installed and set up.

BEFORE YOU BEGIN

PARTS CHECKLIST

Your package should contain the following items:

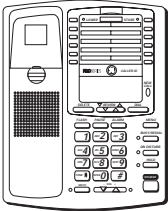

Base unit



Handset



**AC power supply
(# 5-2381)**




Handset cord



Line cord

MODULAR JACK REQUIREMENTS


You need an RJ11 type modular jack, which is the most common type of phone jack and might look like the one pictured here. If you don't have a modular jack, call your local phone company to find out how to get one installed.

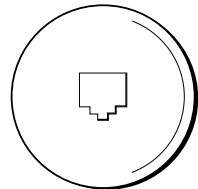

POWERING THE CALLER ID TELEPHONE

This unit is designed to be powered by the AC adapter. When using AC power, a 9-volt battery acts as a backup, enabling continuous operation of full telephone and Caller ID features for up to 4 hours and 30 hours of only Caller ID signal reception in the event of power failure.


If you are planning to use both the AC adapter and battery, you should install the 9-volt battery before you begin the telephone installation procedure.

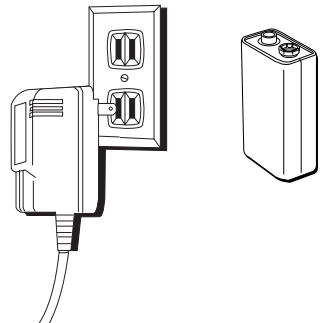

INSTALLING THE BATTERY

If you are replacing the battery, be sure to disconnect the line cords from the back of the unit.


1. Remove the base plate by pressing down the tabs and lifting it from the base.
2. Loosen the screw on the battery compartment door and open the door.
3. Insert the battery as shown in the diagram inside the battery compartment.
4. Close the battery door, tighten the screw, and then replace the base plate.

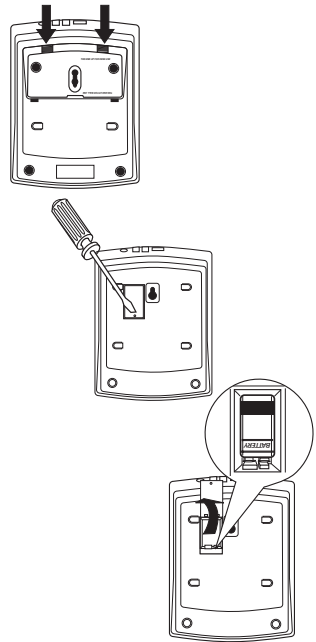

LOW BATTERY INDICATORS

When the battery begins getting to a low level, the battery symbol in the display flashes indicating that you need to replace the battery.


NOTE: When the battery is low, AC power must be connected in order to edit, delete, or input Caller ID information.



Low Battery indicator flashes when battery power is low.

When battery power reaches a critically low level, **REPLACE BATTERY** appears in the display.

NOTE: If the **REPLACE BATTERY** message appears in the display, you need to replace the 9-volt battery. It is important that you replace the battery as soon as possible in order to retain the information in the Caller ID memory.




REPLACE BATTERY appears when the battery power is critically low.

TELEPHONE INSTALLATION

DESK OR TABLETOP INSTALLATION

NOTE: Be sure to read the preceding pages for information about using the 9-volt battery backup before you begin the telephone installation.





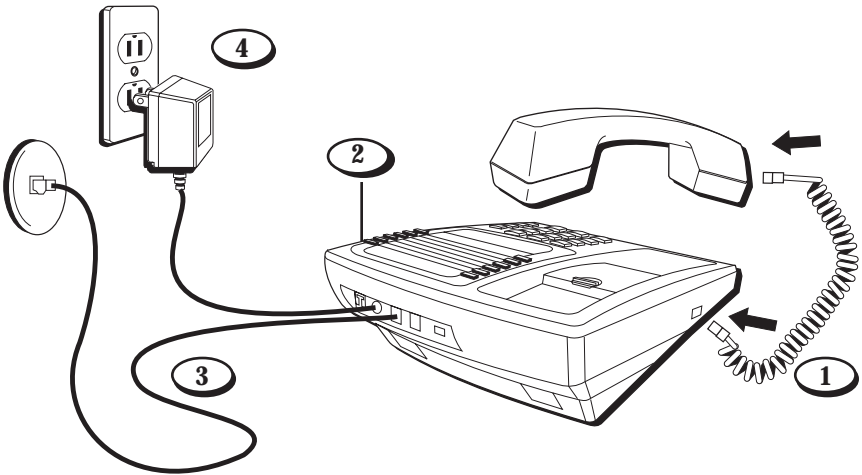


1. Plug the handset cord into the handset and into the telephone jack on the left side of the unit.
2. Set the PULSE/TONE switch (located on the side of the unit) to TONE if you have touch-tone service; set it to PULSE if you have rotary service.
3. Plug the telephone line cord into a modular jack and into the PHONE LINE jack on the back of the unit.
4. Plug the power supply cord into the POWER 9V AC jack on the back of the unit, thread it through the strain relief, and then plug the adapter into an AC power outlet.

CAUTION: Use only the Thomson 5-2381 power supply that came with this unit. Using other adapters may seriously damage the unit.

WALL MOUNT INSTALLATION

1. Rotate the handset hook.
2. Remove the base plate from the back by pressing down on the snap tabs located at the top, and then lifting the base plate off.
3. Plug the phone line cord into the phone jack on the back of the unit, wrap the extra line cord around the cord wrap on the bottom of the base, and then thread it through the bottom of the base plate.
4. Plug the power supply adapter into the POWER 9V AC jack on the back of the unit, and then thread it through the bottom of the base.
5. Reverse the direction of the base plate and replace it by putting the tabs into bottom slots in the middle of the unit first, and then snapping the bottom tabs into place.
6. Set the PULSE/TONE switch (located on the side of the unit) to TONE if you have touch-tone service; set it to PULSE if you have rotary service.
7. Connect the phone cord to the modular jack on the wall.
8. Slip the mounting holes over the wall plate posts and slide the unit down firmly into place. (Wall plate not included.)
9. Plug the handset cord into the handset and into the unit, and then hang up the handset.
10. Connect the AC Power supply adapter to an AC outlet.

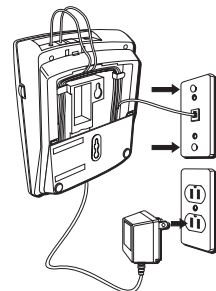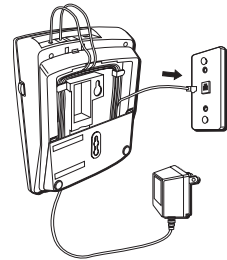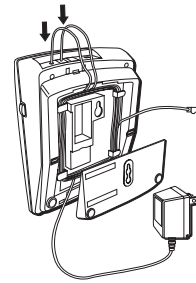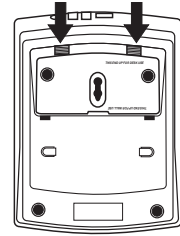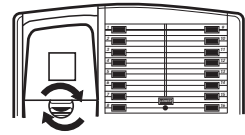


SETUP

The telephone will prompt the initial setup after the 9V battery or AC power supply is connected. The initial setup procedure needs to be completed with the phone "on-hook", which means that the phone line is inactive (the handset in the cradle and the SPEAKER function off). **Do not pick up the handset or press the SPEAKER button during the setup.**

After the initial setup, you can use these same procedures to adjust any of the menu settings by first pressing the MENU button and then using the REVIEW buttons to select the menu item you want to adjust. (During the initial setup you are automatically taken to the next step.)


STEP 1: SETTING THE TIME

1. Press the MENU button.
After the initial setup, the display will show the current time.
2. Press the STORE button.
STORE appears in the display.
3. Use the keypad to enter the correct hour (it must be a two-digit entry, i.e. 07).
4. Use the keypad to enter the correct minutes (it must be a two-digit entry).
5. Press 1 for AM, or 2 for PM.
6. Press STORE within 15 seconds to save the time and go to the next step.

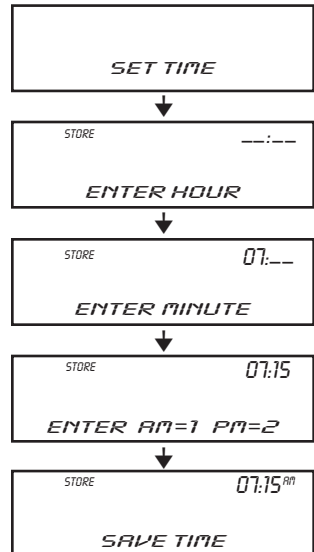


STEP 2: SETTING THE DATE

1. Press the STORE button.
2. Use the keypad to enter the month (it must be a two-digit entry).
3. Use the keypad to enter the date (it must be a two-digit entry).
4. Press STORE within 15 seconds to save the date and go to the next step.

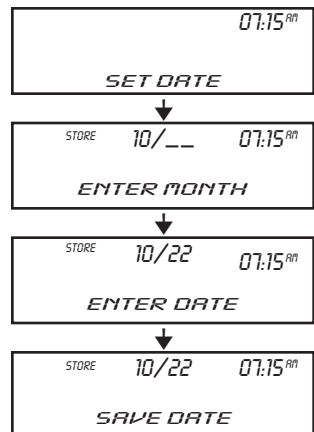


STEP 3: SETTING THE RINGER TONE

1. Press the STORE button.
2. Press REVIEW (up) or REVIEW (down) to sample each of the available settings.
3. Press STORE within 15 seconds to save the desired ringer tone and go to the next step.

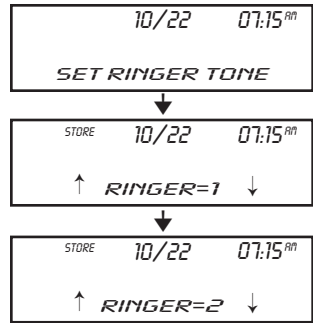


STEP 4: SETTING THE AREA CODE

1. Press the STORE button.
2. Enter your area code.
3. Press STORE within 15 seconds to save the desired area code and go to the next step.

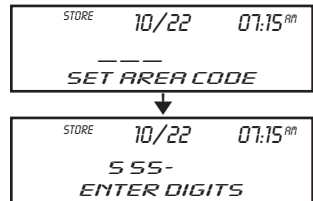


STEP 5: SETTING THE LIQUID CRYSTAL DISPLAY (LCD) CONTRAST

1. Press the STORE button.
2. Press REVIEW (up) or REVIEW (down) to scroll through each of the four settings. Note that 2 is the default setting.
3. Press STORE within 15 seconds to save the desired LCD contrast and go to the next step.

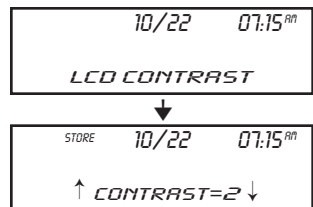

STEP 6: SETTING THE LANGUAGE

1. Press the STORE button.
2. Press REVIEW (up) or REVIEW (down) to scroll through the available languages (English, French and Spanish).
3. Press STORE within 15 seconds to save the desired language. At this point, the phone is ready for use. See "Telephone Operation" on the next page.

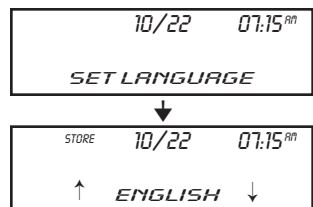

TELEPHONE OPERATION

SPEAKERPHONE LOCATION & USE GUIDELINES

For best speakerphone performance, avoid the following:

- Areas with high background noise. (The microphone might pick up these sounds and prevent the speakerphone from going into the receiving mode when you finish talking.)
- Surfaces affected by vibration.
- Recessed areas such as in a corner, under a cupboard, or next to a cabinet, which can generate an echo effect.


Note the following guidelines when you use the speakerphone:

- The speakerphone works similar to a two-way radio in that you can only listen or talk at one time.
- Stay reasonably close to the phone so that you can be clearly heard by the person to whom you are talking.

UNDERSTANDING THE LCD (LIQUID CRYSTAL DISPLAY) AND MENU SYSTEM

Your Caller ID Telephone has a menu-driven display which not only gives you Caller ID information, but also is used to set up the phone and make adjustments to many of the features.

The following illustration shows you the general components of the display.

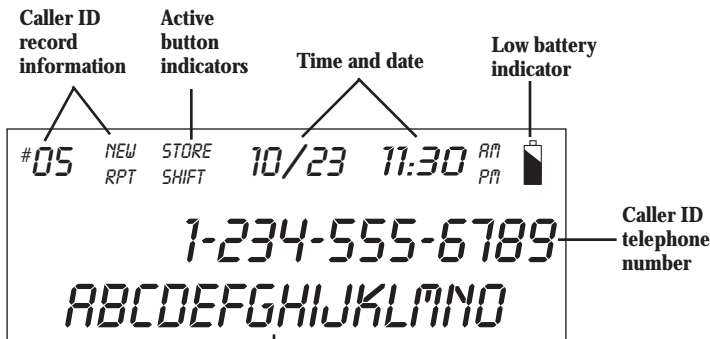

The Alpha line is used for:

- Caller ID Name
- Caller ID Messages
- Menu Information

THE DISPLAY

The LCD also gives you visual feedback as you use the phone. The preceding illustration shows you the various elements of the display. In order to help you to better understand the role of the display, this User's Guide also shows you some of the specific screens you will encounter as you use your phone.

USING THE MENU BUTTON

You already may have used the menu system to set up the phone. If not, you should go back to the preceding section and set up the phone.

After the initial setup, you need to use the MENU button to access the menu in order to make changes to the telephone setup.


After you get into the menu, you can use the REVIEW arrows to scroll through the menus. (See "Setup" for information on how to change the menu settings.)

PLACING A CALL

1. Press the SPEAKER button or pick up the handset.
2. Dial the phone number you want to call.
3. Press SPEAKER or replace the handset to hang up.

THE CALL TIMER

Whenever you make a call, the elapsed time appears in the display to show you the duration of the call.



When you hang up the call timer is reset.

RECEIVING A CALL

1. Check the display to see who is calling.
2. Press the SPEAKER button or pick up the handset to answer.
3. Press SPEAKER or replace the handset to hang up.

SWITCHING BETWEEN SPEAKER AND HANDSET

You can switch between speakerphone and handset after dialing a number, or anytime during a conversation.

- **Speaker to Handset** — Pick up the handset.
- **Handset to Speaker** — Press SPEAKER; then hang up the handset.

ADJUSTING VOLUMES

Use the VOLUME ▼ and ▲ buttons to adjust the volume of the ringer, the speaker, and the handset. You can fast forward or rewind through volume level choices by pressing and holding the VOLUME ▼ or ▲ button. To return to the **normal** volume settings, press both volume arrows at the same time.

ADJUSTING THE RINGER VOLUME

1. With the phone on-hook, press VOLUME ▼ or ▲ button to adjust volume. During the adjusting, the phone will provide a sample of the programmed ringer tones and the volume level. (The display shows the current setting.) Note that 00 is the Ringer OFF position.

10/22	07:15 AM
RINGER - 06 - NORM	

06 is the **normal** volume setting

10/22	07:15 AM
SPEAKER - 08 - NORM	

08 is the **normal** volume setting

ADJUSTING THE SPEAKER VOLUME

1. Press SPEAKER.
2. Press the VOLUME ▼ or ▲ button to adjust volume. (The display shows the current setting.)

10/22	07:15 AM
HANDSET - 04 - NORM	

04 is the **normal** volume setting

ADJUSTING THE HANDSET VOLUME:

1. Pick up the handset.
2. Press the VOLUME ▼ or ▲ button to adjust volume. (The display shows the current setting.) **The handset volume returns to the normal setting when you hang up the handset.**

REDIAL AND BUSY REDIAL FEATURE

The BUSY/REDIAL button does two things; redials the last number you called or automatically redials a busy number up to 10 times until the line is free.

REDIALING THE LAST NUMBER CALLED

1. Press SPEAKER or pick up the handset.
2. Press the BUSY/REDIAL button.

ENHANCED REDIAL

The phone will remember the last 3 numbers dialed out.

1. Press the BUSY/REDIAL button, with the phone on-hook. The last number dialed will be displayed.
2. Press REVIEW ▼ to scroll to the 2 older calls.
3. Press DIAL to redial the number displayed. The phone enters speaker mode and dials the number.

BUSY REDIAL

When you call and get a busy signal, press the BUSY/REDIAL button and then replace the handset to hang up. (If you're using the speakerphone, the unit will automatically hang up.) The phone automatically redials the number (up to 10 times). When it autodial and does not get a busy signal, the phone beeps to let you know that your call has gone through. Then, you can pick up the handset or continue to use the speaker mode.

CANCELLING BUSY REDIAL

There are three ways to cancel Busy Redial: you can pick up the handset; press SPEAKER; or press BUSY/REDIAL.

Note that an incoming call will automatically cancel the busy redial.

ADJUSTING THE DELAY TIME BETWEEN REDIAL ATTEMPTS

The default setting for the amount of time between redials is 30 seconds, but you can adjust the redial delay time to "immediate" up to 90 seconds (in 10 second increments).

1. Press the STORE button.
2. Press a number key (0-9) to choose the amount of time between redials.

0=immediate; 1=10 seconds; 2=20 seconds; 3=30 seconds; 4=40 seconds;
5=50 seconds; 6=60 seconds; 7=70 seconds; 8=80 seconds; and 9=90 seconds

3. Press the STORE button again.
4. Press the BUSY/REDIAL button.

ADJUSTING THE LINE SIGNAL DETECTION DELAY TIME

This adjustment may be needed if the phone company presents a network signal (such a mirrored dialing) before Busy or Ringback signal is presented to the phone that interferes with the BUSY REDIAL. The default delay time for signal detection is .5 seconds.

1. Press the STORE button.
2. Press a number key (0-9) to choose the amount of time for the detection delay. Adjust the detection delay timing at 1 second intervals only until you find the time required for repeatable operation.

0=.5 seconds; 1=1.5 seconds; 2=2.5 seconds; 3=3.5 seconds; 4=4.5 seconds;
5=5.5 seconds; 6=6.5 seconds; 7=7.5 seconds; 8=8.5 seconds; and 9=9.5 seconds

3. Press the STORE button again.
4. Press the SHIFT button.
5. Then press the BUSY/REDIAL button.

HOLD

Use the HOLD button to interrupt a phone conversation without hanging up; then resume the conversation on the same phone or an extension.

1. Press HOLD to place a call on hold. If you're using the handset, you can put it back in the cradle.
2. Press the SPEAKER button, pick up the handset, or press HOLD (if the handset is not in the cradle) to resume the conversation.

NOTE: While a call is on hold, the HOLD indicator will flash, and the phone will beep about every 15 seconds to remind you that the line is on hold.

MUTE

The MUTE button deactivates the microphone for both the speakerphone and the handset, so that anything you say cannot be heard by the caller on the other end of the line.

- Press MUTE once to turn on the feature.
- Press MUTE again to continue the phone conversation.
- Picking up the handset while the speakerphone is muted automatically turns off the mute function.

DO NOT DISTURB

The Do Not Disturb feature lets you mute the ringer volume for a predetermined amount of time so that you are not interrupted by incoming phone calls.


USING DO NOT DISTURB

- Press the NO DISTURB button (the indicator starts blinking). The Do Not Disturb feature is automatically activated for one hour.
- To turn off the feature, you can press the NO DISTURB button again, pick up the handset, or press SPEAKER (the indicator turns off).

PROGRAMMING THE DO NOT DISTURB TIME

You can adjust the amount of time it is active by following these steps:

1. Press the STORE button.
2. Press a number key (0-9) to choose the number of hours you want the feature to remain active from unlimited duration to nine hours (0 = unlimited duration).
3. Press the STORE button again.
4. Press the NO DISTURB button.



TEMPORARY TONE

If you have Pulse (rotary) service, and want to access customer calling services that require Tone dialing (such as getting information from a local bank), you can use this feature.

1. Press the TONE button (*) after you have connected to the customer calling service to enable Tone dialing.
2. When you hang up, the phone automatically resumes Pulse dialing.

FLASH BUTTON

Press the FLASH button to activate customer calling services such as call waiting or call transfer, which are provided by your local phone company. Do not use the hook switch or the speaker button because you might hang up the phone.

ADJUSTING THE FLASH BUTTON TIMING

If you have trouble getting the FLASH button to work properly, you might need to adjust the amount of time that the FLASH button is active. The FLASH default time is .6 seconds. To adjust the time:

1. Press the STORE button.
2. Press a number key (1-9) to adjust the length of time that the FLASH button is active (from .1 to .9 seconds).
3. Press the STORE button.
4. Press the FLASH button.

10/22	07:15 ^{AM}
FLASH = .6	

PAUSE BUTTON

When you store phone numbers in memory, you might need to insert a delay in the dialing, for example when you must dial 9 to get an outside line. Press the PAUSE button at the point in the dialing sequence that requires the delay.

10/22	07:15 ^{AM}
PAUSE = 2	

ADJUSTING THE PAUSE BUTTON TIMING

If you have trouble getting the PAUSE button to work properly, you might need to adjust the amount of time that the PAUSE button is active. The pause default time is AUTO TONE DETECT. To adjust the time:

1. Press the STORE button.
2. Press a number key (0-9) to adjust the length of the delay caused by the PAUSE button (AUTO TONE DETECT to 9 seconds.)
3. Press the STORE button.
4. Press the PAUSE button.

USING THE ALARM

This phone has a built-in alarm feature that you can use as an alarm clock.

SETTING THE ALARM

1. Press the ALARM button.
2. Press the STORE button.
3. Use the number keys to enter the alarm set hour (it must be a 2-digit entry).
4. Use the number keys to enter the alarm set minutes (it must be a 2-digit entry).
5. Press 1 for AM or 2 for PM.
6. Press the STORE button to set the alarm.

CHANGING THE ALARM SETTING

Use the same steps outlined above to change the current alarm setting.

CANCELLING THE ALARM


To cancel the alarm setting before it sounds:

1. Press the ALARM button.
2. Press the DELETE button.

SHUTTING OFF THE ALARM

When the alarm sounds, you can turn it off by pressing the ALARM button, picking up the handset, or pressing the SPEAKER button.

After you turn off the alarm, it automatically goes into "Alarm Off" mode.

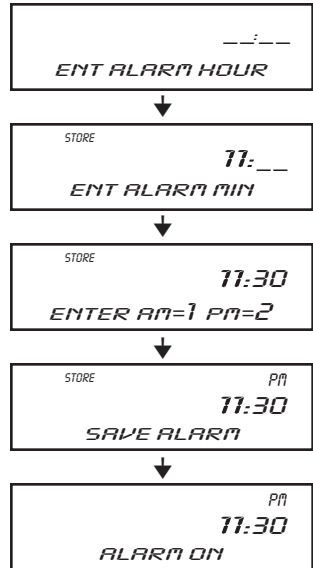

MEMORY DIALING

Each of the 10 memory buttons is capable of storing two separate phone numbers that are up to 31 digits. Each MEMORY button accesses an upper and a lower memory position. You can dial the phone numbers stored in the upper position with one touch (press the MEMORY location button). You can dial the phone numbers in the lower memory position by pressing two buttons (SHIFT and the MEMORY location button).

Note that if no keys are pressed for 15 seconds, the Memory feature automatically turns off.

STORING A NUMBER IN MEMORY

1. Press the STORE button.
2. Dial the number to be stored (up to 31 digits).



The number digits scroll from right to left across the display.

3. Press the STORE button again.
4. Press a MEMORY location button

or

Press SHIFT and then a MEMORY location button to store the number.

5. Remove the memory directory from underneath its plastic cover and record the name of the person whose number you stored.

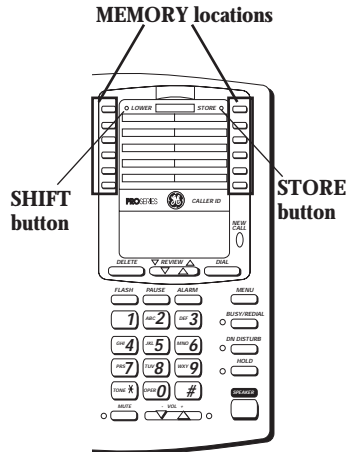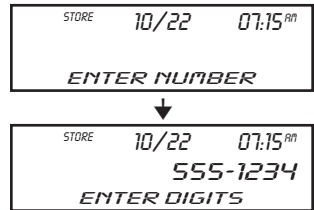

INSERTING A PAUSE IN THE DIALING SEQUENCE

Press the PAUSE button to insert a delay in the dialing sequence of a stored telephone number when a pause is needed to wait for a dial tone (for example after you dial 9 for an outside line, or to wait for a computer access tone). Each pause counts as 1 digit in the dialing sequence.

STORING THE LAST NUMBER DIALED

1. Press the STORE button.
2. Press BUSY/REDIAL.
3. Press the STORE button again.
4. Press a MEMORY location button, or press SHIFT and then a MEMORY location button to store the number.

STORING A CALLER ID NUMBER

1. Press the STORE button.
2. Use the REVIEW ▼ or ▲ button to select a Caller ID record.
3. Press the STORE button again.
4. Press a MEMORY location button, or press SHIFT and then a MEMORY location button to store the number.

<i>STORE</i>	<i>10/22</i>	<i>07:15 AM</i>
	<i>555-6789</i>	
	<i>JANE DOE</i>	

Note: If name information is in the caller ID record, the name will not be stored in the memory location.

IMPORTANT CALL INDICATOR

The IMPORTANT CALL indicator appears in the display when someone calls from a phone number that you have designated as an “important call” number.

You can designate a number as an “important call” number, when you store it in memory using the telephone’s Memory feature.

<i># 3^{NEW}</i>	<i>10/22</i>	<i>07:15 AM</i>
	<i>555-6789</i>	
	<i>IMPORTANT CALL</i>	

DESIGNATING IMPORTANT CALL STATUS

1. Press the MEMORY location button, or SHIFT and the MEMORY location button to bring up the entry.
2. Press the # button to mark the MEMORY location number as an important call number.

	<i>10/22</i>	<i>07:15 AM</i>
	<i>555-6789</i>	

	<i>10/22</i>	<i>07:15 AM</i>
	<i>555-6789</i>	
	<i>IMPORTANT CALL</i>	

IMPORTANT CALL appears at the bottom of the display.

3. Press the MEMORY location button, or SHIFT and the MEMORY location button to confirm the change.

REMOVING IMPORTANT CALL STATUS

1. Press the MEMORY location button, or SHIFT and the memory location button to bring up the entry.

10/22 07:15 AM
555-6789
IMPORTANT CALL

2. Press the # button to remove the important call status from the memory location.

10/22 07:15 AM
555-6789

IMPORTANT CALL is removed from the display.

3. Press the MEMORY location button, or SHIFT and the MEMORY location button to confirm the change.

REVIEWING AND DELETING STORED NUMBERS

In order to view or delete a stored number, the phone must be "on-hook," (handset in the cradle and SPEAKER off).

1. Press the MEMORY location button or SHIFT and then the MEMORY location button to view the entry. If location doesn't contain a number, EMPTY appears in the display.

10/22 07:15 AM
EMPTY

2. While the entry is displayed, press the DELETE key to delete the entry.

10/22 07:15 AM
555-6789
DELETE?

The display asks you to confirm that you want to delete the entry.

3. Press DELETE a second time to delete the entry.

To exit the MEMORY review mode:

- Press the memory location button again.
- or -
- Wait about 15 seconds.
- or -
- Pick up the handset or press SPEAKER.

CHANGING A STORED NUMBER

To change a stored number, you just replace it with a different number using the procedure for storing a number.

DIALING A STORED NUMBER

METHOD 1

1. Pick up the handset or press SPEAKER.
2. Press the MEMORY location button
or
Press SHIFT and then the MEMORY location button.

METHOD 2

Press the DIAL button while viewing a memory location number. (See "Reviewing and Deleting Stored Number" for information on viewing a stored number.)

CAUTION: If you make test calls to emergency numbers, remain on the line and explain the reason for the call to the dispatcher. Also, make these calls in off-peak hours, such as early morning or late evening.

DIALING LONGER NUMBERS FROM MEMORY

With 20 memory locations available, you might want to store frequently used calling card numbers or access codes for frequently used voice menu services such as a local bank's information line. Then, you can use the Chain or Link dialing feature to quickly dial those numbers.

The following examples assume that you have already stored the access code number in one memory location and the security/personal code in another.

CHAIN DIALING

Follow these steps to chain dial the numbers you stored:

1. Press SPEAKER or pick up the handset.
2. Press the access code memory location.
3. Dial the phone number (or press the number's MEMORY location button).
4. Press the security/personal code memory location.

LINK DIALING

Having stored the necessary numbers in separate memory locations, follow these steps to store a link dial number:

1. Press STORE.
2. Press the access code's MEMORY location button.
3. Press PAUSE (if needed).
4. Dial the phone number (or press the number's MEMORY location button).
5. Press PAUSE (if needed).
6. Press the security/personal code's MEMORY location button.
7. Press STORE, followed by the MEMORY location in which you want to store the linked number.

To dial the linked number, press the MEMORY location button in which you stored the linked phone numbers.

CALLER ID OPERATION

Your Caller ID Telephone receives and displays information transmitted by your local phone company. This information can include the phone number, date, and time; *or* the name, phone number, date, and time.

VERY IMPORTANT:

The Caller ID feature of this product requires a subscription to Caller ID service from your telephone company.

RECEIVING AND STORING CALLS

When you receive a call, the information is transmitted by the phone company to your Caller ID Telephone.

- You can monitor the information as it is displayed and decide whether or not to answer the call.
- If you are not at home, the telephone stores the information so that you can see who called while you were out.

REVIEWING MESSAGES

As calls are received and stored, the display is updated to let you know how many calls have been received and how many have been reviewed.

Use the REVIEW buttons to scroll through the list of received calls.

- Press REVIEW ▲ to scroll toward more recent calls (higher numbers).
- Press REVIEW ▼ to scroll toward older calls (lower numbers).


As you review calls, the display shows you the following information:

- The number of the call (with regard to the order received), whether it is a new call, and if a call has been received more than once from the same number.
- The telephone number of the caller (including area code if different than the one you entered during phone setup).
- The name of the caller (if this service is available in your area).

MESSAGE ERRORS

If there is an error in the transmission of information to your caller ID phone; DATA ERROR appears in the display while the phone is ringing. The call won't be recorded as a new call and the erroneous data won't be stored in memory.

Total number of calls in memory




5 10/22 07:15 AM
3 NEW CALLS

Number of new calls


NOTE: Check with your local phone company regarding name service availability.

Indicates that this is the 3rd call in memory and is a "new" call. RPT stands for "repeat call" and indicates that a new call from the same number was received more than once.



3^{NEW}_{RPT} 10/22 07:15 AM
1-234-555-6789
JANE DOE

Caller's name and number is displayed



3^{NEW} 10/22 07:15 AM
DATA ERROR

DELETING RECORDS

Use the DELETE button to delete the record currently shown in the display, or all records.

DELETING THE CURRENT RECORD

1. Press DELETE. The selected record is immediately deleted.

DELETING ALL RECORDS

1. Press and hold DELETE (for approximately 3 seconds).

The display asks you to confirm that you want to delete all records.

2. Press DELETE again to delete all records.

# 3	10/22	07:15 AM
	555-6789	
	ALL DELETE ?	

Display asks you to confirm that you want to delete all messages.

DIALING A CALLER ID NUMBER

CALLING WITHIN YOUR AREA CODE

Press the DIAL button while the number is displayed to dial that number.

If the number is a "local long distance" number (meaning that it is within the area code, but still needs 1+Area Code to connect), press SHIFT and then press DIAL.

# 3 ^{NEW}	10/22	07:15 AM
	555-6789	
	JANE DOE	

Press the DIAL button to call the number shown in the display.

CALLING OUTSIDE YOUR AREA CODE

The unit automatically displays "1" plus the area code of the caller when it is different than the area code you entered during setup.

To call someone from a different area code, press the DIAL button.

If you have trouble dialing a number from outside your area code, try one of the following methods:

- Hang up the phone.
Press SHIFT.
Press 1.
Press DIAL.

This removes the "1" from the dialing sequence.

- Hang up the phone.
Press SHIFT.
Press DIAL.

This removes the "1+Area Code" from the dialing sequence.

See your telephone directory for long distance dialing information.

#	3 ^{NEW}	10/22	07:15 ^{AM}
		1-234-555-6789	
		JANE DOE	

1+Area Code+Number is displayed when a call is received from an area code that is different from the one entered during setup.

NOTE: In order for the Caller ID dialing feature to work, it is important that you entered the correct area code during the setup procedure. If you have not completed the Setup procedure, do so now (see page 6).

MESSAGE INDICATORS

The following indicators show the status of a message or the unit:

BLOCKED CALL	Caller ID information is withheld.
BLOCKED NAME	
BLOCKED NUMBER	
END OF LIST	In REVIEW mode indicates that there is no additional information in caller ID memory.
DATA ERROR	Caller information has been interrupted during transmission or the telephone is excessively noisy.
MESSAGE WAITING	There is a voice-mail message waiting in your mailbox. Note that voice mail is a subscription service; check with your local telephone company for availability.
NEW	Number of unread calls.
RPT	Repeat call message. Indicates that a new call from the same number was received more than once.
REPLACE BATTERY	Indicates low battery voltage.
START OF LIST	In REVIEW mode indicates that you are at the top of the call log.
UNKNOWN CALLER	The incoming call is from an area not serviced by caller ID, or the information was not sent.
UNKNOWN NAME	
UNKNOWN NUMBER	

TROUBLESHOOTING TIPS

CALLER ID

<i>Problem</i>	<i>Solution</i>
No Display	<ul style="list-style-type: none">• If you are using battery power, try replacing the battery.• If you are using AC power, make sure that the unit is connected to a non-switched electrical outlet. Disconnect the unit from the plug and plug it in again. Either the message WAITING or the most recent record is displayed.• Did you order Caller ID service from your local telephone company? This unit requires that you subscribe to Caller ID service in order to work.
Data Error Message	<ul style="list-style-type: none">• The unit displays this message if it detects anything other than valid Caller ID information during the silent period after the first ring. This message indicates either the presence of noises on the line, or that an invalid message has been sent from the telephone company.

TROUBLESHOOTING TIPS

TELEPHONE

<i>Problem</i>	<i>Solution</i>
No dial tone. Won't dial out	<ul style="list-style-type: none">• Check hook switch to make sure it pops up.• Make sure TONE/PULSE is set to correct position.• Unplug the phone, wait 30 seconds and plug the phone back in.
Phone doesn't ring	<ul style="list-style-type: none">• Check RINGER VOLUME.• Could have too many phones on one line.
Low handset volume	<ul style="list-style-type: none">• Check the volume settings.
Light and tone feedback flutter when dialing in PULSE mode.	<ul style="list-style-type: none">• This is normal as power is fluctuating with phone outpulsing.
Can't be heard by other party	<ul style="list-style-type: none">• Make sure phone cord is securely plugged in.• Make sure other phones are not OFF hook at the same time. If so, this is normal condition as volume drops when additional phones are used at once.
Memory dialing	<ul style="list-style-type: none">• Make sure you entered numbers correctly. (See "Memory Dialing.")

GENERAL PRODUCT CARE

To keep your Caller ID phone working and looking good, follow these guidelines:

- Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping the unit and/or other rough treatment.
- Clean with a soft cloth.
- Never use a strong cleaning agent or abrasive powder because this will damage the finish.
- Retain the original packaging in case you need to ship it at a later date.

SERVICE

The FCC requires this product be serviced only by the manufacturer or its authorized service agents. In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Consumer Electronics could void the user's authority to operate this product. For instructions on how to obtain service, refer to the warranty included in this guide or call customer service, telephone number: 800-448-0329.

Attach your sales receipt to the booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

Purchase date _____

Name of store _____

INDEX

B

- Base plate, removing 3
- Battery installation 3
- BUSY REDIAL button 11
- Busy Redial feature 11

C

- Caller ID operation 19
- Chain Dialing feature 18
- Cleaning the phone 26

D

- Do Not Disturb feature 12

F

- FLASH button 13

H

- HOLD button 12
- Hold feature 12

I

- Installation
 - desk or tabletop 4
 - wall mount 5

L

- LCD (liquid crystal display). 7-9
- Link Dialing feature 19

M

- Message Indicators 23
 - Blocked Call 23
 - Blocked Name 23
 - Blocked Number 23
 - Data Error 23
 - End of list 23
 - Message Waiting 23
 - New 23
 - Repeat Call (*RPT*) 23
 - Replace Battery 23
 - Unknown caller 23
 - Unknown name 23
 - Unknown number 23

- MUTE button 12
 - used with Do Not Disturb feature 12
- Mute feature 12

P

- PAUSE Button 15
- Product Care 26

R

- REDIAL button 10
- Redial feature 10
- REPLACE BATTERY message 3
- Replacing the battery 3

S

- SPEAKER button 9
- Speakerphone 8
- Stored numbers, changing 18
- Stored numbers, clearing 18
- Stored numbers, dialing 18
- Switching between speaker and handset 9

T

- Temporary Tone feature 12
- TONE button 12

V

- Volume controls
 - adjusting 10

LIMITED WARRANTY

What your warranty covers:

- Any defect in materials or workmanship.

For how long after your purchase:

- One year.

(The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

What we will do:

- Provide you with a new, or at our option, a refurbished unit.
- The exchange unit is under warranty for the remainder of the original product's warranty period.

How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include in the package evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send standard UPS or its equivalent to:

Thomson Consumer Electronics, Inc.

Product Exchange Center

32 Spur Drive

El Paso, Texas 79906

- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- A new or refurbished unit will be shipped to you prepaid freight.

What your warranty *does not* cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

How state law relates to this warranty:

- This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

If you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.

Model 2-9398
347A8081-0001 (Rev. 1 E/S)
96-10
Printed in China

 **THOMSON CONSUMER ELECTRONICS**

P.O. Box 1976, Indianapolis, IN 46206
© 1996 Thomson Consumer Electronics, Inc.
Trademark(s) ® Registered
Marca(s) Registradas

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>