

DynaGST/1602G

16 Port 10/100/1000Base-T Gigabit Ethernet
Switch with two SFP (mini) GBIC Slots

PN: GEP-33216T



USER'S MANUAL

Content

<u>1. Introduction</u>	1
<u>Features</u>	2
<u>Package Contents</u>	3
<u>2. Hardware Description</u>	4
<u>Front Panel</u>	4
<u>Rear Panel</u>	5
<u>LED Indicators</u>	5
<u>3. Installation</u>	8
<u>4. Network Application</u>	9
<u>5. Troubleshooting</u>	10
<u>6. Technical Specification</u>	12

1. Introduction

Gigabit Ethernet over copper technology is a proven cost-effective way for network equipment to be upgraded from Fast Ethernet to Gigabit speeds. The need of expensive fiber optic cabling for Gigabit speeds is eliminated by using standard 4-pair Category 5e copper cabling. This technology creates high-speed backbone connections between switches, servers, databases, and workstations.

The DynaGST/1602G Gigabit Ethernet switch is an ideal solution for solving traffic congestion at the core of the network. It offers auto-negotiation 10/100/1000Base-T Gigabit Ethernet ports that can significantly improve your network backbone performance. It will also fit into any enterprise level network as an exit to the backbone switch. The DynaGST/1602G provides two mini GBIC Gigabit slots for Gigabit speed network connection.

The DynaGST/1602G Gigabit Ethernet switch features **Auto MDI/MDIX** function for each port and features a store-and-forward switching. It auto-learns and stores source address on a 4K MAC address table.

Features


- Compatible with IEEE802.3 10Base-T, IEEE802.3u 100Base-TX, IEEE802.3z Gigabit fiber and IEEE802.3ab 1000Base-T
- 16 Port Gigabit switch with two Mini SFP GBIC ports
- Automatic MDIX for all ports
- 4K entry MAC address table
- 2Mbit Memory buffer
- IEEE802.3x flow control:
 - Pause frame for 10/100/1000Mbps full duplex
 - Backpressure for 10/100 Mbps half duplex
- Two Mini SFP GBIC socket for Mini GBIC transceiver
- Store-and-Forward architecture support
- One DC fan provides proper ventilation and increases system heat sink performance
- 19" Rack mount design

Package Contents

- DynaGST/1602G Gigabit Ethernet switch
- Power Cord
- Four Rubber Feet
- User Manual



DynaGST/1602G Gigabit Ethernet switch

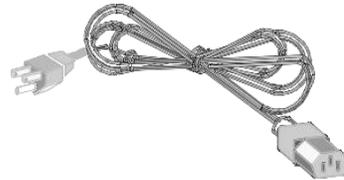

Power Cord



User Guide



Rubber Feet

Figure 1-1. Package Contents

Compare the contents of your DynaGST/1602G Gigabit Ethernet switch package with the standard checklist above. If any item is missing or damaged, please contact your local dealer for service.

2. Hardware Description

This Section describes the hardware of the DynaGST/1602G Gigabit Ethernet switch.

The physical dimensions of the DynaGST/1602G Gigabit Ethernet switch is:
440 x 224 x 44 mm (W x D x H)

Front Panel

The Front Panel of the DynaGST/1602G Gigabit Ethernet switch consists of sixteen (16) auto-negotiation 10/100/1000Mbps Ethernet RJ-45 connectors (with **Automatic MDI/MDIX** support), two Mini GBIC slots, and LED indicators (1000, Link/Activity, Full duplex/Collision) for each Gigabit port and power for the unit.



Figure 2-1. The Front Panel of the DynaGST/1602G Gigabit Ethernet switch

- **RJ-45 Ports (Auto MDI/MDIX):** Sixteen (16) auto-negotiation 10/100/1000 Mbps Ethernet RJ-45 connectors
[**Auto MDI/MDIX** means that you can connect to another switch or workstation with either straight-through or crossover cabling.]
- **Mini GBIC ports:** Ports 15 and 16 auto-detect between the Gigabit copper ports and the Mini GBIC (Gigabit fiber) ports. They support 3.3V Mini SFP GBIC modules. These modules are optional. There are two LED indicators for the Mini GBIC ports – LNK and ACT. If a Mini GBIC module is not installed, ports 15 and 16 operate in Gigabit copper mode only.

[Note] When the Mini GBIC module *is* installed, the Mini GBIC (Gigabit fiber) ports have higher priority than the Gigabit copper ports and supercede them. It doesn't matter if the Gigabit copper port is connected before or after the Mini GBIC port is connected. The Mini GBIC port always has higher priority for connection. When the Mini GBIC port is connected, the Gigabit copper ports are disabled.

Rear Panel

The 3-pronged power plug, on/off switch, and Ventilation fan are located at the rear Panel of the DynaGST/1602G Gigabit Ethernet switch as shown in Figure 2-2. The Switch will work with AC in the range 100-240V AC, 50-60Hz.



Figure 2-2. Rear panel of the DynaGST/1602G Gigabit Ethernet switch

LED Indicators

The LED Indicators give a real-time indication of system operating status. There are three LED-indicators (1000, LNK/ACT, FDX/COL) for each Gigabit port and one Power LED for the entire unit. The following table provides descriptions of LED status.

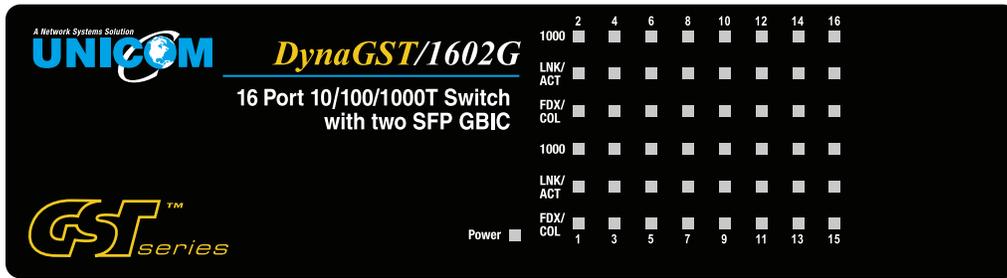


Figure 2-3. LED Indicators

LED	Status	Description
Power	Green	Power On
	Off	Power is not connected
1000	Green	Port is operating at 1000Mbps.
	Off	No device attached or in 10/100Mbps mode
LNK/ACT	Green	Port is connecting with the device.
	Blinking	Port is receiving or transmitting data.
	Off	No device attached.
FDX/COL	Orange	Port is operating in Full-duplex mode.
	Blinking	Packet collision occurred on this port.
	Off	No device attached or in half-duplex mode.

Table 2-1. The Descriptions of LED Indicators

Mini GBIC LED

The two Mini GBIC ports have two LED indicators each – LNK and ACT. The following table provides descriptions of LED status.

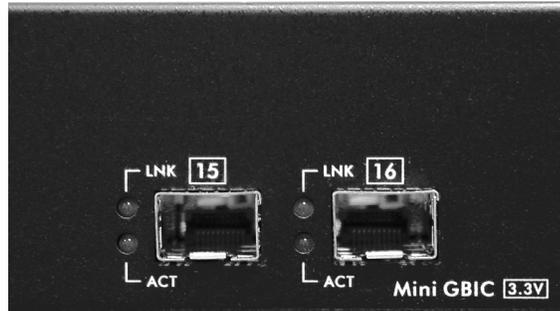


Figure 2-4. Mini GBIC Port LED Indicators

LED	Status	Description
LNK	Green	Port is connecting with device.
	Off	No device attached.
ACT	Green (Blinking)	Port is transmitting or receiving the data.
	Off	No data transmitting or receiving.

Table 2-2. The Descriptions of Mini GBIC LED Indicators

3. Installation

Set the Switch on a sufficiently large flat space with a power outlet nearby. The surface should be clean, smooth, level, and sturdy. Ensure there is enough clearance around the Switch to allow air circulation and the attachment of the power cord and cables.

Attaching Rubber Feet

- Make sure mounting surface on the bottom of the Switch is grease and dust free.
- Remove adhesive backing from your Rubber Feet.
- Apply the Rubber Feet to each corner on the bottom of the Switch.
These footpads protect the Switch from shock and vibration.

Power On

Connect the power adapter cable to the power socket on the rear panel of the Switch. The other end of the power cord connects to the power outlet. Check the power indicator on the front panel to make sure if power is properly supplied.

4. Network Application

This section provides you a sample of network topology in which the DynaGST/1602G is used. In general, the DynaGST/1602G Gigabit Ethernet switch is designed as a high-bandwidth backbone switch.

You can use the DynaGST/1602G to connect servers, switches, workstations, and PCs to each other by connecting these devices directly to the Switch. The Switch automatically learns node address, which are subsequently used to filter and forward all traffic based on the destination address. The Gigabit fiber port is designed to connect the Ethernet network with a fiber network.

For enterprise networks where large data broadcasts are constantly processed, this switch is an ideal link between departmental switches and the core switch. All workstations can connect to departmental switches and those switches are then connected to the DynaGST/1602G Gigabit Ethernet switch. Now all the devices in this network can communicate with each other. Connecting servers to the core switch is important because it allows each workstation to access the server's data.

This switch is a perfect for backbone connectivity.

5. Troubleshooting

The Switch can be easily monitored through panel indicators to assist in identifying problems. This section describes common problems you may encounter and where you can find possible solutions.

■ Diagnosing LED Indicator

If the Link indicator does not light up after connection, check whether the network interface (e.g., a network adapter card on the attached device), network cable, or switch port is defective. Verify that the switch and attached device are powered on. Ensure the cable is plugged into both the switch and corresponding device. Verify the proper cable type is used and its length does not exceed specified limits.

■ Power

If the power indicator does not turn on when the power cord is plugged in, you may have a problem with power outlet or power cord. However, if the Switch powers off after running for a while check for loose power connections, local power losses, or surges at power outlet. If you still cannot resolve the problem, contact your local dealer for assistance.

■ Transmission Mode

Each port will automatically set to the same transmission mode used by the attached device (i.e., half or full duplex). The RJ-45 ports use auto-negotiation to set the transmission mode. If the attached device does not support auto-negotiation then this switch will default to the lowest common speed.

■ Cabling

RJ-45 ports: Use unshielded twisted-pair (UTP) or shielded twisted-pair (STP) cable for RJ-45 connections: 100m. of Category 3,4 or 5 cable for 10Mbps connections, 100m. of Category 5e cable for 100Mbps connections, or 100m. of 4-pair Category 5e copper cabling for 1000Mbps connection. Also be sure that the length of any twisted-pair connection does not exceed 100 meters (328 feet).

6. Technical Specification

The following table provides the technical specification of the DynaGST/1602G Gigabit Ethernet switch.

Standard	IEEE802.3 10Base-T IEEE802.3u 100Base-TX IEEE802.3z Gigabit fiber IEEE802.3ab 1000Base-T IEEE802.3x Flow control
Protocol	CSMA/CD
Technology	Store-and-Forward switching architecture
Transfer Rate	14880 Packets per Second for 10Mbps 148800 Packets per second for 100Mbps 1488000 Packets per second for 1000Mbps
Connector	RJ-45: 16 ports Mini GBIC: 2 x 3.3V Mini GBIC slot
MAC Address	4K Mac address table
Memory Buffer	2Mbits
Network Cable	10Base-T: 2 pairs UTP/STP CAT. 3/4/5 cable EIA/TIA 568 100 Ohm (up to 100M) 100Base-TX: 2 pairs UTP/STP CAT. 5/5e cable EIA/TIA 568 100Ohm (up to 100M) Gigabit Copper: 4 pairs UTP/STP CAT. 5e/6 cable EIA/TIA 568 100Ohm (up to 100M)

LED	<p><i>System: Power</i></p> <p><i>Per RJ-45 port: 1000Mbps, Link/Activity, Full duplex/ collision</i></p> <p><i>Mini GBIC port: Link and Activity</i></p>
Power Supply	Internal power supply, AC 100~240VAC, 50/60 Hz
Power Consumption	60Watts (Maximum)
Operation Temperature	0° to 45°C (32° to 113° F)
Operation Humidity	10% to 90% (Non-condensing)
Dimension	<p>440mm x 224mm x 44mm (W x D x H)</p> <p>17.3" x 8.8" x 1.73"</p>
EMI & Safety	FCC Class A, CE, UL, CE/EN60950



908 Canada Court
City of Industry, CA 91748 U.S.A.
Phone: 626.964.7873 or 800.346.6668 **Fax:** 626.964.7880
www.unicomlink.com e-mail: info@unicomlink.com

UNIDOC021105

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>