

SC200

**200-Channel
Programmable
Twin Turbo
Hand-Held
Sports
Scanner**



OPERATING GUIDE

Precautions

Before you use this scanner, please read and observe the following:

■ **WARNING!**

Uniden **DOES NOT** represent this unit to be waterproof. To reduce the risk of fire or electrical shock, **DO NOT** expose this unit to rain or moisture.

■ **IMPORTANT!**

Be sure to use only the supplied earphone, or a stereo headset of the proper impedance (32 Ω). Use of an incorrect earphone or stereo headset may be potentially hazardous to your hearing.

■ **WARNING:**

Set the volume to a comfortable audio level coming from the speaker before plugging in the supplied earphone or a stereo headset of the proper impedance (32 Ω). Otherwise you might experience some discomfort or possible hearing damage if the Volume suddenly becomes too loud because of the Volume Control or Squelch Control setting. This may be particularly true of the type of earphone that is placed in the ear canal.

■ **NICKEL-CADMIUM BATTERY WARNING**

- This equipment contains a Nickel-Cadmium Battery.
- Cadmium is a chemical known to the State of California to cause cancer.
- The Nickel-Cadmium Battery contained in this equipment may explode if disposed of in a fire.
- **Do not** short circuit the battery.
- **Do not** charge the Nickel-Cadmium Battery used in this equipment with any other AC Adapter/Charger other than the one designed to charge this battery (AD-70U). Using another charger may damage the battery, or cause the battery to explode.

■ **Nickel-Cadmium Battery Disposal**

Nickel-Cadmium Batteries Must Be Disposed Of Properly. Read the Nickel-Cadmium Battery Disposal package insert for important information.

Uniden® and Bearcat® are registered trademarks of Uniden America Corporation.

Sportcat™ is a proprietary trademark of Uniden America Corporation.

Contents

About Your New SportCat	3
What is Scanning?	3
What is Searching?	3
What is CTCSS and CDCSS?	4
Important Notice	5
Types of Communication	5
Where to Obtain More Information	6
Unpacking	6
Feature Highlights	7
Controls and Indicators	9
Top View	9
Front View	10
Setup	15
Installing the Battery Pack	15
Mounting the Flexible Antenna	16
Installing the Belt Clip	16
Using the Earphone	16
Operation Overview	17
Programming Channels	19
Programming By Manual Entry	19
Deleting a Stored Frequency	20
Programming with Search	20
Programming Channels with Alpha Characters	21
Alert Beep Setting	22
Scanning	23
Bank Scanning	23
Priority Scan	24
Delay	24
Locking Out Channels	25
Looking for "Locked Out" Channels	25
Weather Channel Scanning	26
Searching	27
Band Search	27
Limit Search	27
VFO Search	28
Search Skip Frequency	28
CTCSS/CDCSS Operation	29
Programming CTCSS Tone/CDCSS Tone	29
Searching for CTCSS Tone/CDCSS Tones	30
Using Tone Search	31
Using CTCSS Tone or CDCSS Tone Search While Searching	33
Changing a CTCSS/CDCSS Tone	35
Erasing a CTCSS/CDCSS Tone	36

Remote Interface	38
Connecting the Scanner	38
Scanner to External Modem	39
Scanner to Scanner	39
SmartScan Mode	39
Menu for SmartScan	42
Program Lock	42
Transfer Speed	43
Flow Control	43
Dial Type	44
SmartScanner Tips	44
Clone Mode	45
Care and Maintenance	47
Replacing the Battery Pack	47
Location	48
Cleaning	48
Repairs	48
Birdies	49
Proper Care of your Scanner	49
Technical Specifications	50
CTCSS/CDCSS Tone Frequencies (Hz)	52
Optional Accessories and Replacement Parts	53
Troubleshooting	54
One Year Limited Warranty	56


About Your New SportCat

The **SportCat**[™] is a state-of-the-art information radio with automatic scanning capabilities. It can store frequencies such as sporting events, police, fire/emergency, and other communications into 10 banks of 20 channels each. And you can scan all 200 channels at super fast Turbo Scan speed.

What is Scanning?


Unlike standard AM or FM radio stations, most two-way communications (listed below) do not transmit continuously. The **SportCat** scans programmed channels at the rate of nearly 100 CH per second until it finds an active frequency.

Scanning stops on an active frequency, and remains on that channel as long as the transmission continues. When the transmission ends, the scanning cycle resumes until another transmission is received. Or, you can select an optional delay so the scanner stays on the channel for 2 more seconds after the transmission stops, waiting for another transmission, before resuming scanning.

While the **SportCat** is scanning channels, it is in “SCAN Mode”. When you stop the scanning with , it is in “MANUAL Mode”.

What is Searching?

The **SportCat** can search each of 12 preprogrammed bands to find active frequencies. This is different from scanning, because you can search for frequencies that have not been programmed into your **SportCat**. You can also search within the range of frequencies you have programmed before. You can set the direction of searching as well as the speed. The Turbo Search feature, new for Uniden scanners, can search VHF bands at up to 3 times the normal speed.

When the **SportCat** is searching for active frequencies, it is in “TURBO SEARCH Mode” or “TWIN TURBO SEARCH Mode”. When you stop the search with , it is in “SEARCH HOLD Mode”.

What is CTCSS and CDCSS?

The term “Continuous-Tone-Controlled-Squelch-System” (herein referred to as CTCSS) and “Continuous Digital-Controlled-Squelch-System” (herein referred to as CDCSS) shall define a system where the radio receiver (s) are equipped with tone or data responsive devices which allow audio signals to appear at the receiver audio output, select voice processing such as scrambling, select between voice or data, or control repeater functions, only when a carrier modulated with a specific tone or data pattern is received.

CTCSS and CDCSS are used for many purposes. In many cases, CTCSS and CDCSS are used to restrict access to a commercial repeater, so that only those units which transmit the correct tone along with their signal can “talk to the repeater.” You may also need to have your scanner coded correctly to “hear” the repeater.

CTCSS and CDCSS are also used in areas of high interference where there are several stations with output frequencies in close proximity with one another. When this occurs, you may hear multiple communications at the same time. The stations could even interfere with each other to the point where it is impossible to clearly receive either one. When your receiver, in this case, a scanner, is equipped for CTCSS and CDCSS, you can code each received frequency with a specific CTCSS and CDCSS frequency. Then, when multiple signals are broadcast, you will only hear the transmission with the CTCSS tone or CDCSS tone you have programmed. If you do not receive the correct tone with a signal, the squelch of your scanner remains closed and you will not hear anything.

Establishment of the CTCSS tone and CDCSS tone for each transmitter (or repeater) is usually done through the cooperative setting of standards by local frequency allocation groups.

Important Notice

- This scanning radio has been manufactured so that it will not tune to the radio frequencies assigned by the FCC for cellular telephone usage. The Electronic Communications Privacy Act of 1986, as amended, makes it a federal crime to intentionally intercept cellular or cordless telephone transmissions or to market this radio when altered to receive them.
- The installation, possession, or use of this scanning radio in a motor vehicle may be prohibited, regulated, or require a permit in certain states, cities, and/or local jurisdictions.
Your local law enforcement officials should be able to provide you with information regarding the laws in your community.
- Changes or modifications to this product not expressly approved by Uniden, or operation of this product in any way other than as detailed by this Operating Guide, could void your authority to operate this product.

Types of Communication

You will be able to monitor communication such as:

- » Automobile, boat, and marathon races
- » Golf tournaments
- » Traffic information
- » Police and fire department (including rescue and paramedics)
- » NOAA and Canadian weather broadcasts (10 preprogrammed channels)
- » Land transportation, such as trucking firms, buses, taxis, tow trucks, and railroads
- » Marine and amateur radio.
- » Aircraft
- » Public Service 800 MHz band

And many more in the following 12 Bands:

RANGE (MHz)	STEP (kHz)	BAND	SUBJECT
29.0000-29.9950	5	NFM	10 Meter Amateur Band
30.0000-49.9950	5	NFM	VHF Low Band
50.0000-54.0000	5	NFM	6 Meter Amateur Band
108.0000-136.9875	12.5	AM	AM Aircraft
137.0000-143.9950	5	NFM	Military Land Mobile
144.0000-147.9950	5	NFM	2 Meter Amateur Band
148.0000-174.0000	5	NFM	VHF High Band
406.0000-419.9875	12.5	NFM	Federal Govt. Land Mobile
420.0000-449.9875	12.5	NFM	70 cm Amateur Band
450.0000-469.9875	12.5	NFM	UHF Standard Band

RANGE (MHz)	STEP (kHz)	BAND	SUBJECT
470.0000-512.0000	12.5	NFM	UHF "T" Band
806.0000-823.9875	12.5	NFM	Public Service "800" Band
849.0125-868.9875	12.5	NFM	
894.0125-956.0000	12.5	NFM	

Important! *The SportCat will not tune within the Cellular Telephone Band.*

Where to Obtain More Information

The Bearcat Radio Club and other similar hobby clubs have publications, information on computer bulletin boards, and even contests for the radio enthusiasts. See the enclosed pamphlets for more information. Additional information is also available through your local library.

Unpacking

Carefully check the contents against this list:

- **SportCat** Twin Turbo Sports Scanner
- Rubber Antenna
- AC Adapter/Charger (AD-70U)
- Earphone
- Belt Clip with 2 Screws
- Battery (BP-180)
- Remote Cable
- This Operating Guide
- Frequency Directories Order Form and Betty Bearcat Club Information
- SportCat Frequency Guide
- Nickel-Cadmium Battery Disposal Notice
- Product Registration Form

If any items are missing or damaged, call the Uniden parts department at the number below.

Please read this Operating Guide thoroughly before operating the scanner.

Uniden Parts Department
(800) 554-3988

Hours are 8:30 a.m. to 5:00 p.m. Central Time
Monday to Friday

We can also be reached on the web at
www.uniden.com


Feature Highlights

- ◆ **Twin Turbo Scan & Search** —This lightning-fast technology enables the **SportCat** to scan nearly 100 channels per second. Search speed is selectable between 100 and 300 steps per second. (300 steps per second only in bands with 5 kHz steps.) Because the frequency coverage is so large (see previous section for band listing), very fast scanning and searching are essential.
- ◆ **200 Channels** You can program each of these memory channels to store one frequency.
- ◆ **12 Bands, 10 Banks** Includes 12 Bands, with Aircraft and 800 MHz. 10 Banks of 20 channels each are useful for storing similar frequencies in order to maintain faster scanning cycles.
- ◆ **29 MHz - 956 MHz** Indicates the range of frequencies that can be searched within the bands of your scanner.
(*Note: The frequency coverage is not totally continuous from 29.0 MHz to 956 MHz.*)
- ◆ **10 Priority Channels** You can assign *one* Priority Channel in each Bank. Assigning priority channels allows you to keep track of activity on your most important channel(s) while monitoring other channels for transmissions. (Priority Channels are initially set in the first channel in each Bank.)
- ◆ **Weather Channels** Lets your scanner function as a weather information radio.
- ◆ **Memory Backup** The stored channels are retained in memory permanently.
- ◆ **Programmable Alpha Characters** You can program up to 200 channels with alphabetical characters for easy reference.
- ◆ **Band Search** You can search within the preprogrammed bands.
- ◆ **Limit Search** You can search within a specific range of frequencies.
- ◆ **VFO Search** You can search by using the VFO control.
- ◆ **Alert Beep** If the **SportCat** finds a transmission on a channel you have preset, it beeps twice.
- ◆ **Auto Light** The **SportCat** can turn on its backlight automatically when it finds a transmission if this function is activated.

- ◆ **Smart Scanner** Automatically programs your SC200 with all the frequencies and Alpha Characters of the frequency for your local area by accessing our national database with your PC or just an external modem. (No PC required.)
- ◆ **CTCSS/CDCSS** (Continuous Tone Controlled Squelch System), (Continuous Digital Controlled Squelch System). When activated, the **SportCat** will only tune to a frequency if the associated CTCSS tone or CDCSS tone you have programmed is included with the transmission. You can also use this feature to search for a CTCSS tone or CDCSS tone when monitoring a transmission.

Controls and Indicators

Top View

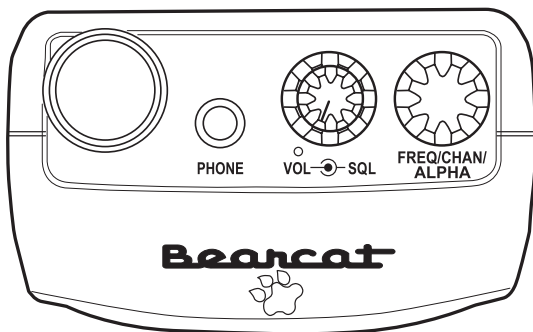

Antenna Connector

Connect the rubber antenna to the BNC connector and turn clockwise until it locks.

Earphone Jack

Plug the supplied earphone into this jack for private listening. When the earphone is connected, the internal speaker is disconnected.

Note the warning on page 16.

SQUELCH Control

Adjust this control to set the scan threshold and to eliminate the background rushing noise heard in the absence of an incoming signal. See the Operation Overview Section for adjustment procedures.


ON-OFF/ VOLUME Control

Use this control to turn the scanner on or off, and to adjust the volume.

VFO Control


Use this control to select channels in Manual mode, select the band for Band Search, and select frequencies in Band/Limit Search mode. You can also use this to program Alpha Name characters and CTCSS/CDCSS Data.



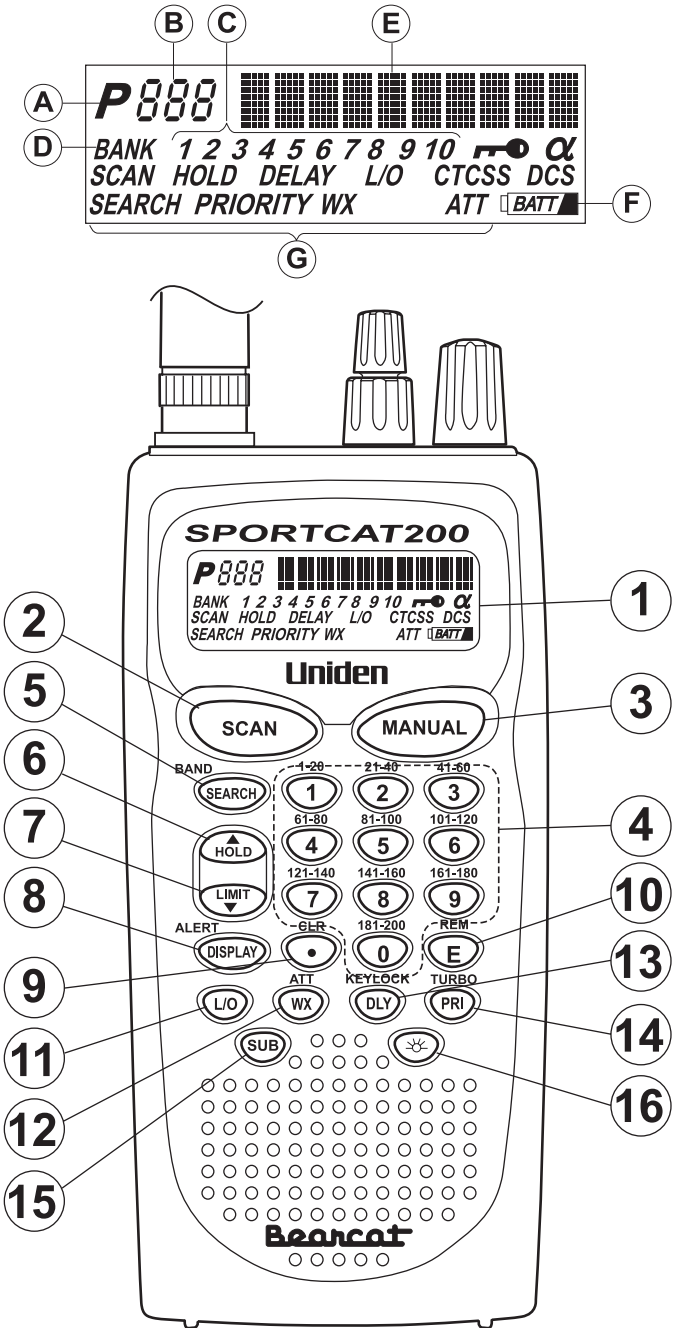

Front View













1. **LCD DISPLAY** — The liquid crystal display (LCD) shows the current channel and frequency. It also displays the mode, status, and bank indicators.
 - A. **Priority Channel Indicator** — **P** appears when the scanner stops on a Priority Channel.
 - B. **Channel Number** — Indicates the current channel that the scanner is on.
 - C. **Memory Bank Numbers** — Each Memory Bank consists of 20 channels that you can select or deselect during scanning operation, using the numeric keypad. When you select a Bank, its number appears on the display. When you deselect a Bank, its number disappears from the display. When you press **MANUAL** to stop scanning, only the Bank of the current channel appears.
 - D. **Bank Indicator** — Appears with the Bank Numbers (1~10).
 - E. **Frequency Indicator** — Indicates the frequency being received by the scanner, or Alpha Name, etc.
 - F. **Low Battery Indicator** — Appears on the display when the Battery Pack is low and needs recharging.
 - G. **Mode/Function Indicators** — *(Only the active mode(s)/function(s) are displayed during operation.)*

SCAN	Indicates SCAN and WEATHER SCAN HOLD.
SEARCH	Indicates SEARCH Mode. Flashes when in TURBO SEARCH Mode.
PRIORITY	Indicates PRIORITY SCAN is activated.
HOLD	Indicates MANUAL and WEATHER SCAN HOLD or SEARCH HOLD Mode.
DELAY	Indicates DELAY is activated.
L/O	In MANUAL Mode, indicates the channel shown is “Locked Out”. In SEARCH HOLD Mode, indicates the frequency shown is “Locked Out”.
WX	Indicates WEATHER SCAN Mode.

- ATT** Appears when the Attenuator function is set.
-  Indicates the keypad is locked.
- α** Appears when the display mode is Alpha Name mode.
- CTCSS** Appears when the Subaudible Tone function is turned on and a CTCSS tone is associated on the display channel.
- CDCSS** Appears when the Subaudible Tone function is turned on and a CDCSS tone is associated on the display channel.



- Press  to start scanning all programmed channels that are not locked out. (**SCAN** moves across the display during scanning.)
- In **SCAN** and **WX** or **SEARCH** Mode, press  to stop scanning. (**HOLD** appears on the display.) In **Manual** mode, press  to step up the channel.
- NUMERIC KEYPAD** — Use these keys to program a channel for scanning. Also use to access a channel directly with . During **SCAN** Mode, use these keys to select or deselect any of the 10 memory banks. (Only the selected bank indicator(s) appear on the display.)



Note: *You cannot deactivate all 10 banks at the same time.*

Key	Bank	Channel
	1	1 - 20
	2	21 - 40
	3	41 - 60
	4	61 - 80
	5	81 - 100
	6	101 - 120
	7	121 - 140
	8	141 - 160
	9	161 - 180
	10	181 - 200

5. Press and hold **SEARCH**/**BAND** to start Limit search. The VFO knob allows you to toggle through the bands. Then press **SEARCH**/**BAND** again to start band search.
6. Press **HOLD** to stop Band search, Limit search and WX scan. Also, press it to move to next higher channel or frequency. Press and hold **HOLD** to change the search direction to upper side.
7. In Limit search, input the frequency and press **LIMIT** to program the lower/higher frequency. Press **LIMIT** to stop Band search, Limit search, and WX scan. Also, press it to move to next lower channel or frequency. Press and hold **LIMIT** to change the search direction to lower side.
8. Press **DISPLAY**/**ALERT** to change the display mode when you program frequency or Alpha characters. Press and hold **DISPLAY**/**ALERT** to set the Alert Beep function in Manual mode.
9. Use **CLR** to enter the decimal point when programming a frequency into a channel. If you make an entry error, press **CLR** before the **E** key to erase the entry, and start over. Also, use **CLR** to clear the error message display.
10. Press **E** to store a displayed frequency and CTCSS/CDCSS Data and Alpha characters into any displayed channel.
11. Press **L/O** to "Lock Out" or prevent scanning of the displayed channel, including Priority Channels. (**L/O** appears on the display.) To unlock a channel, press **L/O** again. **L/O** can be used for Scan or SEARCH Modes.
12. There are 10 Preprogrammed NOAA and Canada weather channels. Press **WX**/**ATT** to find the active NOAA and Canada weather channel in your area. **WX** appears on the display in Weather Mode. If you want to set or reset the Attenuator function, press and hold **WX**/**ATT**.

13. Press **(DLY)/KEYLOCK** to turn ON or OFF the automatic 2-second delay during scanning or searching for active frequencies. (When delay is activated, **DELAY** appears on the display.) In this mode, when the scanner monitors an active frequency, searching or scanning will not resume until transmission stops for 2 seconds.

Press and hold **(DLY)/KEYLOCK** until  appears on the display. This disables the keypad and VFO control and prevents any accidental key entries. To enable the keypad, press and hold **(DLY)/KEYLOCK** until  disappears from the display.

14. While Scanning, press **(PRI)/TURBO** to activate the PRIORITY SCAN function. (**PRIORITY** appears on the display.) While Searching, press **(PRI)/TURBO** to toggle between 100 steps and 300 steps per second. (When in TURBO SEARCH is activated. **SEARCH** flashes on the display.)
15. Press **(SUB)** to turn the Subaudible tone Mode on/off. Press and hold **(SUB)** to turn the Subaudible tone search on/off.
16. Press  to turn the LCD Back light on and off. Press and hold  for 2 seconds to make the scanner turn the LCD Back Light on when a transmission is found (Auto Light function).

Setup

The **SportCat** comes with a rechargeable Nickel-Cadmium Battery Pack. When fully charged, this Battery Pack will supply up to 12 hours of dependable use. (With the Squelch control in “closed” position.)


Before using the **SportCat** for the first time, or whenever the **LOW BATTERY** Indicator appears on the LCD display, you should fully charge the Battery Pack.

Note: *When the Battery Pack is low, the Low Battery Indicator will start to blink. After about 10 minutes, the scanner will shut itself off to prevent the battery from becoming completely discharged.*


Before charging, you must first install the Battery Pack according to the steps below.

Installing the Battery Pack


1. Open the cover.

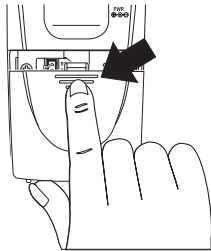

2. Insert the battery pack.

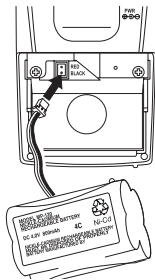

3. Replace cover and press down until it clicks into place.




Mounting the Flexible Antenna

Place the end of the antenna onto the BNC connector on top of the scanner and turn clockwise until tight.

Installing the Belt Clip

1. Place the Belt Clip on the mounting area on the back of the scanner, making sure the holes in the clip line up with the threads in the back of the scanner.

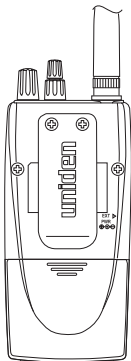

2. Insert the 2 screws into the corresponding holes and tighten.

CAUTION: Do not tighten the screws too tight. You could damage the case or clip.

Using the Earphone

The PHONE jack at the top of the **SportCat** is a standard 3.5mm stereo phone jack. You can use either the supplied earphone, or a stereo headset of the proper impedance (32). The output of this jack is monaural audio, but you will hear it in both headphones of a stereo headset.

IMPORTANT!

Be sure to use only the supplied earphone, or stereo headset of the proper impedance (32). Use of an incorrect earphone or stereo headset may be potentially hazardous to your hearing.

WARNING: To avoid discomfort or possible hearing damage, be sure to set the Volume Control before plugging in the earphone or proper headphones. A sudden opening of the Squelch may cause unexpected loud audio.

Operation Overview

Note: Before operating the **SportCat** for the first time, make sure you have fully charged the Battery Pack.

1. Before turning on the scanner, rotate the Squelch Control fully clockwise.
2. Turn the scanner on by rotating the On-Off/Volume Control clockwise until you hear a click. Turn the Volume Control a small amount clockwise to a low listening level.
3. You should hear either a “rushing” noise or some communications. If you are monitoring a transmission, wait until it stops before adjusting the Squelch Control.
4. Readjust the volume to a comfortable listening level.
5. Turn the Squelch Control counterclockwise *just* until the rushing noise disappears. At the squelch threshold, any incoming signal just slightly stronger than the noise will open the squelch. Any communication that is received will open the Squelch, and stop scanning or Searching.

Note: If squelch is set too tight, that is, too far **counterclockwise** from the threshold point, a much stronger signal is required to open the squelch. If squelch is set on a point **clockwise** from the threshold, you will hear a constant sound (noise, if no signal is present.) The scanner will not scan.

The **SportCat** has 200 memory channels, each of which can be programmed to store one frequency. The channels are divided into ten 20-channel banks, useful for storing similar frequencies in order to maintain faster scanning cycles.

You can monitor communication in one of two ways:

- **BANK SCAN** If you have programmed channels, you can scan all programmed channels in the selected bank(s), except locked out channels. When the scanner stops on an active frequency, it remains on that channel as long as the transmission continues. When the transmission stops, the SportCat resumes scanning. If the Delay Function is on, the scanner remains on the same channel for 2 more seconds, waiting for a responding transmission. If there is no responding transmission within 2 seconds, the scanning cycle resumes.


Any channels that are not programmed (000.0000) are skipped during scan.

When the **SportCat** is in SCAN Mode, the display will look something like this:






- **SEARCH** The Search function is *different* from Scan. When you select a frequency band to search, the scanner searches for any active frequency within the lower and upper limits of the band. Also, when you program frequency range, you can search within the frequency range. When an active frequency is found, the scanner stops on that frequency as long as the transmission lasts. If the Delay Function is on, the scanner remains on the same channel for 2 more seconds, waiting for a responding transmission. If there is no responding transmission within 2 seconds, the search cycle resumes.

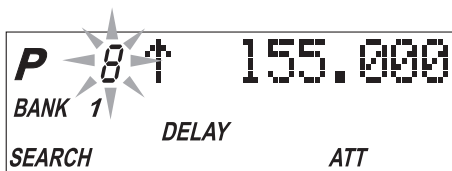When the **SportCat** is on SEARCH Mode, the display will look something like this:



Programming Channels

Before you can scan, you must program the channels within a bank. You can store one frequency per channel, up to 200 channels.

Note: If  appears on the display (keypad Locked), unlock the keypad by pressing and holding /KEYLOCK until  disappears.

There are four ways to program a channel:

- Manually select a channel and frequency, using the numeric keypad. You can determine the frequencies you want from the Betty Bearcat (or similar) Frequency Book (optional), or from the **SportCat** Frequency Guide (included).
- Search a band to find an active frequency, and then directly store it into a channel.
- SmartScan Mode P39
- Clone Mode P45

A. Programming By Manual Entry

1. Select a frequency from the appropriate Frequency Directory.


Example: Program 125.2500 MHz into Channel 18.

2. Press  to stop scanning.


3. Press    to go to Channel 18.

4. Enter the frequency number using the numeric keypad. (Be sure to include the decimal point.)

     .

If you make a mistake and want to clear the entry, press  and re-enter the frequency.



5. Press  to store the entry. The frequency on the display will blink twice to confirm the programming.

Note: To enter frequency in manual mode, Tone Search must be turned off.

See page 31, "Using Tone Search."

- If that frequency is already stored in another channel, you will hear a “beep”, and the other channel number will appear on the display. If you want to store the frequency in the selected channel (18) as well, press **(E)** again. The frequency will blink twice to confirm the programming. Or, you can press **(●)** and enter another frequency for the currently selected channel.

Note: Any frequency already stored in any channel will automatically be replaced by the new one.

- If you try to enter a frequency that is outside one of the 12 Bands, you will hear a “beep”, and the word “**Error**” appears on the display.

Press **(●)** and re-enter the correct frequency.



- To program another channel, repeat the above procedures.

Deleting a Stored Frequency

To delete a frequency from a channel:



- Display the channel and frequency that is to be deleted.
- Press **(0)** on the numeric keypad.
- Press **(E)**. The current channel is erased, and the display shows **000.0000**.

Note: That channel will be skipped during scanning.








B. Programming with Search

The Search feature enables you to rapidly search for active frequencies within the specified band limits. When an interesting frequency is found, you can store it into a channel using the procedure below. For more information about SEARCH Mode, see the section titled “Searching”.

- Press and hold **(SEARCH)**/**BAND** to enter the BAND SEARCH Mode.



2. Use the  and  keys or VFO control until you see the Band you want.




3. Wait for at least 2 seconds or press /**BAND** for Search to begin. If you wish to change the search direction, press and hold  or  to search in an up or down direction.
4. When Search stops on a desired frequency, press  or  to stay on that frequency.
5. To store the displayed frequency into a channel:
Select the channel number with the numeric keys, and press . The selected channel will appear on the display. The frequency currently stored in the channel will appear for 2 seconds and then will be replaced by the frequency located from the search.
6. To store the displayed frequency into that channel, press . The frequency will blink twice to confirm the programming. The next available empty channel to store the frequency will be blinking on the display.



Programming Channels with Alpha Characters

Use this feature to name channels (up to 200 channels) for easy reference.

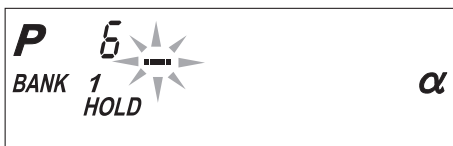
1. Select the channel.
2. Press /**ALERT** to go to the Alpha Name display, “**α**” appears on the display.
3. Press . The Edit cursor flashes.



Note: *If the frequency of the channel has not been programmed, you cannot program the Alpha Name on the channel.*

4. To select the edit position, press  to move the Edit cursor to the right or  to move it to the left.

5. Select the character using VFO Control. Turn clockwise to move 0 - 9, A - z and other characters and stop the control at the letter you wish to store.
6. Repeat the steps 4 and 5 for all the characters you want to program.

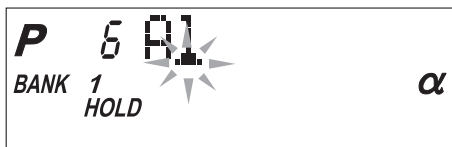

7. When you complete the input, press **(E)**. The words you have programmed flash twice.



Alert Beep Setting

When a transmission occurs on a channel on which you have set the Alert Beep function, 2 beeps will let you know that your “favorite” channel has been received.


You can set this function for each channel. Select a channel, then press and hold **(DISPLAY) / ALERT** to set this function on a channel in Manual mode.

[] appears on the display. (Except in Alpha Name display Mode)

You cannot set this function for the channels which have not been programmed before.

Scanning

Bank Scanning





1. If **SCAN** is not indicated on the display, press  .
The **SportCat** should begin scanning.



The indicators for the selected Banks (1 through 10) appear on the display. The indicator of the Bank currently being monitored flashes. While the **SportCat** is scanning, the word **SCAN** moves across the display.

Scanning stops on any active channel that is not “Locked Out”, and displays the Channel Number and frequency or Alpha Name. Scanning resumes automatically after the transmission stops.

2. You can deselect any bank(s) from being scanned by entering the number of the bank. The deselected bank indicator(s) disappear from the display, and those channels will not be scanned. This procedure helps to speed up the scanning cycle.

Note: *One Bank must always be active. You cannot deactivate all 10 banks at the same time. If you try to deactivate all 10 Banks, Bank 1 will automatically be active.*

3. To restore any bank for scanning, just enter its number again. The bank indicator will reappear on the display.
4. To stop scanning any time, press  . (**HOLD** appears on the display.) The scanner remains on the displayed channel, and only the bank indicator for that channel appears. Press  , to resume scanning.
5. When you are stopped at a channel, you can press  to step down a channel, or  to step up a channel. Press and *hold* either key to rapidly step through the channels.

Note: *You do not skip a locked out (“**L/O**”) channel when you use  or .*

To access a specific channel:

1. Press **MANUAL**.
2. Enter the channel number using the numeric keys.
3. Press **MANUAL** again.

Priority Scan

The **SportCat** has 10 Priority Channels, 1 per Bank. Initially these are the first channel in each Bank. (e.g. Channel 1, Channel 21, Channel 41, and so on.) In priority scan mode, the scanner checks the Priority Channel(s) every 2 seconds during the Scan cycle. If a transmission is received, the scanner will stop at that channel. If the Priority Channel in any Bank is "Locked Out", it will be skipped during scanning.

You can move the Priority to any other channel in a Bank as follows:

1. Go directly to that channel using any of the methods described above.
2. Press and hold **PRI** for at least 2 seconds. You will hear "two beeps," and **P** will appear on the display to the left of the new channel number. That channel will now be the Priority Channel for that Bank. (The **P** will no longer appear for the previous Priority Channel.)

To activate Priority Scan, press **PRI**. The **PRIORITY** indicator will appear at the bottom of the display. To deactivate Priority Scan, press **PRI** again. The **PRIORITY** indicator will disappear from the bottom of the display.

Delay

Normally the scanner will resume scanning when a transmission stops. If you want to remain on a channel until a responding transmission is received, activate the **DELAY** feature. This feature can be active in **SCAN**, **MANUAL**, **SEARCH**, and **WEATHER** Modes.

1. Press **DLY**. The **DELAY** indicator appears on the display. The scanner will now pause 2 seconds after transmission stops before resuming scanning.
2. Press **DLY** again to deactivate Delay. The **DELAY** indicator disappears from the display.

Locking Out Channels

You may have programmed certain channels that you do not want to hear every time you scan. These might be channels that are busy a major portion of the time, causing the scanner to stop at the channel(s) often enough to interrupt the scan cycle. You can Lock Out those channels so they are not scanned.

1. Go directly to the channel using any of the methods described above.
2. Press **L/O**. **L/O** appears on the display.

That channel is now “Locked Out” of the scanning cycle.

To include the channel back in the scanning cycle:

1. Go directly to the desired channel.
2. Press **L/O**. The **L/O** indicator now disappears from the display, and the channel is no longer “Locked Out”.

You can lock out any or all of the Priority Channels in the same way as other channels. If you lock out all Priority Channels you will see this message in Priority Mode:



P 6 PRI Locked
BANK 1
HOLD DELAY L/O
ATT

You can also remove **L/O** from all “Locked Out” channels in the selected Scan Banks (those appearing on the display.) Press and hold **L/O** for at least 2 seconds. You will hear 2 beeps and all channels except empty channels (000.0000MHz) are returned to the scanning cycle in the selected Scan Banks.

Looking for “Locked Out” Channels

During scanning, you will not see “Locked Out” channels. To look for “Locked Out” channels, first press **MANUAL** to stop scanning. Then use **HOLD** or **LIMIT** to step through the Bank. You will see **L/O** on the display to indicate a “Locked Out” channel.

Weather Channel Scanning

The **SportCat** is designed to search for your local NOAA and Canada weather channel(s) from 10 preprogrammed NOAA and Canada channels.

1. Press **(WX)/ATT** to begin Weather scan. **WX** appears at the lower side of the display and the word **SCAN** moves across the display.
2. When the Weather scan finds an active channel in your area, the scanner stops at that frequency.
3. To stay at that frequency, press **(HOLD)** or **(LIMIT)**. To resume Weather scan, press **(WX)/ATT**.

It is possible for you to hear more than one Weather broadcast in your area. If the broadcast sounds weak and distant, press **(WX)/ATT** again to look for a closer station. Or, press **(HOLD)** or **(LIMIT)** to move to another station.

4. To exit Weather Mode, press **(SCAN)**, **(MANUAL)** or **(SEARCH)/BAND**.

Note: All weather channels transmit continuous broadcasts. Once the Weather scan stops on a transmission, it will remain on that channel. Weather scan will not resume automatically. You must press **(WX)/ATT** again to reactivate scanning.

In some parts of the country, you may not be able to monitor weather broadcasts, such as in low-lying areas. Normally a higher location will improve the reception.

Searching

Band Search

The **SportCat** has 12 Preprogrammed Search Bands. You can search any of these Bands to find desired frequencies if you do not have a Frequency Directory handy, or if new stations have been added since the Directory was published.

1. Press and hold **SEARCH**/**BAND** to enter the Band Search Mode. Then the upper and lower limits of the band currently selected are displayed.
2. Use VFO control, **HOLD** or **LIMIT** to select the band you wish to search.
3. Wait for about 2 seconds and the **SportCat** will begin searching that Band. Or, press **SEARCH**/**BAND** again to begin.
4. During a Search, press **PRI**/**TURBO** to activate TURBO SEARCH. In some band Searches TURBO SEARCH is not available. If this is the case, an Error tone will be heard. This increases the Search Speed to 300 steps per second in those bands that have 5 kHz steps. (See the table on page 5 for the Band Chart.) When you activate TURBO SEARCH, the SEARCH indicator flashes. Press **PRI**/**TURBO** again to deactivate TURBO SEARCH.
5. Press **HOLD** at any time to stop the search on a frequency. Press **SEARCH**/**BAND** to resume searching.
6. When Search is stopped, you can press **HOLD** or **LIMIT** to move up or down 1 frequency step. (See the table on page 5 for the step size for each Band.)



Limit Search

In Limit Search mode, you can search within the frequency range you have set.




To use this function, you must set the lower/higher frequency of your search range first.

Setting the Frequencies

1. Press **MANUAL**.
2. Enter the lower limit of your search range.
3. Press **LIMIT**.

4. Enter the higher limit of your search range.
5. Press  .
6. Press  / **BAND** to begin the search between the two limits.

Using the Limit Search

1. Press  / **BAND** to enter Limit Search mode.
2. Press  or  to stop searching. ("HOLD" appears on the display.)

VFO Search


You can search by using the VFO control.


1. In Manual mode, enter the frequency by using the number keypad and turn VFO control.

-- OR --


In Band Search Hold or Limit Search Hold, enter the frequency by using the number keypad, and turn the VFO control.

"V" appears on the display.

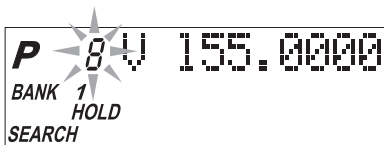

2. Turn the VFO control clockwise to move up the frequency step, and turn the VFO control counter-clockwise to move down the frequency step.
3. When you wish to store frequency or change the channel, you need not press  first.

Search Skip Frequency

The scanner may stop at certain frequencies during Search that you do not want to hear. You can program up to 50 Skip Frequencies into the **SportCat**. When the scanner stops at one of these frequencies during Search, press . That frequency is now "memorized" and will be skipped during any Search. The scanner will then search to find other active frequencies. If you enter the 51st frequency, the 1st one is overwritten.

CTCSS/CDCSS Operation

Your scanner is equipped with a Continuous Tone Controlled Squelch System (CTCSS) and Continuous Digital Controlled Squelch System (CDCSS) which allow squelch to open only when the tone you have programmed with a specific frequency is received along with a transmission. When using CTCSS or CDCSS, consider the following:


- Your Scanner Scan Speed becomes slow while Subaudible Tone function is activated.
- You cannot enter CTCSS and CDCSS tones in the AM Air Band.
- If you have more questions about CTCSS or CDCSS see What is CTCSS and CDCSS on page 4.

Programming a CTCSS Tone/CDCSS Tone


1. Select a channel you want to program.

Note: The priority function can not be activated while programming CTCSS/CDCSS codes. Priority may be reactivated after storing codes.


2. Press **(SUB)** to activate the Subaudible Tone function.

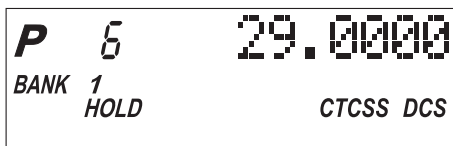

3. Press **(E)/REM.**

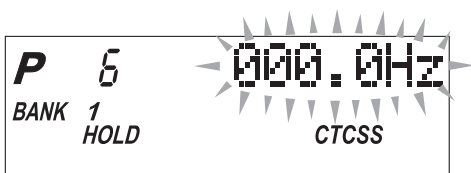


At first, CTCSS tone is displayed.
If you want to change between CTCSS and CDCSS,
press **(SUB)**.

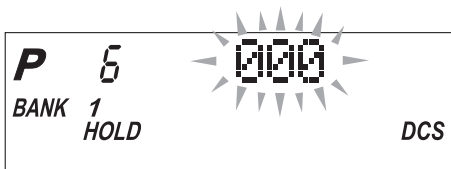


4. Enter a tone.

- Use VFO, or **(HOLD)** and **(LIMIT)** to select the tone.
- Then press **(E)**.

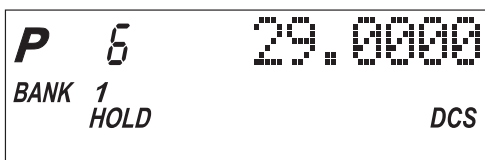

↑ Change per 1sec.
↓

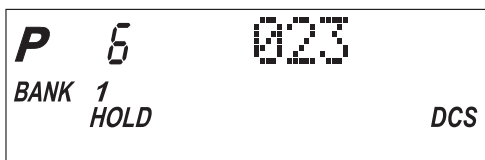

Note: Press **(SUB)** to cancel the CTCSS or CDCSS Program Mode.

The CTCSS or CDCSS indicator and displayed programs are turned off but not deleted.

If you want to program a no Tone, press **(0)** at first, then press **(E)**.


Searching for CTCSS Tones/CDCSS Tones


You can use the CTCSS Tone Search Mode and CDCSS Tone Search Mode to determine if the frequencies in your area are broadcast with associated tones.


Note: Subaudible tone search mode will be locked out for channels that have been previously programmed for subaudible tone. To perform a new subaudible tone search for a previously programmed channel, re-program the frequency for the channel first, and then enter subaudible tone search mode. This is intended to prevent inadvertent reprogramming of previously programmed channels.


Using Tone Search


1. Press .

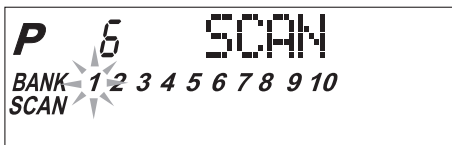


2. To determine if a stored frequency has an associated CTCSS tone or CDCSS tone, press  when your scanner stops on a channel.

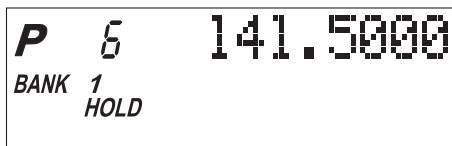

3. Press and hold  until you hear two short beeps.

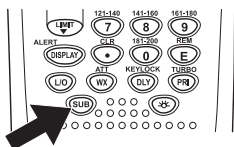


CTCSS and **CDCSS** display and begin flashing, and the scanner starts searching for an associated CTCSS and CDCSS tone. All tones are checked if the transmission is long enough. If there is a break before a tone is identified, then your scanner starts searching where it left off when the transmission begins again.

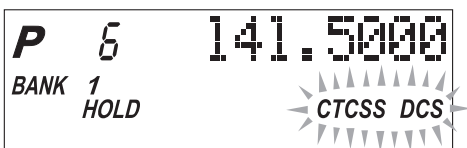


Note: If a CTCSS or CDCSS tone has been stored in a channel, then tone search is not available.


If a CTCSS tone or CDCSS tone is found, the tone begins flashing in the display.

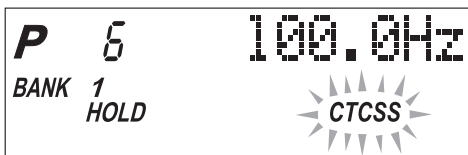

↕ Change per 1sec.

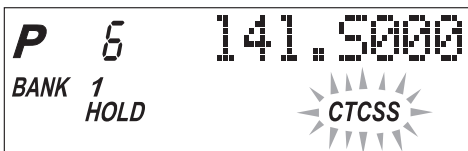

4. Press **(E)** to program the tone with the frequency stored in the channel.

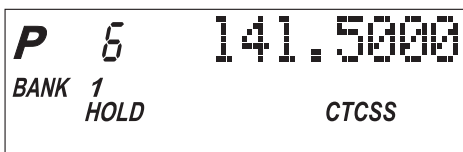

↕ Change per 1sec.



- Repeat Steps 1 - 4 to search for tones associated with other stored frequencies.

If you want to program tones for several stored frequencies, follow these steps:

- After you program a CTCSS tone or CDCSS tone with a stored frequency, the CTCSS Tone or CDCSS tone Search Mode is canceled. The CTCSS or CDCSS indicator remains on but does not flash. To activate the CTCSS Tone Search Mode or CDCSS Tone Search Mode again, press and hold **(SUB)** until you hear two short beeps.

If you decide to cancel the CTCSS Tone Search Mode or CDCSS Tone Search Mode while scanning, press and hold **(SUB)** until you hear two short beeps and the CTCSS or CDCSS indicator turns off.

- You can select the CTCSS Search Mode or CDCSS Tone Search Mode before pressing **(SCAN)** in Manual Mode. Simply, press and hold **(SUB)** until the CTCSS or DCS indicator begins flashing, and then press **(SCAN)**.


When your scanner stops, the CTCSS Tone or CDCSS Tone search begins immediately. If a tone is found before the transmission ends, press **(E)** to program the tone with the frequency stored in the channel.

Using CTCSS Tone or CDCSS Tone Search While Searching


- Set a Search Range.

For information about setting a search range, see Limit Search on page 27.

- Press and hold **(SUB)** until you hear two short beeps.

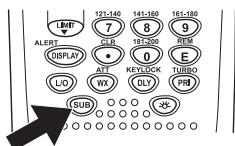


CTCSS and DCS begins flashing in display.

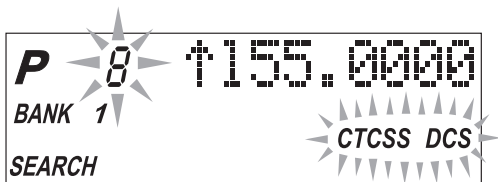

The scanner starts searching for an associated CTCSS tone or CDCSS tone when it stops on a transmission. All tones are checked if the transmission is long enough. However, if you press **HOLD**, and there is break before a tone is identified, the tone search starts where it left off when the transmission begins again.

3. If a CTCSS tone is found, the tone begins flashing in the display.

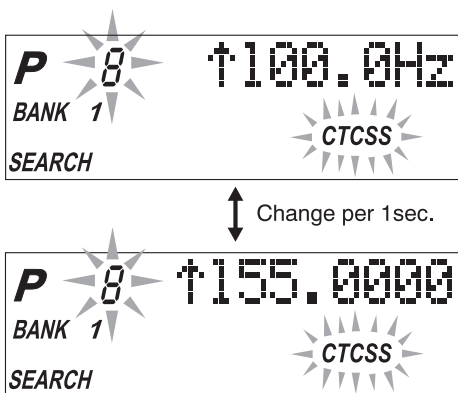

4. Press **E** to program the tone with the frequency stored in the channel.

-- OR --

Send the frequency with its associated tone to another channel.

For information about sending a frequency to another channel, see Programming Channels on the page 19.

5. Restart the search and repeat Steps 3 - 4 to search for tones associated with other frequencies in the search range you set in Step 1.

If you want to program tones for several frequencies during your search, follow these steps:


- After you program a frequency and a CTCSS tone or CDCSS tone into a channel, the Search Mode is changed to Search Hold Mode. To activate the Search Mode press **SEARCH/BAND**.
- If you decide to cancel the CTCSS Tone Search Mode or CDCSS Tone Search Mode while you are searching for frequencies, press and hold **SUB** until you hear two short beeps and the **CTCSS** indicator or **DCS** indicator turns off.

Changing a CTCSS/CDCSS Tone


1. Press **SUB** to activate the Subaudible Tone function.
2. Select the channel you want to change.



↑ Change per 1sec.

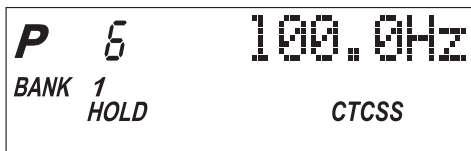


3. Press **E**.

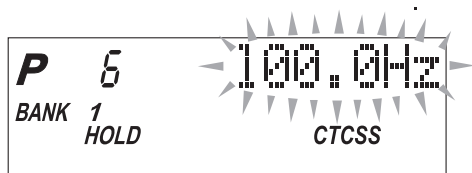


4. Enter the new CTCSS tone or CDCSS tone using VFO control, **HOLD** or **LIMIT**.

If you make a mistake while using your keypad, press **STOP** and enter the tone again.

5. Press **(E)** to change the CTCSS tone.

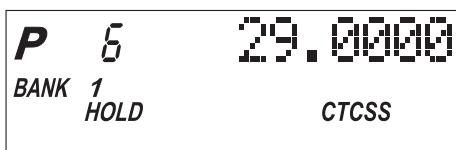


↑ Change per 1 sec.

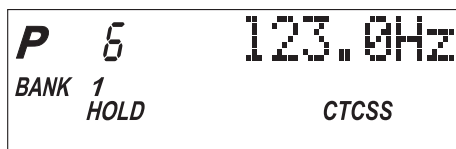


Erasing a CTCSS/CDCSS Tone


1. Press **(SUB)** to activate the CTCSS mode or CDCSS mode.
2. Select the channel with the CTCSS tone or CDCSS tone you want to erase.

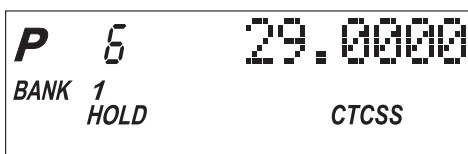

↑ Change per 1 sec.

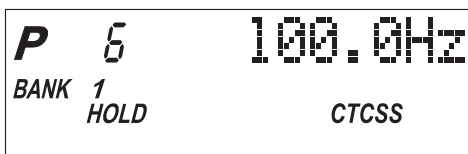


3. Press **(E)**.

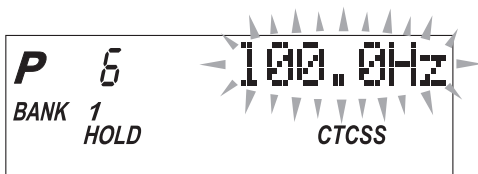

The CTCSS tone or CDCSS tone begins flashing.

4. Press **(0)** or use your VFO control to select *000.0*.

5. Press **(E)** to erase the CTCSS tone.

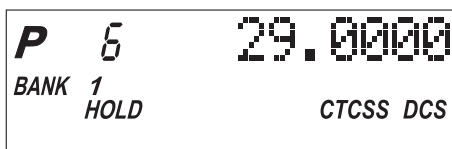

The CTCSS tone or CDCSS tone is removed, and the CTCSS icon and DCS icon remain on.


Remote Interface

You can communicate and program your **SC200** in numerous ways with peripheral devices using the Remote Interface Cable port. This radio offers the following modes:

- **SMARTSCAN MODE**
Automatically load frequencies, from the Uniden National Frequency Database server into your scanner using an external modem or an internal modem included with a PC.
- **CLONE MODE**
Clone all the frequencies of your scanner into another **SC200**.

Connecting the Scanner

Scanner to PC

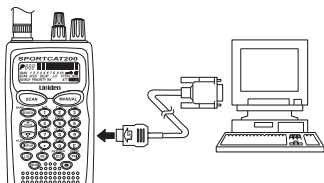


Plug the smaller end of the supplied remote interface cable into the remote port on the right side of your scanner.

When connecting the cable to your scanner, make sure the label side of the cable is facing forward.

Plug the other end of the cable (DB-9 serial connector) into a personal computer's serial port. A few PC's may require an adapter, most will not. You may need a DB-9 to DB-25 null modem adapter, available at most computer stores. Of course, make sure your PC is turned on.


To use SmartScan mode with an internal modem, you will need a small custom software program to allow the serial port to talk with the internal modem and act as a simple "pass through" device. To download this free program, go to Uniden's website, look up under Scanners "SmartScanner" or the **SC200** scanner, for the SmartScanner software. Run this program and it should automatically set the port setting for you (although you can override the settings). Make sure that you have a phone line plugged into the modem jack on the back of your PC and your scanner is connected to the serial port of the PC using the supplied cable.

Scanner to External Modem

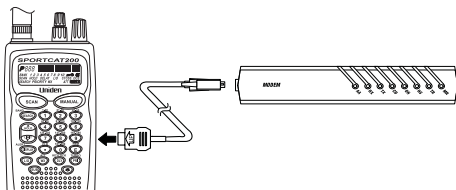

Plug the scanner end of the supplied remote interface cable into the remote port on the right side of your scanner. When connecting the cable to your scanner, make sure the label side of the cable is facing forward. Plug the other end of the cable (DB-9 serial connector) into the external modem. You may need a DB-9 to DB-25 null modem adapter, available at most computer stores. Of course, make sure your external modem is turned on. Make sure that you have a phone line plugged into the modem jack on the back.

Scanner to Scanner

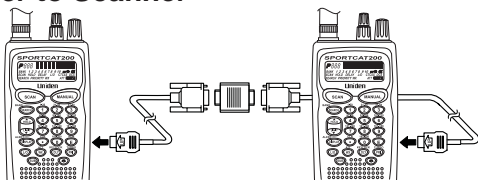

Plug the scanner end of the supplied remote interface cables into the remote ports on the right sides of each of the two scanners. When connecting the cable to your scanner, make sure the label side of the cable is facing forward.

SmartScan Mode

You can automatically download frequencies, from the Uniden National Frequency Database server. After connecting the scanner to a modem using the Scanner to PC or Scanner to External Modem steps (see page 38), turn the radio off. Press and hold **REM** key and turn the radio on.

1. The following screen appears. (SmartScan Mode) To select SmartScan mode, press **(E)** or **(1)**.



1 : SMARTSCAN

2. The following screen appears.



3. Before starting the frequency download, you must enter your zip code.

Using the keypad, enter the ZIP code for the area you will be using your scanner. For example if your ZIP code is 75021.



4. Press **(E)** key, the ZIP code is stored into memory. The dial-in telephone number appears in the display.



Note: If you want to prevent some banks from being overwritten by the frequency download, go to Program Lock. (See page 42)

5. Press **(SCAN)** key. The scanner dials to the database server.



6. If the connection is successful, the scanner starts clearing the memory. And during that period, **Connect** will appear for 12 seconds.



7. After clearing the memory is over, the scanner starts downloading the frequency.



8. **Complete** will be displayed when your downloading is completed.



9. To start the scanner, you must turn the unit off/on.

If downloading is not successful, one of the following error messages will appear.

- "Modem Err"**: Modem Access Error
- "No Carrier"**: Receive No Carrier message from modem
- "Busy"**: Receive Telephone line busy message
- "No Answer"**: Receive No Answer message from modem
- "Error End"**: Quit access line by server
- "Timeout"**: Non data receive time out

NOTE: If the scanner does not display **Loading** (see step 7), disconnect the access by pressing **E**. Then, make sure the modem is connected properly, and try again.

NOTE: If the scanner's display locks up or does not work properly after you connect power, you need to turn the scanner off then on again.

NOTE: The number preprogrammed into your scanner for downloading frequencies is 1-900-225-4822. There is a \$0.99 per minute charge for using the SmartScan database. The frequencies in the SmartScan database are updated, at a minimum, every 6 to 12 months. To get current frequencies, as well as special /sporting event frequencies, regularly update your scanner by using SmartScan.

NOTE: If you are unable to dial a "900" number, check with your local phone company to find out if you have a "900" block on your phone line. This will prevent you from dialing to the server.

Menu for SmartScan

Press **MANUAL** key, Prog Lock appears in the display. And you can change several parameters used for SmartScan whenever you press **E**.

- Transfer speed 300, 1200, 2400, (9600), 14400 bps
- Flow control setting (Xon/Xoff), RTS/CTS, Off
- Dial type (TONE), PULSE

Program Lock

SmartScanner will overwrite frequencies that you have already programmed into your scanner. To save the previously programmed frequencies, you can lock out specific banks prior to calling the database as follows:

1. After you enter your zip code, press **E**.



TEL: 1-900-

2. With the phone number on the display, press **MANUAL**. ProgLock appears in the display.
3. Press the bank numbers using the 1-9 and 0 key (for bank 10) that you wish to lock out from programming so that they will not be overwritten during the download.
4. Press **MANUAL** again. The zip code is displayed.



ZIP: 75021

5. Press **(E)**. The phone number appears.



TEL: 1-900-

6. Press **(SCAN)** to place the call.

Transfer Speed

You can choose the following transfer speeds.

300,1200,2400,(9600),14400 bps 9600 is the default.

Press **(E)** to exit.

Flow Control

You can choose the following flow control settings.

Xon/Xoff is the default. The initial display appears.




FLOW: SOFT

Press **(HOLD)** for RTS/CTS,



FLOW: HARD

Press **(HOLD)** again for non flow control.



FLOW: OFF

Press **(E)** when desired setting is displayed and Flow Control is set.

Dial Type

You can choose the Dial Type setting.

Tone is set as a default.

You can change it to PULSE by pressing .

SMARTSCANNER TIPS

There are literally hundreds of thousands of public safety radio licenses in the United States. The editors of the Uniden National Frequency Database have poured over these records to provide you with the most accurate possible download of frequencies for whichever area of the country you desire. Because of the volume of data, and because some systems operate on expired licenses or digital radio systems (which are not included in the dataset as they cannot be monitored), we cannot guarantee that you will receive every active public safety frequency in your area.

If you find any flaws in your data and you would like to offer suggestions, please e-mail them to us at **smartscanner@aol.com** or mail them to us at SmartScanner National Database, P.O. Box 610428, Newton Highlands, MA 02468. Due to the volume of mail we receive, you may not receive a reply.

The SmartScanner database downloads frequency to the scanner using the following order:

1. All licenses within your zip code.
2. All licenses within your community (with more than one zip code)
3. All your county licenses (such as County Sheriff)
4. All the licenses for all the communities within your county (in random order).
5. Statewide licenses (such as Highway Patrol, state forestry, DOT, but not trunking)
6. National licenses (such as common ambulance, marine, and Family Radio Service channels).

Look at the web sites **Uniden.com** and **Trunktracker.com** for further information. The downloads are not available through the Internet at this time.

A few notes about the frequency download order:



1. The scanner fills up less than its allotted 200 channels if there are not more than 200 of the above types of licenses in your area.
2. If there are more than 200 of the above listed types of licenses, or you have locked-out some banks prior to the download using the Program Lock feature, the scanner may run out of memory locations and you may not, for example, receive part or all of your county, state or nationwide data.
3. If you wish to also receive a download of frequencies from an adjacent county, lock those banks you wish to keep, shut the scanner off, turn it back on again and enter the SmartScanner download mode. Then enter a zip code from a community within the adjacent county.
4. The SmartScanner editors used their best efforts to delete digital and MDT (mobile data terminal) computer records from the database; however, it would be impossible to delete them all. Therefore, you may hear some non-voice transmissions on the frequencies downloaded into your scanner. If not, then you should lock these frequencies out or delete them by entering a new frequency or entering 0, **(E)**.
5. The database will be updated every 6 to 12 months at a minimum.

Clone Mode

You can clone the frequency data of one **SC200** scanner to another. After connecting the two scanners, using the Scanner to Scanner steps (See page 39), make sure the scanners are turned off. On each scanner, press and hold **REM** key and turn the radio on.



1. On each scanner, press **(2)**. Or press **(LIMIT)** or **(HOLD)** until this screen is displayed on both scanners. Then press **(E)**. (Clone Mode)



- Determine the scanner that has the frequency data that you want to transfer. This one must be set up as the “Master Unit”, and the other must be set as the “Slave Unit”.
- On the scanner that is the” Master Unit”, press the  or  key until MASTER appears in the display.




A rectangular display box containing the word "MASTER" in a pixelated, uppercase font.

- On the scanner that is the” Slave Unit”, press the  or  key until CLONE appears in the display.



A rectangular display box containing the word "CLONE" in a pixelated, uppercase font.

- Press the  key on both scanners. The data transfer is started from the Master Unit to the Slave Unit.

During the data transfer, MASTER and CLONE characters will continue to flash.

When the data transfer is completed, Complete displays.



A rectangular display box containing the word "Complete" in a pixelated, uppercase font.

If the data transfer is not successful, the following error message will appear.




A rectangular display box containing the word "Error" in a pixelated, uppercase font.


Care and Maintenance

Replacing the Battery Pack

1. Turn the On-Off/Volume Control OFF.
2. Turn the scanner over so you are looking at the back. If the belt clip is attached, remove it by taking out the two screws.

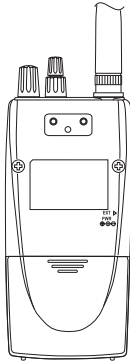


3. Press in on the ribbed area and slide the battery cover down and off.

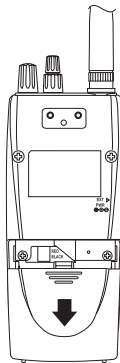


4. Carefully unplug the battery pack and lift it out of the case. You may need to exert slight pressure toward the top of the scanner as you slide the battery pack out of the case.
5. Carefully plug in the new battery pack, observing the proper polarity. (The **RED** wire should be on the upper side as you plug it in.) Although the plug is keyed to reduce the chance of inserting it in wrong, make sure the wires are in the correct position before pushing it in all the way. **DO NOT FORCE THE PLUG.**

6. Insert the battery pack by placing the bottom in the case first. Make sure it is seated within the case before replacing the battery cover.

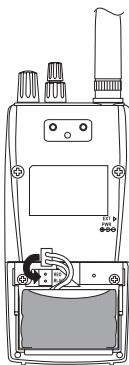

7. Replace the battery cover by putting the two tabs in the corresponding opening and sliding it upward until it locks in place.

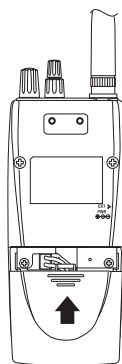

Location

- If strong interference or electrical noise is received, relocate the scanner or its antenna away from the source of the noise. A higher elevation, if possible, may provide better reception.
- **Do not** use the scanner in high-moisture environments such as the kitchen or bathroom.
- Avoid placing the unit in direct sunlight or near heating elements or vents.
- **Do not** plug the scanner into an outlet controlled by a wall switch as prolonged periods without power will cause scanner memory loss.

Cleaning

- Disconnect the power to the unit before cleaning.
- Clean the outside of the scanner with a mild detergent.
- To prevent scratches, **do not** use abrasive cleaners or solvents. Be careful not to rub the LCD window.
- **Do not** use excessive amounts of water.

Repairs

Do not attempt any repair. The scanner contains no serviceable parts. Contact the Uniden Customer Service Center or take it to a qualified repair technician.

Birdies

All scanners are subject to receiving undesired signals or birdies. If your scanner stops during SEARCH Mode and no sound is heard, it may be receiving a birdie. Birdies are internally generated signals inherent in the electronics of the scanner. Use the Search Skip feature to skip the unwanted frequencies.

Proper Care of Your Scanner

Use only the AC Adapter/Charger that came with your scanner.

Do not leave the AC Adapter/Charger plugged in for long periods.

Avoid placing the scanner in direct sunlight or near heating elements or vents.

Also, do not subject the scanner to continuous sub-zero temperatures. If the scanner is exposed to temperatures below -5°F or above 140°F, the liquid crystal display may temporarily cease to function properly, or can become permanently damaged.

Technical Specifications

Receiver Type:	Triple Conversion Superheterodyne
Channels:	200
Banks:	Total 10 Banks 20 Channels each
WX:	10 Programmed Channels (All NOAA Weather Service and three Canadian weather service)
Search Bands:	12 Preprogrammed Search bands (NFM or AM)

No.	RANGE (MHz)	BAND	STEP (kHz)
1	29.0000-29.9950	NFM	5
2	30.0000-49.9950	NFM	5
3	50.0000-54.0000	NFM	5
4	108.0000-136.9875	AM	12.5
5	137.0000-143.9950	NFM	5
6	144.0000-147.9950	NFM	5
7	148.0000-174.0000	NFM	5
8	406.0000-419.9875	NFM	12.5
9	420.0000-449.9875	NFM	12.5
10	450.0000-469.9875	NFM	12.5
11	470.0000-512.0000	NFM	12.5
12	806.0000-823.9875	NFM	12.5
	849.0125-868.9875	NFM	12.5
	894.0125-956.0000	NFM	12.5

Scan Rate:	100 channels per second
Search Rate:	100 steps per second (Normal Search Mode) 300 steps per second (Turbo Search Mode)
Scan Delay:	2 seconds
Audio Output:	180 mW nominal into 8 internal speaker 38 mW nominal into 32 stereo headphones 9 mW nominal into 64 supplied earphone
Antenna:	Rubber antenna included
Operating Temperature:	- 20°C (- 4°F) to + 60°C (+ 140°F)

Size: 2-1/2" (W) x 1-3/4" (D) x 11-3/4" (H)
(with antenna attached)
65 mm (W) x 39.5 mm (D) x 296.5 mm (H)
(w/antenna w/o belt clip)

Weight: 0.71 lb. (320 g)

Power Requirements: 4.8V DC (internal battery or
AC Adapter/Charger)

*Certified in accordance with FCC Rules and Regulations
Part 15 Subpart C as of date of manufacture.*

*Features, specifications, and availability of optional
accessories are all subject to change without notice.*

CTCSS/CDCSS Tone Frequencies (Hz)

CTCSS

67.0	71.9	74.4	77.0	79.7	82.5	85.4	88.5	91.5	94.8
97.4	100.0	103.5	107.2	110.9	114.8	118.8	123.0	127.3	131.8
136.5	141.3	146.2	151.4	156.7	162.2	167.9	173.8	179.9	186.2
192.8	203.5	210.7	218.1	225.7	233.6	241.8	250.3		

CDCSS

023	025	026	031	032	036	043	047	051	053
054	065	071	072	073	074	114	115	116	122
125	131	132	134	143	145	152	155	156	162
165	172	174	205	212	223	225	226	243	244
245	246	251	252	255	261	263	265	266	271
274	306	311	315	325	331	332	343	346	351
356	364	365	371	411	412	413	423	431	432
445	446	452	454	455	462	464	465	466	503
506	516	523	526	532	546	565	606	612	624
627	631	632	654	662	664	703	712	723	731
732	734	743	754						


Optional Accessories and Replacement Parts

The following optional accessories and replacement parts for your **SportCat** are available from your local Uniden Dealer or through the Uniden Customer Service Center by calling: 1-800-297-1023, 7:00 AM to 7:00 PM Central Time, Monday through Friday.

ITEM	PART NO.
Spare Battery Pack	BP-180
Replacement Rubber Antenna	AT-218
Earphone	EP-009
AC Adapter/Charger	AD-70U
Straight Cigarette Lighter Power Cord (fused)	UA-502
Coiled Cigarette Lighter Power Cord (fused)	UA-502A
Belt Clip with 2 screws	BCK-150
SportCat Sports Frequency Guide	FB-150
SportCat Operating Guide	OMSC200
Remote Cable	WZ-1407

Troubleshooting

If your **SC200** is not performing properly, try the following steps.

PROBLEM	SOLUTION
Scanner won't work.	<ol style="list-style-type: none">1. Check the connections at both ends of the AC Adapter.2. Turn on the wall switch of your room. You could be using an outlet controlled by the wall switch.3. Move the AC Adapter to another wall outlet or replace the battery pack.
Improper reception.	<ol style="list-style-type: none">1. Check the antenna connection or move and reposition the antenna.2. Move the scanner.3. You may be in a remote area which could require an optional multi-band antenna. Check with your dealer or local electronics store.
Scan won't stop.	<ol style="list-style-type: none">1. Adjust squelch threshold-refer to page 17 setting the squelch.2. Check the antenna connection.3. Check to see if any of the channels are locked out. If so, the scanner has less chance of finding an active channel.4. Review each channel's frequency to see if it is still stored in memory and is correct.5. It's possible that none of the programmed frequencies are currently active.
Scan won't start.	<ol style="list-style-type: none">1. Press the  key again.2. Adjust the SQUELCH control.3. Check to see if all channels are locked out.
Weather Scan won't work.	<ol style="list-style-type: none">1. Adjust squelch threshold-refer to page 17 setting the squelch.2. Check the antenna.

PROBLEM	SOLUTION
Channel Activity Indicators are flashing but no sound is heard.	<ol style="list-style-type: none"><li data-bbox="467 151 943 272">1. May be a private or telephone interconnect call, which are intentionally blocked by your scanner.<li data-bbox="467 272 912 331">2. The ID in your display is not active.

If you still cannot get satisfactory results and want additional information, or to return the unit for service, please call or write the Uniden Parts and Service Division. The address and phone number are listed in the Warranty (at the end of this manual).

One Year Limited Warranty

WARRANTOR: UNIDEN AMERICA CORPORATION (“Uniden”)

ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, sub-assemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the Operating Guide for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will repair the defect and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America.

PROCEDURE FOR OBTAINING PERFORMANCE OF

WARRANTY: If, after following the instructions in this Operating Guide you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Include evidence of original purchase and a note describing the defect that has caused you to return it, The Product should be shipped freight prepaid by traceable means, or delivered, to warrantor at:

Uniden America Corporation

Parts and Service Division

4700 Amon Carter Blvd.

Ft. Worth, TX 76155

1-800-554-3988; Mon-Fri; 8:30am to 5:00pm Central

COVERED UNDER ONE OR MORE OF THE
FOLLOWING U.S. PATENTS:

4,219,821	4,270,217	4,398,304	4,409,688	4,455,679
4,461,036	4,521,915	4,597,104	4,627,100	4,841,302
4,888,815	4,932,074	4,947,456	5,014,348	5,199,109
5,408,692	5,428,826	5,438,688	5,448,256	5,465,402
5,471,660	5,483,684	5,548,832	5,551,071	5,642,424
5,710,992	5,530,296	5,574,995	5,577,076	5,598,430
5,600,223				

Uniden[®]

Beancat[®]

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>