

COLOR MONITOR

Model No: CTL 5fln



S/N:9978623807A

IMPORTANT SAFEGUARDS

- 1. Read all of these instructions.
- 2. Save these instructions for later use.



- 3. Unplug this monitor from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for
- 4. Do not use attachments not recommended by the monitor manufacturer as they may cause hazards.
- 5. Do not use this monitor near water for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool, etc.



6. Do not place this monitor on an unstable cart, stand, or table. The monitor may fall, causing serious injury to a child or adult, and serious damage to the appliance.



7. Slots and openings in the cabinet and the back or bottom are provided for ventilation, and to ensure reliable operation of the monitor and to protect it from

overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the monitor on a bed, sofa. rug, or other similar surface. This should never be placed near or over a radiator or heat register. This monitor should not be placed in a built-in installation such as a bookcase unless proper ventilation is provided.



8. This monitor should be operated only from the type of power source indicated on the marking label. If you are not sure of the power

supplied to your home, consult your monitor dealer or local power company.



9. This monitor is equipped with a 3-wire grounding type plug, a plug having a third (grounding) pin. This plug will only fit into a groundingtype power outlet. This is

a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the purpose of the groundingtype plug.



- 10. Do not allow anything to rest on the power cord. Do not locate this monitor where the cord will be abused by persons walking on it.
- 11. Follow all warnings and instructions marked on the monitor.



12. For added protection for this monitor during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This

will prevent damage to the set due to lightning and powerline surges.

- 13. Do not overload wall outlets and extension cords as this can result in fire or electric shock.
- 14. Never push objects of any kind into this monitor through cabinet slots, as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the monitor.



15. Do not attempt to service this monitor yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

- 16. Unplug this monitor from the wall outlet and refer servicing to qualified service personnel under the following conditions:
- a. When the power cord or plug is damaged or
- b. If liquid has been spilled into the monitor.
- c. If the monitor has been exposed to rain or water.
- d. If the monitor does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore normal operation.
- e. If the monitor has been dropped or the cabinet has been damaged.
- f. When the monitor exhibits a distinct change in performance this indicates a need for service.



17. When replacement parts are required be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics

as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

18. Upon completion of any service or repairs to this monitor, ask the service technician to perform routine safety checks to determine that the monitor is in safe operating condition.

FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFERENCE STATEMENT

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, prusuant to Part 15 of the FCC Rules. These limits in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cuase harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio, TV technician for help.

CAUTION: Any changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

CANADIAN DEPARTMENT OF COMMUNICATIONS COMPLIANCE STATEMENT

This digital apparatus does not exceed the Class A/Class B (whichever is applicable) limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Avis de conformité aux normes du Ministère des Communications du Canada.

Le present appareil numérique n'emet pas de bruits radioélectriques depassant les limites applicables aux appareils numériques de Class A/de Class B (selon le cas) prescrites dans le règlement sur le brouillage radioélectrique édicte par le ministère des communications du canada.

The power cord is used as a main disconnect device. Disconnect the power cord before servicing.

The outlet must be installed near the monitor and must be easily accessible.

As an ENERGY STAR Partner, Computer Technology Link, Inc., has determined that this product meets the Energy Star guidelines for energy efficiency.

CONTENTS

Introduction	1
Product Features	2
Setup	3
Installing the Tilt/Swivel Stand	3
Connecting the D-Sub Signal Cable	4
Connecting to Your Macintosh Computer	4
Connecting the Power Cord	4
Power Management System	5
DDC for Plug & Play	5
Operation & Adjustment	6
Specifications	10
Factory Preset Timings	11
Troubleshooting	12
Description for D-sub Connector	13

INTRODUCTION

This manual explains how to correctly install, operate and get the best performance from your monitor. Please read this user's manual carefully before installing your monitor, then keep it near your monitor for quick reference.

First, please check that the contents of the carton box corresponds with the following checklist:

- Color monitor
- Power cord
- Tilt/swivel stand
- User's manual
- Warranty Handbook & Warranty Registration Card

If there is any item missing or damaged, please contact your dealer. Please keep the carton box and packing materials so that you may properly store or transport your monitor.


PRODUCT FEATURES

- The convenient and user-friendly on-screen display allows for easy and accurate adjustments of horizontal and vertical screen size and position, geometry and screen color.
- The monitor complies with the VESA Display Data Channel(DDC) specification for "Plug & Play" compatibility. Advanced microcircuitry makes set-up and configuration fast and effortless.
- The monitor features Advanced Color Controls for fine-tuning to meet your own personal tastes or application requirements. Use the on-screen controls to adjust the color temperature or RGB gain value for the best possible screen color and intensity.
- Just activate the higher refresh rates of the monitor to stabilize the screen and eliminate the annoying flicker that contributes to eyestrain and headaches.
- The "borderless" full-screen display capability works under all graphic modes and provides a larger viewing area than conventional monitors, giving you a better picture with more workspace.

SETUP

INSTALLING THE TILT/SWIVEL STAND

- 1. Ensure that the power to the monitor is off.
- 2. Set the monitor face down with the underside facing you. Please be careful so as not to scratch the monitor screen.
- 3. Align the four hooks on the stand with the guide holes of bottom chassis of the monitor.
- 4. Insert the hooks into the guide holes.
- 5. Slide the tilt/swivel stand toward the front of the monitor until the latch locks in position.
- 6. Turn the monitor and the stand upright.

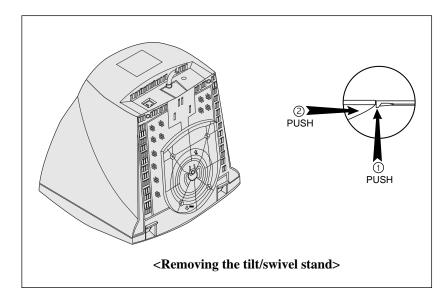

If you want to remove the tilt/swivel stand on the monitor, press the latch and pull the tilt/swivel stand toward the back of the monitor. Lift the stand to separate.

CONNECTING THE D-SUB SIGNAL CABLE

- 1. Turn off the computer and monitor.
- 2. Connect the 15 pin D-sub connector to the output port of the video card in your computer.
- 3. Tighten the screws of connector.

CONNECTING TO YOUR MACINTOSH COMPUTER

- 1. Turn off the computer and monitor.
- 2. Attach the Macintosh cable adapter to the Macintosh video card.
- 3. Tighten the screws on the cable adapter.
- 4. Connect the signal cable provided with your monitor to the other end of the Macintosh cable adapter.
- 5. Tighten the screws between the Macintosh cable adapter and the signal cable.

CONNECTING THE POWER CORD

- 1. Plug the power cord into the AC receptacle located at the back of the monitor.
- 2. Plug the other end of the power cord into the AC outlet.

If your power cord is PC to Monitor type, plug the other end of the power cord into the AC receptacle in the computer.

POWER MANAGEMENT SYSTEM


If you use the monitor with a computer which complies with the power saving program, you can set the monitor to go blank when the system has remained unused for a period of time. To specify the period or to disable this feature, set the system timeout field of the computer's system setup program or use special software for power saving. See the computer user's manual for the details of using the system setup. While the monitor is in power saving mode (blank screen), it consumes less power than normal state; the color of the power LED will indicate the state. To restore the screen image, press any key of your keyboard or move your mouse. If the signal cable is connected loosely or disconnected, the power saving feature will operate.

DISPLAY DATA CHANNEL (DDC) FOR PLUG & PLAY

If you use the monitor with a computer which complies with DDC1/2B of VESA, the Host-Video Card automatically configures itself without your intervention in a way that best fits the attached monitor. The Display Data Channel, DDC, allows the monitor to inform the host system about configuration information for optimum use of the monitor. Use of the Video Card utility is not required to match the resolutions and refresh rates of the monitor and video card.

4

OPERATION & ADJUSTMENT



MENU: Launch OSD(On-Screen Display) Menus

: Select the next function


: Select the previous function

: Increase the value of any selected function

: Decrease the value of any selected function

Exit OSD Menus & Launch OSD Menus, when no OSD

Key Process

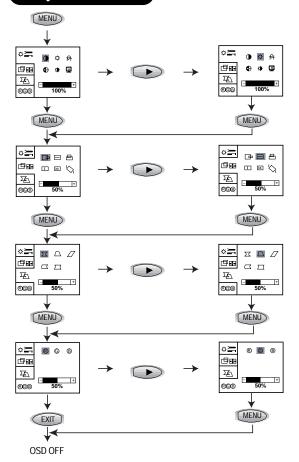


1. OSD(On-Screen Display) Menu 1

50% CONTRAST	Adjust the contrast of image, the difference between light and dark areas on the screen. Range: 0-100%
∴ ↓ ↓ ↓ 50% BRIGHTNESS	Adjust the brightness of the entire display.
NO YES DEGAUSS	Degauss the display and restore image quality.
NO YES	Reset the screen to the Factory Preset Display Settings.
9300 6550 * COLOR TEMPERATURE	Choose different preset color temperatures or set your own customized color parameters.
H:+37.6KHz V:+72Hz STATUS	Display horizontal & vertical frequency and polarity.

6

2. OSD (On-Screen Display) Menu 2

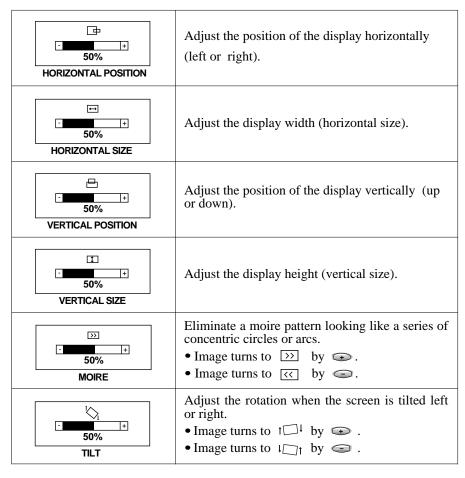

While adjusting moire, the display might look vague, so adjust moire at best-fitted condition.

3. OSD (On-Screen Display) Menu 3

50% PINCUSHION	Adjust the left and right margins for more convex or more concave margins. • Image turns to by
	Adjust the trapezoid of the screen by moving the lines inward or outward. • Image turns to □ by • . • Image turns to □ by • .
50% PARALLELOGRAM	Adjust parallelogram when the screen is leaning left or right. • Image turns to by • . • Image turns to by • .
50% SIDE BALANCE	Adjust the side balance when the sides of the screen are bowed towards left or right. • Image turns to by ⋅ . • Image turns to by ⋅ .
50% CORNER PINCUSHION	Adjust the left and right margins of the each corner. • Image turns to ☐ by • . • Image turns to ☐ by • .

4. OSD (On-Screen Display) Menu 4

® + 50% RED GAIN	Adjust the red gain.
© - + 50% GREEN GAIN	Adjust the green gain.
®+ 50% BLUE GAIN	Adjust the blue gain.

SPECIFICATIONS

Picture Tube Type : 15-inch, Flat Square Tube type

(14-inch, viewing area)

Dot Pitch : 0.28mm, MPR II Face Treatment : Non-glare / Anti-static

Video Input Signal : R.G.B. Analog

Amp. Bandwidth: 85 MHz

Input Sync : TTL, separate negative / positive

Scan Frequency Horizontal: 30 - 69 KHz

Vertical : 50 - 120 Hz

Max. Resolution 1280 dots \times 1024 lines (at 60 Hz)

Power Source Free Voltage (100-240 Vac, 50/60 Hz)

Display Area Standard Display Area: 264mm(H) ×198mm(V)

Full Screen Size : $284mm(H) \times 212mm(V)$

Power Consumption Max. 80W

State	Recovery Time	Power LED	
On	None	Green	
Stand-by	3seconds	Green:0.5 second	
Suspend	Sseconds	Amber:0.5 second	
Sleep	-	Amber	
Off	-	Off	

Regulatory Approvals

Safety : UL, CSA, DHHS

EMI : FCC-B

Tilt/Swivel Range	Tilt : 5° forward, 10° backward
go	Swivel: \pm 45° leftward, rightward
Dimension	368(W) ×394(D) ×382(H) mm
	(set with stand)
Weight(net/gross)	12.5 / 14.2 Kg
	27.6 / 31.4 lbs
Operating Enviro	nment
	Temperature : $10 \sim 40^{\circ} \text{ C/} 50 \sim 104^{\circ} \text{ F}$
	Relative Humidity : $8 \sim 80\%$
Storage Environm	ent
	Temperature : $-20 \sim 45^{\circ} \text{ C/} -4 \sim 113^{\circ} \text{ F}$
	Relative Humidity : 5~90%

FACTORY PRESET TIMINGS

Mode	Resolution (dots ×lines)	H.Freq(KHz)	V.Freq(Hz)	Remark
VGA	720×400	31.5	70	Non-interlaced
VGA	640×480	31.5	60	Non-interlaced
VESA 46K	800×600	46.9	75	Non-interlaced
VESA 800 × 600@85Hz	800×600	53.7	85	Non-interlaced
VESA 60K	1024×768	60.0	75	Non-interlaced
VESA 1024×768@85Hz	1024×768	68.7	85	Non-interlaced


This monitor has stored above-mentioned six timings in factory. You can save up to 8 modes in the user memory automatically. Please note that if you save to user memory over eight times, the first mode saved will be replaced with your ninth mode.

TROUBLESHOOTING

Symptom	Check
No picture.	Check if POWER SWITCH and COMPUTER POWER SWITCH are in the on position.
	Check if the signal cable is correctly connected to the video card.
	Check if the pins of D-sub connector are not bent.
	Check if the computer is in the power saving mode.
	Check if POWER SWITCH is in the on position.
POWER LED is not lit.	Check if the power cord is correctly connected.
Image is unstable.	Check if the signal cable is suitable to the video card.
Image is not centered, too small or too large.	Adjust H & V SIZE or H & V POSITION to get the proper image.
Picture bounces or a	Keep the devices that may cause electrical
wave pattern is present in the	interference away from the monitor.
picture.	See the FCC information at the front cover of the manual.
Color looks blotchy.	Operate DEGAUSS once.
Picture is blurred.	Adjust CONTRAST and BRIGHTNESS.
	Operate DEGAUSS once.
Edges of available area on the screen are not straight.	Adjust PINCUSHION/TRAPEZOID.

DESCRIPTION FOR D-SUB CONNECTOR

Pin	Signal
1	Red
2	Green
3	Blue
4	GND
5	GND(Self-Test)
6	GND-Red
7	GND-Green
8	GND-Blue
9	No Pin
10	GND-H.Sync
11	GND-V.Sync
12	Bi-directional Data(SDA)
13	Horizontal Sync
14	Vertical Sync(VCLK)
15	Data Clock(SCL)



* GND=Ground

12

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com