

HP StorageWorks

A6826A PCI-X host bus adapter for Itanium Linux systems installation guide

Part number: AA-RV12C-TE
Third edition: October 2005



Legal and notice information

© Copyright 2003–2005 Hewlett-Packard Development Company, L.P.

Hewlett-Packard Company makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

This document contains proprietary information, which is protected by copyright. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of Hewlett-Packard. The information is provided "as is" without warranty of any kind and is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Itanium is a trademark of Intel Corporation or its subsidiaries in the United States and other countries.

Linux® is a U.S. registered trademark of Linus Torvalds.

A6826A PCI-X host bus adapter for Itanium Linux systems installation guide

Contents

About this guide	5
Intended audience	5
Related documentation	5
Document conventions and symbols	6
HP technical support	7
HP-authorized reseller	7
Helpful web sites	7
1 HBA features	9
Performance specifications	9
Environmental specifications	9
Physical specifications	10
2 Installing the HBA	11
Installation prerequisites	12
HBA components	12
Jumpers	13
Before you begin installation	13
Installing the HBA	13
3 Installing the Linux driver	15
Installing the driver kit	16
Using RPM	16
Using fibreutils RPM	17
Changing driver parameters	17
Installing the driver on the boot drive	17
Loading the driver	18
Building a ramdisk image to load the qla2300 driver	18
Loading and unloading the qla2300 driver manually	19
Configuring the driver	20
System driver parameter max_scsi_luns for Red Hat EL 2.1 kernels	20
Driver command line parameters	21
Proc filesystem support	21
4 Troubleshooting	23
Hardware problem checklist	24
System configuration problems	24
Fibre Channel problem checklist	24
POST conditions and results	25
A Configuring the HBA	27
Starting the Configuration protocol	27
Using the Driver Configuration menu	27

B Building a driver from sources	31
Building a uniprocessor version of the driver	32
Building a multiprocessor version of the driver	33
C Regulatory compliance and safety	35
Laser device	35
Laser safety warning	35
Certification and classification information	35
Laser product label	36
International notices and statements	36
Canadian notice (avis Canadien)	36
Class A equipment	36
European Union notice	36
BSMI notice	37
Japanese notice	37
Korean notices	37
Electrostatic discharge	38
Grounding methods	38
Index	39
Figures	
1 A6826A components	12
2 Class 1 laser product label	36
Tables	
1 Document conventions	6
2 HBA Environmental Specifications	9
3 HBA Specifications	10
4 POST LED states	25
5 Driver Configuration menu components	29

About this guide

This guide provides information about:

- Installing, configuring, and troubleshooting the A6826A PCI-X host bus adapter (HBA) for Linux® operating systems.
- Contacting technical support for additional assistance

Intended audience

This guide is intended for system administrators who are experienced with the following:

- Linux operating system
- HBAs

Related documentation


In addition to this guide, see the *HP StorageWork PCI-X single channel and dual channel 2-Gb host bus adapter for Itanium Linux systems release notes*.

These and other HP documents can be found on the HP web site: <http://www.docs.hp.com>.


Document conventions and symbols


Table 1 Document conventions

Convention	Element
Medium blue text: Figure 1	Cross-reference links and e-mail addresses
Medium blue, underlined text (http://www.hp.com)	Web site addresses
Bold font	<ul style="list-style-type: none">• Key names• Text typed into a GUI element, such as into a box• GUI elements that are clicked or selected, such as menu and list items, buttons, and check boxes
<i>Italics font</i>	Text emphasis
Monospace font	<ul style="list-style-type: none">• File and directory names• System output• Code• Text typed at the command line
<i>Monospace, italic font</i>	<ul style="list-style-type: none">• Code variables• Command line variables
Monospace, bold font	Emphasis of file and directory names, system output, code, and text typed at the command line

 **WARNING!** Indicates that failure to follow directions could result in bodily harm or death.

 **CAUTION:** Indicates that failure to follow directions could result in damage to equipment or data.

 **IMPORTANT:** Provides clarifying information or specific instructions.

 **NOTE:** Provides additional information.

 **TIP:** Provides helpful hints and shortcuts.

HP technical support

Telephone numbers for worldwide technical support are listed on the HP support web site:

<http://www.hp.com/support>.

Collect the following information before calling:

- Technical support registration number (if applicable)
- Product serial numbers
- Product model names and numbers
- Applicable error messages
- Operating system type and revision level
- Detailed, specific questions

For continuous quality improvement, calls may be recorded or monitored.

HP strongly recommends that customers sign up online using the Subscriber's choice web site:

<http://www.hp.com/go/e-updates>.

- Subscribing to this service provides you with e-mail updates on the latest product enhancements, newest versions of drivers, and firmware documentation updates as well as instant access to numerous other product resources.
- After signing up, you can quickly locate your products by selecting **Business support** and then **Storage** under Product Category.

HP-authorized reseller

For the name of your nearest HP-authorized reseller:

- In the United States, call 1-800-282-6672.
- Elsewhere, visit the HP web site: <http://www.hp.com>. Then click **Contact HP** to find locations and telephone numbers.

Helpful web sites

For other product information, see the following HP web sites:

- <http://www.hp.com>
- <http://www.hp.com/go/storage>
- <http://www.hp.com/support/>
- <http://www.docs.hp.com>

1 HBA features

This chapter describes the features of the A6826A PCI-X HBA for Linux includes:

- [Performance specifications](#), page 9
- [Environmental specifications](#), page 9
- [Physical specifications](#), page 10

Performance specifications

The A6826A HBA is a 2GB, high-performance Direct Memory Access (DMA) bus master host adapter designed for high-end systems.

This HBA has the following features:

- Combines a powerful Reduced Instruction Set Computing (RISC) processor, a Fibre Channel protocol manager (FPM) with 2GB Fibre Channel transceivers, and a peripheral component interconnect (PCI) or peripheral component interconnect-extended (PCI-X) local bus interface in a single-chip solution.
- Supports Private Loop Direct Attach (PLDA) and Fabric Loop Attach (FLA) connections.
- Supports bus master DMA.
- Supports Fibre Channel protocol-SCSI (FCP-SCSI), IP, and Fibre Channel-Virtual Interface (FC-VI) protocols.
- Supports point-to-point fabric connection (F-PORT FABRIC LOGIN).
- Complies with:
 - PCI Local Bus Specification revision 2.2.
 - PCI-X Addendum (revision 1.0) to the PCI Local Bus Specification.
 - Third-generation Fibre Channel-Physical and Signaling Interface (FC-PH-3) standard.
 - Fibre Channel-Arbitrated Loop (FC-AL-2) standard.
 - U.S. and international safety and emissions standards.

Environmental specifications

Table 2 lists the HBA environmental specifications.

Table 2 HBA Environmental Specifications

Environment	Minimum	Maximum
Operating temperature	0 °C/32 °F	55 °C/131 °F
Storage temperature	-20 °C/-4 °F	70 °C/158 °F
Relative humidity (non-condensing)	10%	90%
Storage humidity (non-condensing)	5%	95%

Physical specifications

Table 3 lists the HBA specifications.

Table 3 HBA Specifications

Type	Specification
Host bus	Conforms to <i>PCI Local Bus Specification, Revision 2.2</i>
Fibre Channel specifications	Bus type: fiber optic media Bus transfer rate: 200 Mb/s maximum at half duplex 400 Mb/s maximum at full duplex Interface chip: ISP2312
Central processing unit (CPU)	Single-chip design that includes a RISC processor, Fibre Channel protocol manager, PCI-XDMA controller, integrated serializer/deserializer (SEREDES), and electrical transceivers that can auto-negotiate a data rate of 1 Gb/s or 2 Gb/s.
RAM	256 KB per Fiber Channel Controller; Scalable to 4 MB
NVRAM	256 KB, field programmable
Flash	128 KB of flash ROM in two 64 KB, software selectable banks, field programmable
Onboard DMA	Five-channel DMA controller: two data and one command, one auto-DMA request, and one auto-DMA response.
Frame Buffers	Integrated 10 KB frame buffer FIFOs (6 KB receive and 4KB transmit) for each data channel.
Connectors	LC-style connector that supports non-OFC, multimode fiber optic cabling using a small form factor optical transceiver module.
Form factor	17.78 cm x 10.67 cm (7.0 in x 4.2 in)
Power Consumption (66MHz PCI-X Optic)	
Single Channel	~4.75 Watts
Dual Channel	~10.5 Watts

2 Installing the HBA

This chapter describes the procedure for installing the A6826A HBA. This chapter includes:

- [Installation prerequisites](#), page 12
- [Installing the HBA](#), page 13

See the host documentation for installing the HBA.

△ **CAUTION:** Disconnect the host from the power source before installing the HBA. To reduce the risk of personal injury from hot surfaces, allow the internal server or workstation components to cool before touching.

△ **CAUTION:** Electrostatic discharge (ESD) can damage electronic components. Be sure you are properly grounded before beginning this procedure. See "[Regulatory compliance and safety](#)" on page 35 for related ESD information.

Installation prerequisites

Before you begin, make sure you have the following:

- A screwdriver (Phillips #1).
- An optical multimode cable with an LC-style duplex connector.
- Each HBA has a unique serial number that is located on the bottom of the HBA. Check the HBA and record its serial number, in the unlikely event that the NVRAM is corrupted.

HBA components

Figure 1 shows the HBA components that are referenced throughout this chapter.

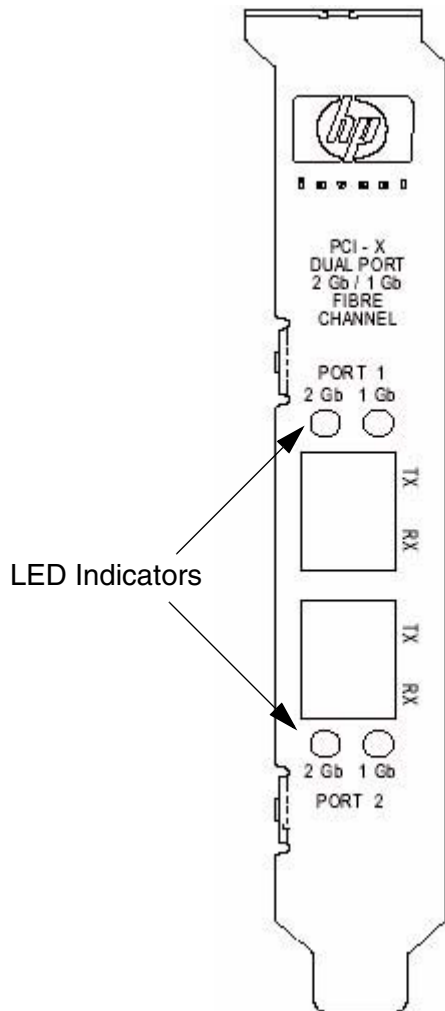


Figure 1 A6826A components

Jumpers

The jumpers on the HBA are set to the default state of the laser and are set at the factory with a jumper plug on pins 1-2 of the J3 jumper and on pins 1-2 of the J4 jumper.

△ **CAUTION:** Changing the jumper settings can result in the HBA being inoperable.

Before you begin installation

The HBA is self-configuring. However, some motherboards require manual configuration. See the documentation supplied with your computer, or contact your computer dealer to determine if your motherboard requires configuration.

Some motherboards have two kinds of PCI bus slots: master and slave. The A6826A must be in a PCI bus master slot. (Some motherboards have PCI bus master slots that are shared with onboard devices. The A6826A does not work in shared slots.)

PCI connectors vary among system HBA manufacturers. The A6826A is a 64-bit PCI device that can function in a 32-bit PCI slot; the slot conforms to the PCI specification. The rear edge of the PCI slot is notched.

△ **CAUTION:** If you try to install the HBA in a PCI slot that does not conform to the PCI specification, you may damage the device.

PCI and PCI-X slots look the same. If the server contains both PCI and PCI-X slots, see the server manufacturer's instructions to determine the slot type.

The A6826A is designed and tested to operate at PCI bus speeds of up to 133 MHz.

Installing the HBA

To install the HBA:

1. Check the motherboard and make any necessary configuration changes to accommodate the HBA.
2. Power down the peripherals, then turn off the computer.
3. Remove the computer cover and save the screws.
4. Choose any PCI bus slot that supports bus mastering.
5. Most motherboards automatically assign an IRQ level and interrupt line; if your motherboard does not, you must assign the IRQ level and use *interrupt line A* for this slot.
6. Remove the slot cover for the slot in which you will install the HBA.
7. Place the HBA in the slot. Carefully press the board into the slot until it seats firmly.
8. Secure the HBA to the chassis. Follow the server manufacturer's instructions.
9. Connect the appropriate cable from the devices to the corresponding LC-connector.
10. Carefully reinstall the computer cover. Insert and tighten the computer cover screws.

11. Apply the power:

- a.** Verify that the HBA is securely installed in the computer.
- b.** Verify that the correct media is attached.
- c.** Plug in and turn on the computer.
- d.** Observe LEDs for Power On Self Test (POST) results.

See "[POST conditions and results](#)" on page 25 for information about the LED indicators.

3 Installing the Linux driver

This chapter provides instructions for installing the Linux qla2300 driver for the A6826A HBA on an already installed Red Hat Enterprise Linux (Red Hat EL) or SUSE Linux Enterprise Server (SUSE SLES) for 64-bit Itanium systems.

The software kit for this HBA can be obtained from the HP web site:

<http://h18006.www1.hp.com/storage/saninfrastructure.html>.


To install the driver, you must be familiar with the operating system under which the HBA is to operate, and have access to standard system documentation.

To install the driver, you must perform the following:

- [Installing the driver kit](#), page 16
- [Installing the driver on the boot drive](#), page 17
- [Loading the driver](#), page 18
- [Configuring the driver](#), page 20

Installing the driver kit

HP recommends installing the complete driver kit for this HBA. The kit contains the HBA driver and the utilities that you need to deploy the A6826A HBA on Linux.

 **NOTE:** Using the following procedure installs the RPM and fibreutils.

To install the complete HP driver kit:


1. Copy the `.gz` file to your system.
2. Enter the following commands:

```
# tar -zxvf hp_qla2x00<version_info>.tar
```
3. Run the `set_parm` script to initialize the default HBA settings.

```
# ./set_parm
```
4. Enter the installation command:

```
# ./INSTALL
```

See the `README` file for more information.

 **NOTE:** You must install the `gcc` compiler, kernel, headers, and the kernel development or kernel sources packages before installing the driver kit.

Using RPM

The RPM Package Manager (RPM) is a package management system that lets you easily install Linux software. Using RPM, you can install software in prebuilt bundles called RPM packages. This section is included for reference for separate RPM installations you may need to install in the future.

For example, to install a RPM, copy the RPM package file to your system and enter the following command:

```
# rpm -ivh <package_name>.rpm
```

To install the Linux HBA driver RPM, enter the following command:

```
#rpm -ivh qla2x00-<version_info>.rpm
```

To upgrade a RPM package, copy the RPM package file to your system and enter the following command(s):

- For Red Hat EL, enter:

```
# rpm -Uvh --nopostun --nopreun <package_name>.rpm
```
- For SUSE SLES:

```
# rpm -Uvh <package_name>.rpm
```

To uninstall a RPM package, enter the following command:

```
# rpm -e <package_name>
```


Using fibreutils RPM

HP recommends using the fibreutils utility that is installed by the driver kit. It contains useful utilities for managing fibre-attached storage. To manually install this RPM, enter the following command:


```
# rpm -ivh fibreutils-<version>.rpm
```

For more information about fibreutils, see the file `/opt/hp/hp_fibreutils/README`.


Changing driver parameters

To change driver parameters:

1. Run the `set_parm` script located in the `/opt/hp/src...` directory.
2. Reboot the system.

 **NOTE:** You may not be able to unload the `qla2200` and/or `qla2300` modules if there is a process or file system using a device that is attached to the A6826A HBA.

Installing the driver on the boot drive

 **NOTE:** The following instructions for installing the driver and loading and unloading the driver are required only if the driver has been built from source. If the driver was installed from an RPM or driver kit, the driver loads at boot time.

Before installing the driver, note the following:

- The A6826A HBA must be installed in the system *before* installing the `qla2300` driver.
- The `<kernel_release_version>` is the Linux kernel release version of your system.
- In the following example, the path to your driver may be:

```
/lib/modules/<kernel_release_version>/kernel/drivers/addon/...
```

Perform the following steps to install the qla2300 driver on the boot drive:

1. Build the driver binary file. To build a driver binary from source files, see [“Building a driver from sources”](#) on page 31.

2. Copy the `qla2300.o` binary file to the following directory:

```
/lib/modules/<kernel_release_version>/kernel/drivers/scsi
```

3. At the command prompt, enter the following command to update the module dependency:

```
# depmod -a
```

The qla2300 driver is now installed on your boot drive. However, the driver must be loaded before the system can access the devices attached to the HBA.

Loading the driver


The qla2300 driver must be loaded before the system can access the devices attached to the A6826A HBA. To build a ramdisk image to automatically load the qla2300 driver at boot time, see [“Building a ramdisk image to load the qla2300 driver”](#) on page 18. To load the qla2300 driver manually, see [“Loading and unloading the qla2300 driver manually”](#) on page 19.

Building a ramdisk image to load the qla2300 driver


You can load the qla2300 driver at boot time using a ramdisk image as follows in this Red Hat example.

1. For Red Hat, add the following line to the file `/etc/modules.conf`:

```
alias scsi_hostadapter qla2300
```

 **NOTE:** If there are other SCSI HBAs installed on your system and the `scsi_hostadapter` alias is used, define a different alias (for example, `scsi_hostadaptern`. The *n* is a number in the range 1–9).

2. Build a new ramdisk image that contains the `qla2300.o` object file. Copy the driver binary file `qla2300.o` to `/lib/modules/<kernel_release_version>/drivers/scsi`.

 **NOTE:** The `<kernel_release_version>` is the Linux kernel release version of your system.

3. Add the dependency for the qla2300 driver and build the ramdisk image:

You can either run `depmod -a` or make sure the following line is in the `/lib/modules/<kernel_release_version>/modules.dep` file:

```
/lib/modules/<kernel_release_version>/kernel/drivers/scsi/  
qla2300.o: /lib/modules/<kernel_release_version>/kernel/  
drivers/scsi/scsi_mod.o
```

4. Build the ramdisk image file:

- For a single-processor system, enter the following commands, replacing `x.x.xx-x.x` with your Linux version number:

```
/sbin/mkinitrd /boot/newinitrd-image x.x.xx-x.x
```

- For a multiprocessor system, enter the following commands, replacing `x.x.xx-x.x` with your Linux version number.

```
/sbin/mkinitrd /boot/newinitrd-image x.x.xx-x.xsmp
```

5. Configure the boot loader with the new ramdisk image:

- a. Modify the `elilo.conf` file to load the new ramdisk image by changing the following line:

```
initrd=/boot/initrd_file_name
```

For example:

```
initrd=/boot/newinitrd-image
```

- b. Reboot the system. Select the kernel with the new ramdisk image.

Loading and unloading the qla2300 driver manually

Before loading the driver manually, first build the driver from sources as described in ["Building a uniprocessor version of the driver"](#) on page 32 or in ["Building a multiprocessor version of the driver"](#) on page 33.

After manually loading the qla2300 driver, you can access the devices and unload the driver manually without rebooting the system. The driver is also unloaded each time the system is rebooted.

To load the qla2300 driver:

1. Manually install the driver binary:

- a. Copy `qla2300.o` to the following directory:

```
/lib/modules/<kernel_release_version>/kernel/drivers/scsi
```

- b. Update the dependency file.

You can either run `depmod -a` or make sure that the following line is in the file

```
/lib/modules/<kernel_release_version>/modules.dep
```


```
/lib/modules/<kernel_release_version>/kernel/drivers/scsi/  
qla2300.o:/lib/modules/<kernel_release_version>/kernel/drivers/scsi/scsi_  
_mod.o
```

- c. Enter the following command to load the driver:

```
# modprobe qla2300
```

- d. Under the directory that contains the `qla2300.o` file, you can also enter the following command:

```
# insmod qla2300.o
```

 **NOTE:** HP recommends loading the driver using the `modprobe` command so that any driver parameter value specified in the `/etc/modprobe.conf` file takes effect.

- e. If your system has a previous version of the qla driver, rename the old binary included in the original distribution to ensure that it does not interfere with the updated version as follows:

```
# cd /lib/modules/<kernel_release_version>/kernel/  
drivers/addon/qla2300  
# mv qla2300.o qla2300_rh.o
```

After renaming the older driver version, load the new driver using `modprobe` after updating the dependency file.

2. To manually unload the qla2x00 driver, enter the following command at the command prompt:


```
# modprobe -r qla2300
```

Configuring the driver

The following sections include driver configuration information.

System driver parameter `max_scsi_luns` for Red Hat EL 2.1 kernels

You can configure support for multiple LUNs on Red Hat EL 2.1 kernel systems in one of the following ways:

 **NOTE:** If you have multiple HBAs, set `max_scsi_luns` to the largest number of LUNs supported by any one of these HBAs.

- To configure multiple LUN support during boot time, enter the following command at the boot prompt:

```
boot: linux max_scsi_luns=128
```
- If the SCSI Mid-Layer is compiled as a module, add the following line to the `/etc/modules.conf` file to scan for multiple LUNs at each boot:

```
options scsi_mod max_scsi_luns=128
```
- If the SCSI Mid-Layer is not compiled as a module, the boot loader can be configured to scan for multiple LUNs each time the system boots.

To complete the configuration, perform the following steps:

1. Add the following line to each of the kernel images listed in the `elilo.conf` file:

```
append="max_scsi_luns=128"
```

2. Reboot the system.

Driver command line parameters

Several command line options are available. For example:

- **Verbose** —This option provides detailed debug information. For example:

```
# insmod qla2300.o options = verbose
Waiting for LIP to complete....
scsi%d: Topology - %s, Host Loop address 0x%x
scsi(%d): LIP occurred
scsi(%d): LIP reset occurred
```

- **Quiet**—This option keeps the driver from displaying. For example:

```
# insmod qla2300.o ql2xopts = quiet
```

Proc filesystem support

The `/proc` filesystem for this driver resides in the `/proc/scsi/` directory. It contains entries for each SCSI HBA channel in the system. Each entry presents information about the HBA and information for each discovered LUN.

4 Troubleshooting

This chapter includes the following information to help you determine why the HBA is not functioning properly.

- [Hardware problem checklist](#), page 24
- [System configuration problems](#), page 24
- [Fibre Channel problem checklist](#), page 24
- [POST conditions and results](#), page 25

Hardware problem checklist

Check the following to determine if there is a hardware problem:

- Are all of the circuit cards installed securely in the system?
- Are all of the cables securely connected to the correct connectors? Be sure that the FC cables that attach from the HBA connectors to the device are connected correctly. For example, the optical transmit connector on the HBA must be connected to the optical receive connector on the device. Some connectors require a firm push to ensure proper seating. An easy way to check for correct seating is to switch the connectors on either the HBA or the device, then reboot the system.
- Is the HBA installed correctly in the PCI slot? Is it seated firmly in the slot?
- Check for interference due to nonstandard PCI connectors.
- Is the data rate setting correct? See “[Configuring the HBA](#)” on page 27 for information about configuring the HBA.
- Are all external peripherals properly powered up? See “[Configuring the HBA](#)” on page 27 for information about displaying attached devices.

System configuration problems

If you have problems with the motherboard connection, the HBA may not function properly.

All PCI-compliant and PCI-X-compliant systems automatically detect 32-bit or 64-bit HBAs and set the appropriate bus speed (for example, 33 MHz or 133 MHz). Check the motherboard for proper configuration.

See the documentation supplied with your computer, or contact your computer dealer to determine if your motherboard requires special configuration.

Fibre Channel problem checklist

Check the following Fibre Channel components to determine if the problem is Fibre Channel-related.

- Were all of the FC devices powered up before you powered up the server?
- Are all cables properly connected?
- Have you configured the RAID controller using the utilities provided by the manufacturer?
- If the Fibre Channel switch supports zoning, is it configured correctly for zoning?

POST conditions and results

Figure 1 on page 12 shows the position of the POST LED indicators.

If the LEDs indicate a failure during POST:

1. Make sure the HBA is seated firmly in the PCI slot.
2. Verify that the fiber cable connection to the HBA is secure.
3. Check the POST LED states listed in to determine the HBA status. .


Table 4 POST LED states

Amber LED (L1)	Green LED (L2)	State
Off	Off	Wake-up failure (dead board)
On	Off	POST failure (dead board)
Slow blink (1 Hz)	Off	Wake-up failure (dead board)
Fast blink (4 Hz)	Off	Failure in POST (dead board)
Flashing (irregular)	Off	POST processing in progress
Off	On	Failure while functioning
On	On	Failure while functioning
1 Fast Blink	On	1Gb-link rate; Normal; link up
2 Fast Blinks	On	2Gb-link rate; Normal; link up
3 Fast Blinks	On	4Gb-link rate; Normal; link up

4. If a problem occurs, follow the instructions in the next sections to troubleshoot.

A Configuring the HBA

This appendix describes how to configure the A6826A HBA on Linux systems using the Configuration protocol Driver Configuration menu.

 **NOTE:** This process is for advanced users who want to customize the configuration of the A6826A HBA and the connected devices.

This appendix includes:

- [Starting the Configuration protocol](#), page 27
- [Using the Driver Configuration menu](#), page 27

Starting the Configuration protocol

To configure the HBA on Linux, access the Configuration protocol as follows:

1. Use the `fibreutils` RPM package to obtain `efiutil` (`efiutil.efi`) and the auxiliary driver, `efiaux.drv` as described in “[Installing the fibreutils RPM](#)” on page 21.
2. Power-on the server to the EFI shell.
3. Start `efiutil` as follows (`efiaux.drv` is automatically loaded if it is needed):
 - a. Set the drive to the boot device (for example, `fs1:`).
 - b. Change to the directory containing `efiutil`. For example, enter:

```
cd efi\qla2300
```
 - c. Run `efiutil`:

```
efiutil.efi
```

Enter `help` at any time for information about commands.
 - d. Select the HBA channel that you want to configure by selecting **adapter**.
 - e. Select **configure**.
4. Configure the HBA’s NVRAM by selecting the menu items for the parameters to be changed .
5. Write the new configuration to NVRAM.
6. Exit the utility (select `quit`).
7. Reboot the system.

Using the Driver Configuration menu

This section describes the Configuration protocol’s Driver Configuration menu. The menu contains the following sections and functions:

- NVRAM—Modify settings that are stored in the HBA’s NVRAM.
- Information—View device, HBA, and Help information.
- Operation—Write or discard NVRAM data and exit the Configuration protocol.

The following example shows the Driver Configuration menu.

Main Menu

NVRAM Parameters

1. Edit Adapter Settings
2. Edit Advanced Settings
3. Edit Database
4. Edit Boot Settings

Information

5. Show Database
6. Show Translation
7. Show NVRAM Buffer
8. Info
9. Help

Operation

10. Abandon
11. Write
12. Quit

Table 5 describes the Driver Configuration components.

Table 5 Driver Configuration menu components

Menu Option	Description
NVRAM Parameters	
1. Edit Adapter Settings	Displays the Edit Adapter Settings menu.
2. Edit Advanced Settings	Displays the Edit Advanced Settings menu.
3. Edit Database	Displays the Edit Database screen.
4. Edit Boot Settings	Displays the Edit Boot Settings menu.
Information	
5. Show Database	Displays the contents of the WWN database in table form.
6. Show Translation	<p>Displays the SCSI target id translation table. This table is a list of SCSI tid and fibre channel loop id mapping pairs. Each entry in the table consists of the following for each device:</p> <ul style="list-style-type: none"> • SCSI id (tid) • Fibre channel loop id (lid) • World wide port name (WWPN) • World wide node name (WWNN) <p>All numbers are in hexadecimal. Tid values from 0x00 to 0x0A are persistent, and tid values greater than 0x0A are assigned sequentially as devices are discovered. Tid values greater than 0x80 are fabric-attached while those below 0x7F are arbitrated-loop-attached.</p>
7. Show NVRAM Buffer	Displays the contents of the local NVRAM buffer in hexadecimal. This is the local buffer containing changes made prior to using the Write selection to commit them to the HBA's NVRAM.
8. Info	<p>Displays the following HBA information:</p> <ul style="list-style-type: none"> • EFI device path • Port WWPN • Serial number • SSVID and SSDID from NVRAM <p>Use the device path to determine which HBA configuration is displayed.</p>
9. Help	Displays a brief description of the menu selections.

Table 5 Driver Configuration menu components (continued)

Menu Option	Description
Information	
10. Abandon	Abandons the changes in the current Configuration protocol local buffer and reloads its contents from the HBA's NVRAM.
11. Write	Writes the current Configuration protocol local buffer to the HBA's NVRAM. Use this function any time you use a menu selection to modify configuration data. When the NVRAM has been successfully written, the Configuration protocol local buffer is reloaded from the HBA's NVRAM.
12. Quit	Quits the Configuration protocol and returns to the EFI shell. You must use the Write selection to write any changes to the HBA's NVRAM before quitting.

B Building a driver from sources

This appendix describes how to build a Linux driver from sources.


In some cases, it may be necessary to build the driver in your configuration locally. These instructions for building the driver are required only if the driver was not installed from the driver kit or from the HP driver RPM.

This appendix includes:

- [Building a uniprocessor version of the driver](#), page 32
- [Building a multiprocessor version of the driver](#), page 33

Note the following:

- The following instructions are provided for reference only.
- The process for building the driver on your system may differ slightly from these examples. The examples are based on Linux systems with 2.4 kernels.
- To build a single-processor version of the qla2300 driver, see "[Building a uniprocessor version of the driver](#)" on page 32.
- To build a symmetric multiprocessor (SMP) version of the qla2300 driver, see "[Building a multiprocessor version of the driver](#)" on page 33.

 **NOTE:** You need the gcc compiler installed on your system. If it is not installed, do so now.

Building a uniprocessor version of the driver

Perform the following steps to build a uniprocessor version of the qla2300 driver:

1. If not already installed, extract the kernel-header and kernel-source RPM files from your Linux CD-ROM distribution. For example:

```
# cd /mnt/cdrom/RedHat/RPMS
# rpm -iv kernel-headers*.rpm
# rpm -iv kernel-source*.rpm
```

2. Locate the driver source files:

- If you have installed the driver RPM, the driver source files reside in `/opt/hp/src/...`
- If you have copied your drivers from other media, copy the `qla2x00src-xx.xx.tgz` file to the `/home/qla2x00` directory. For example, if you have copied the driver source file on to a CD-ROM, enter:

```
# cd /home
# mkdir qla2x00
# cd /home/qla2x00
# cp /mnt/cdrom/qla* . (The period [.] at the end is required.)
# tar -xvzf qla*.tgz
```

3. Build the qla2300 driver from the sources:

- For RedHat, enter:

```
# make
```
- For SUSE, enter:

```
# make OSVER=linux
```


Building a multiprocessor version of the driver

Perform the following steps to build an SMP version of the qla2300 driver:

1. If not already installed, extract the kernel-header and kernel-source RPM files from your Linux CD-ROM distribution. For example:

```
# cd /mnt/cdrom/RedHat/RPMS
# rpm -iv kernel-headers*.rpm
# rpm -iv kernel-source*.rpm
```

2. Change to the Linux source directory.

- For Red Hat, enter:

```
# cd /usr/src/linux-2.4
```
- For SUSE SLES, enter:

```
# cd /usr/src/linux
```

3. At the command prompt, enter the following:

```
# make menuconfig
```

- a. Choose **Processor type and features**, then press **Enter**. The Processor Type and Features menu displays.
- b. Choose **Symmetric Multiprocessor**, then press **Spacebar**.
- c. Click **Exit**. The system prompts:
Do you wish to save your new kernel configuration?
- d. Click **Yes**. The system saves a new config file in the current directory.

4. At the command prompt, enter the following:

```
# make dep
```

5. Locate the source files:

- If you have installed the driver RPM, the driver source files reside in `/opt/hp/src/...`
- If you have copied your drivers from other media, copy the `qla2x00src-vx.xx.tgz` file to the `home/qla2x00` directory. For example, if you have copied the driver source file on to a CD-ROM, enter:

```
# cd /home
# mkdir qla2x00
# cd /home/qla2x00
# cp /mnt/cdrom/qla* . (The period [.] at the end is required.)
# tar -xvzf qla*.tgz
```

6. Build the qla2300 driver from the sources:

- For Red Hat, enter:

```
# make SMP=1
```
- For SUSE SLES, enter:

```
# make SMP=1 OSVER=linux
```

C Regulatory compliance and safety

Laser device

All HP systems equipped with a laser device comply with safety standards, including International Electrotechnical Commission (IEC) 825. With specific regard to the laser, the equipment complies with laser product performance standards set by government agencies as a Class 1 laser product. The product does not emit hazardous light.

Laser safety warning

⚠ **WARNING!** To reduce the risk of exposure to hazardous radiation:

- Do not try to open the laser device enclosure. There are no user-serviceable components inside.
 - Do not operate controls, make adjustments, or perform procedures to the laser device other than those specified herein.
 - Allow only HP-authorized service technicians to repair the laser device.
-

Certification and classification information

This product contains a laser internal to the fiber optic (FO) transceiver for connection to the Fibre Channel communications port.

In the USA, the FO transceiver is certified as a Class 1 laser product conforming to the requirements contained in the Department of Health and Human Services (DHHS) regulation 21 CFR, Subchapter J. A label on the plastic FO transceiver housing indicates the certification.

Outside the USA, the FO transceiver is certified as a Class 1 laser product conforming to the requirements contained in IEC 825-1:1993 and EN 60825-1:1994, including Amendment 11:1996 and Amendment 2:2001.

Laser product label

The optional label in [Figure 2](#) or equivalent may be located on the surface of the HP-supplied laser device.



This optional label indicates that the product is classified as a CLASS 1 LASER PRODUCT. This label may appear on the laser device installed in your product.

Figure 2 Class 1 laser product label

International notices and statements

Canadian notice (avis Canadien)

Class A equipment

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

European Union notice

Products bearing the CE marking comply with the EMC Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community and if this product has telecommunication functionality, the R&TTE Directive (1999/5/EC).

Compliance with these directives implies conformity to the following European Norms (in parentheses are the equivalent international standards and regulations):

- EN55022 (CISPR 22)–Electromagnetic Interference
- EN55024 (IEC61000-4-2, IEC61000-4-3, IEC61000-4-4, IEC61000-4-5, IEC61000-4-6, IEC61000-4-8, IEC61000-4-11)–Electromagnetic Immunity
- Power Quality:
 - EN61000-3-2 (IEC61000-3-2)–Power Line Harmonics
 - EN61000-3-3 (IEC61000-3-3)–Power Line Flicker
- EN60950 (IEC60950)–Product Safety
- Also approved under UL 60950/CSA C22.2 No. 60950-00, Safety of Information Technology Equipment

BSMI notice

警告使用者:

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

Japanese notice

ご使用になっている装置にVCCIマークが付いていましたら、次の説明文をお読み下さい。

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。取扱説明書に従って正しい取り扱いをして下さい。

VCCIマークが付いていない場合には、次の点にご注意下さい。

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

Korean notices

A급 기기 (업무용 정보통신기기)

이 기기는 업무용으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이 점을 주의하시기 바라며, 만약 잘못판매 또는 구입하였을 때에는 가정용으로 교환하시기 바랍니다.

B급 기기 (가정용 정보통신기기)

이 기기는 가정용으로 전자파적합등록을 한 기기로서 주거지역에서는 물론 모든 지역에서 사용할 수 있습니다.

Electrostatic discharge

To prevent damage to the system, be aware of the precautions you need to follow when setting up the system or handling parts. A discharge of static electricity from a finger or other conductor may damage system boards or other static-sensitive devices. This type of damage may reduce the life expectancy of the device.

To prevent electrostatic damage, observe the following precautions:


- Avoid hand contact by transporting and storing products in static-safe containers.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free workstations.
- Place parts on a grounded surface before removing them from their containers.
- Avoid touching pins, leads, or circuitry.
- Always be properly grounded when touching a static-sensitive component or assembly (see "[Grounding methods](#)" on page 38).

Grounding methods

There are several methods for grounding. Use one or more of the following methods when handling or installing electrostatic-sensitive parts:

- Use a wrist strap connected by a ground cord to a grounded workstation or computer chassis. Wrist straps are flexible straps with a minimum of 1 megohm (± 10 percent) resistance in the ground cords. To provide proper ground, wear the strap snug against the skin.
- Use heel straps, toe straps, or boot straps at standing workstations. Wear the straps on both feet when standing on conductive floors or dissipating floor mats.
- Use conductive field service tools.
- Use a portable field service kit with a folding static-dissipating work mat.

If you do not have any of the suggested equipment for proper grounding, have an HP-authorized reseller install the part.

 **NOTE:** For more information on static electricity, or assistance with product installation, contact your HP-authorized reseller.

Index

- A**
 - audience 5
 - authorized reseller, HP 7
- B**
 - boot drive, installing drivers on 17
 - BSMI, regulatory compliance notice 37
- C**
 - certification and classification information, laser 35
 - Class A equipment, Canadian compliance statement 36
 - configuring HBAs on Linux 27
 - conventions
 - document 6
 - text symbols 6, 35
- D**
 - document
 - conventions 6
 - prerequisites 5
 - related documentation 5
 - documentation, HP web site 5
 - drivers
 - building multiprocessor version 33
 - building uniprocessor version 32
 - changing parameters 17
 - efiaux.drv 27
 - installing complete kit 16
 - installing from RPM packages 16
 - installing on boot drive 17
 - loading 18
 - qla2300 15
 - ramdisk image 18
- E**
 - efiaux.drv 27
 - efiutil.efi 27
 - electrostatic damage prevention 38
 - environmental specifications 9
 - ESD (electrostatic discharge) 38
 - European Union, regulatory compliance notice 36
- F**
 - features
 - complies with 9
 - Fabric Loop Attach (FLA) 9
 - Fibre Channel Protocol Manager (FPM) 9
 - Fibre Channel Protocol-SCSI 9
 - Private Loop Direct Attach (PLDA) 9
 - Fibre Channel problems 24
 - fibreutils RPM 17, 27
- G**
 - grounding methods 38
- H**
 - HBAs
 - configuring on Linux 27
 - environmental specifications 9
 - installation prerequisites 12
 - installing 13
 - Linux Configuration protocol 27
 - performance specifications 9
 - physical specifications 10
 - POST LED states 25
 - help, obtaining 7
 - HP
 - authorized reseller 7
 - storage web site 7
 - Subscriber's choice web site 7
 - technical support 7
- I**
 - IEC EMC, worldwide regulatory compliance notice 36
 - installing
 - complete HP driver kit 16
 - HBAs 13
 - prerequisites 12
 - RPM packages 16

J

Japan, regulatory compliance notice [37](#)

K

Korean, regulatory compliance notice [37](#)

L

label, laser [36](#)

laser

- international certification and classification

 - information [35](#)

 - product label [36](#)

 - radiation, warning [35](#)

LED states [25](#)

Linux

- configuring HBAs [27](#)

- installing drivers on boot drive [17](#)

- loading drivers [18](#)

- qla2300 driver [15](#)

M

multiprocessor driver [33](#)

P

parameters, changing [17](#)

PCI-X bus slots

- master [13](#)

- slave [13](#)

POST LED states [25](#)

prerequisites [5](#)

preventing electrostatic damage [38](#)

problems

- configuration [24](#)

- Fibre Channel [24](#)

- hardware [24](#)

Q

qla2300 driver [15](#)

R

ramdisk image [18](#)

regulatory compliance

- notices

 - BSMI [37](#)

 - European Union [36](#)

 - IEC EMC statement, worldwide [36](#)

Japan [37](#)

Korean [37](#)

related documentation [5](#)

RPM packages

- building a multiprocessor driver [33](#)

- building a uniprocessor driver [32](#)

- fibretutils [17](#), [27](#)

- installing [16](#)

S

specifications

- environmental [9](#)

- performance [9](#)

- physical [10](#)

Subscriber's choice, HP [7](#)

symbols in text [6](#), [35](#)

T

technical support, HP [7](#)

text symbols [6](#), [35](#)

troubleshooting

- configuration problems [24](#)

- Fibre Channel problems [24](#)

- hardware problems [24](#)

- POST LED states [25](#)

U

uniprocessor driver [32](#)

W

warnings, lasers, radiation [35](#)

web sites

- HP documentation [5](#)

- HP storage [7](#)

- HP Subscriber's choice [7](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>