

DP751 Series Solar Powered Thermometers Operator's Manual: M1499/0995



#### **DESCRIPTION**

The OMEGA® DP751 Solar Powered Thermometers are excellent for outdoor applications where AC power is not available and wide ambient operating temperature is required. Using a 3 volt solar cell the DP751 will operate with as little as 35 lux (a comfortably lit desk is about 300 lux.) The ability to operate in temperatures as low as -35°F, allows the user to monitor temperatures of pipelines in remote sites. Other applications include walk-in refrigerators/freezers and photographic apparatus. Since it is self-powered, the DP751 thermometers can also be used near hot tubs and pools where electrical safety is a concern.

The following models are available from OMEGA Engineering, Inc.

PART NUMBER	DESCRIPTION OF SOLAR POWERED THERMOMETERS
DP751F-(*)-SLR-FL	2.25" Square LCD,
	Range of -58° to 158°F,
	Resolution of 1°F
DP751C-(*)-SLR-FL	2.25" Square LCD,
	Range of -50° to 70°C,
	Resolution of 1°C
NOTE: * specify :	36 or 96 inches for cable length. Special lengths are available.

The thermistor and cable are calibrated and matched to the display. The probes

are not interchangeable.

#### UNPACKING

Remove the Packing List and verify that all equipment has been received. If there are any questions about the shipment, please call the OMEGA Customer Service Department.

Upon receipt of shipment, inspect the container and equipment for signs of damage. Take particular note of any evidence of rough handling in transit. Immediately report any damage to the shipping agent.

#### NOTE

The carrier will not honor any claims unless all shipping material is saved for their examination. After examining and removing contents, save packing material and carton in the event reshipment is necessary.

Make sure the thermometer, part number label, and manual are in the shipping box.

DFM0995JCE3BA

#### INSTALLATION

#### (FRONT FLANGE MOUNTING IN A PANEL, OR WALK-IN COOLER)

- 1. Exterior panel hole size to be round 2-1/8" diameter with minimum depth of 1".
- 2. Interior hole to be a minimum of 5/16" (sensor is 1/4" diameter).
- 3. Push sensor probe through hole from the exterior and take up slack from the interior.
- 4. Place the thermometer in position on the exterior and secure with minimum of two #6 pan head screws (self tapping) installed diagonally (upper right/lower left). Be careful not to overtighten.
- 5. Secure probe and sensor wire. Use sealant to fill in interior hole.
- Clean the temperature display (LCD) and solar panel before securing protective part number mask.
- 7. Peel off backing on protective part number mask and secure on front of unit being sure to press on all around to seal the mask to the case.

#### (U-CLAMP MOUNTING IN A PANEL)

- 1. Exterior panel hole size to be round 2-1/8" diameter.
- 2. Push sensor probe through hole from the exterior and take up slack from the interior.
- Place the thermometer in position on the exterior and secure using U-Clamp and two thumb screws supplied. Be careful not to overtighten.
- Secure probe and sensor wire with clips (not supplied). Use sealant to fill in interior hole.
- Clean the temperature display (LCD) and solar panel before securing protective part number mask.
- Peel off backing on protective part number mask and secure on front of unit being sure to press on all around to seal the mask to the case.

## **CALIBRATION PROCEDURE**

- Note each unit is factory calibrated and a glyptol color coded seal is placed on the calibration potentiometer to prevent calibration shift. The color represents the date of manufacturing.
- Immerse the sensor in a known temperature circulated liquid bath, using a mercury glass thermometer to obtain the right temperature, or have a mixture of water and crushed ice (slush) to obtain 32°F (0°C).


3. To re-calibrate the thermometer, use a small phillips head screwdriver to adjust the potentiometer on the back of the DP751. Turn clockwise to adjust down and counterclockwise to adjust up. Keep in mind the 10 second update time when making adjustments. To re-seal the potentiometer, you may use clear nail polish.


## SENSOR MOUNTING DIRECTIONS

Mount the sensor and its lead wire to minimize or eliminate stress due to differential expansion and mechanical strain. The following is suggested:

NOTES:

- 1. Do not crimp, cut, or expose sensor lead wire.
- 2. Minimum bending radius for sensor wire = 1"
- 3. Always leave slack between sensor and wire mounting brackets.
- Where a sharp bend is necessary or repeated bending (on door) will take place, use a strain-relief loop, as shown in Figures B and D.
- 5. Do not place a bend at the sensor, see Figure C.

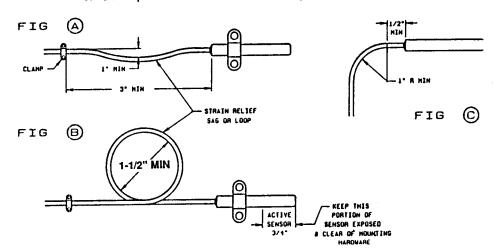

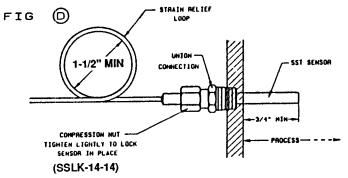

#### **SPECIFICATIONS**

SENSOR:

Thermistor 0.25" OD, 1.8" long stainless steel

probe with 36" or 96" of lead wire .  $\Omega = 50 \text{ K ohms}$ 

POWER:

3V solar cell

ACCURACY:

±2.0°F

**AMBIENT OPERATING** 

-35° to 160°F (-30° to 72°C) **UPDATE TIME:** DISPLAY:

10 seconds

RANGE:

**WEIGHT:** 

PANEL CUTOUT:

0.375" LCD 2.04" diameter

LUX RATING: **SOLAR CELL LIFE:**  35 Lux minimum

approx. 15 years

2.25" x 2.25" x 0.78" deep (57.2 x 57.2 x 19.8 mm)

**DIMENSIONS:** MOUNTING:

U-clamp standard

**TEMPERATURE RANGE** 

DP751F model: -58° to 158°F // Resolution of 1°F DP751C model: -50° to 70°C // Resolution of 1°C

AND RESOLUTION:

1.69 oz (48 gm)

# **CE OMEGA**

# Servicing USA and Canada: Call OMEGA Toll Free

## Canada

USA One Omega Drive, Box 4047 Stamford, CT 06907-0047 USA Telephone: (203) 359-1660 FAX: (203) 359-7700

976 Bergar Laval (Quebec) H7L 5A1 Telephone: (514) 856-692 FAX: (514) 856-6886

X: (203) 595-/700
Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA™
Customer Service: 1-800-622-2378 / 1-800-622-BEST™
Engineering Service: 1-800-872-9436 / 1-800-USA-VHEN™
TELEX: 996404 EASYLINK: 62968934 CABLE: OMEGA

# Servicing Europe: United Kingdom Sales and Distribution Center 25 Swannington Road, Broughton Astley, Leicestershire LE9 6TU England Telephone: 44 (1455) 285520 FAX: 44 (1455) 283912

#### WARRANTY #

CMEGA warrants this unit to be free of defects in materials and workmanship and to give satisfactory service for a period of 13 months from date of purchase. OMEGA warranty adds an additional one (1) month grace period to the normal one (1) year product warranty from date of purchase. OMEGA warranty adds an additional one (1) month grace period to the normal one (1) year product warranty to cover handling and shipping time. This ensures that OMEGA's customers service Department will issue an Authorized should melfunction, it must be returned to the factory for evaluation. OMEGA's customers Service Department will issue an Authorized should melfunction, it must be returned to the factory for evaluation. OMEGA's customers Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the found to be defective it will Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the found to be defective it will return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the found to be defective it will return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit shows evidence of having been tampered with or seporation ground to request the unit shows evidence of having been tampered with or seporation productions outside of OMEGA's control. Components which wear or which are damaged by misuse are not warranted. These include contact points, fuses, and triess.

OMEGA is glad to offer suggestions on the use of its various products. Nevertheless, OMEGA only warrants that thep manufactured by it will be as specified and free of defects.

OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FIT-NESS FOR A PARTICULAR PURPOSE ARE HERESY DISCLAIMED.

LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of emponent upon which liability is based. In no event shall OMEGA be liable for consequential, incidential or special damages.

Every precaution for accuracy has been taken in the preparation of this manual; however, OMEGA ENGINEERING, INC. neither assumes responsibility for any omissions or errors that may appear nor assumes liability for any damages that result from the use of the products in accordance with the information contained in the manual.

SPECIAL CONDITION: Should this equipment be used in or with any nuclear installation or activity, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the equipment in such a manner.

PRETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA ENGINEERING Customer Service Department.

BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

FOR WARRANTY RETURNS, please have the following information available BEFORE contacting OMEGA:

1. P.O. number under which the product was PURCHASED,

2. Model and serial number of the product under warranty, and

3. Repair instructions and/or specific problem relative to the product.

- FOR NON-WARRANTY REPAIRS OR CALIBRATION, consult OMEGA for current repair/calibration charges. Have the following information available BEFORE contacting OMEGA:

  1. P.O. number to cover the COST of the repair/calibration,

  Model and serial number of product, and

  3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the llatest in technology and engineering OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

Copyright 1995 OMEGA ENGINEERING, INC. All rights reserved. This documentation may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without prior written consent of OMEGA ENGINEERING, INC.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com