

MODEL H0758 3-SHELF CART INSTRUCTIONS

The Model H0758 is a contemporary looking, low height cart that has no-slip shelves and a non-marring "soft" edge.

Specifications

Weight	43 lbs
Load Capacity	
Dimensions	
Top Shelf Height	241/21
Distance Between Shelves	

Inventory (Figure 1)

A.	Bottom Shelf	1
B.	Center Shelf	1
C.	Top Shelf	1
D.	Handle	1
E.	Columns	8
F.	Support Rods 20" Long	2
G.	Support Rods 205/8" Long	2
H.	Flat Washers 10mm	4
I.	Fixed Casters	2
J.	Swivel Casters	2

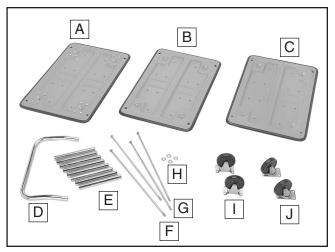


Figure 1. H0758 inventory.

Recommended Tools

Wrench/Socket 12mm	1
Wrench/Socket 17mm	1

Assembly

 Insert a support rod with a 10mm flat washer through a mounting hole in the bottom shelf, then slide a column onto the rod, as shown in Flgure 2.

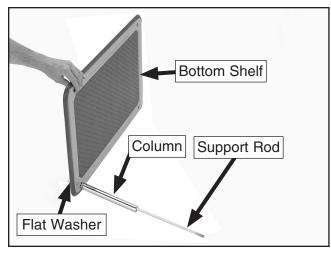


Figure 2. Support rod and column installed onto bottom shelf.

Continued on next page —

COPYRIGHT © JULY, 2008 BY GRIZZLY INDUSTRIAL, INC.

WARNING: NO PORTION OF THIS MANUAL MAY BE REPRODUCED IN ANY SHAPE
OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.

#BL10942 PRINTED IN CHINA

2. Repeat **Step 1** with the remaining support rods (see **Figure 3**), making sure to install the two 20" rods on the front end and the 20⁵/₈" rods on the back end of the shelf.

Note: The longer rods will install into the handle later in these instructions.

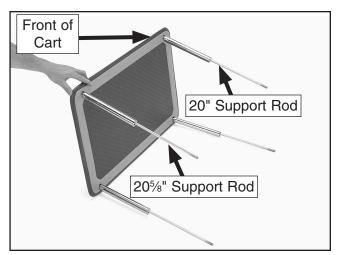


Figure 3. Lower shelf installed.

3. Slide the middle shelf through the support rods (**Figure 4**), then install a column onto each rod.

Note: Make sure the lighter side of the shelf faces down and toward the fasteners on the bottom shelf.

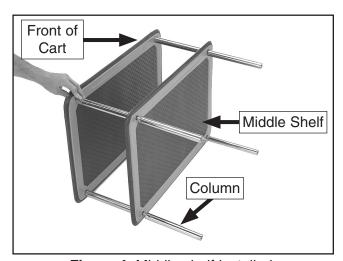


Figure 4. Middle shelf installed.

- **4.** Place the top shelf over the rods and align the mounting holes.
- 5. Secure the front end of the top shelf with the 20" support rods, then fasten the handle to the cart with the 20⁵/₈" support rods (**Figure 5**).

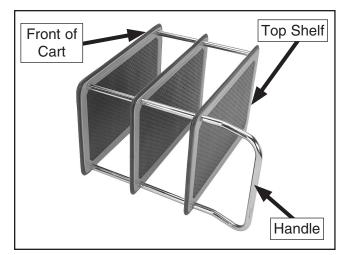


Figure 5. Top shelf and handle assembled.

6. Fasten the casters to the bottom shelf (see **Figure 6**)—placing the fixed casters in the front and swivel casters on the handle end—using the pre-installed M8-1.25 x 12 hex bolts and lock washers.


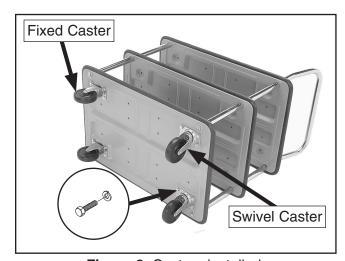


Figure 6. Casters installed.

7. Place the cart in an upright position with the wheels on a flat surface.

If you need help with your cart, call our Tech Support at: (570) 546-9663.

H0758 Parts Breakdown and List

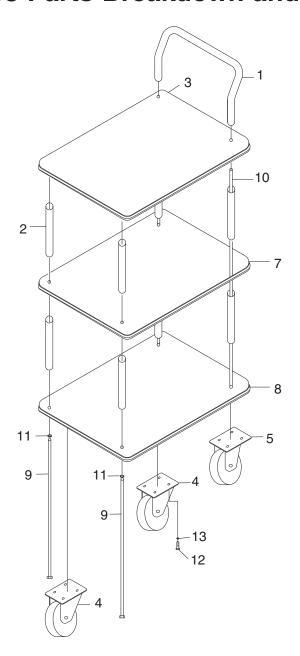

REF	PART#	DESCRIPTION
1	PH0758001	HANDLE
2	PH0758002	COLUMN
3	PH0758003	UPPER SHELF
4	PH0758004	FIXED CASTER
5	PH0758005	SWIVEL CASTER
7	PH0758007	MIDDLE SHELF

REF	PART #	DESCRIPTION
8	PH0758008	LOWER SHELF
9	PH0758009	HEX BOLT M10-1.5 X 508
10	PH0758010	HEX BOLT M10-1.5 X 524
11	PW04M	FLAT WASHER 10MM
12	PB06M	HEX BOLT M8-1.25 X 12
13	PW01M	FLAT WASHER 8MM



Buy Direct and Save with Grizzly® - Trusted, Proven and a Great Value!

Visit Our Website Today And Discover Why Grizzly® Is The Industry Leader!

- SECURE ORDERING
- ORDERS SHIPPED WITHIN 24 HOURS
- E-MAIL RESPONSE WITHIN ONE HOUR

-OR-

Call Today For A FREE Full Color Catalog

1-800-523-4777









Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com