

PENTAX

DATA COMMUNICATION MANUAL

PTS-III

ASAHI PRECISION CO., LTD.

Ver. 1.0

## FOREWARD

This manual mentions data communications between the PTS-III and personal computers and describes the communications functions of TS for those who understand how personal computers work and who wish to construct a system which makes use of TS.

## ---- CONTENTS ----

|  |     |
|--|-----|
| 1. Overview .....                                  | P1  |
| 2. Interface specifications .....                  | P3  |
| 2-1. Mechanical and electrical characteristics ... | P3  |
| 1. Connector type                                  |     |
| 2. Signal identification                           |     |
| 3. Pin assignment                                  |     |
| 4. Connector shapes                                |     |
| 2-2. Connecting to computers .....                 | P4  |
| 1. IBM-PC (IBM)                                    |     |
| 2. J-3100 (TOSHIBA)                                |     |
| 3. PC-1600 (SHARP)                                 |     |
| 3. Data communications .....                       | P5  |
| 3-1. Communication specifications .....            | P5  |
| 3-2. TS command characters .....                   | P6  |
| 3-3. Data block format .....                       | P7  |
| 3-4. Data header .....                             | P9  |
| 3-5. Key code format .....                         | P11 |
| 3-6. TS mode control protocol .....                | P11 |
| 4. Appendix .....                                  | P13 |
| 4-1. Sample programs .....                         | P13 |
| 1. Status information display program              |     |
| 2. Inverse mode sample program                     |     |
| 4-2. Character code table .....                    | P19 |

## 1. OVERVIEW


The PTS-III has a communication function which allows bidirectional communication with personal computers and handheld terminals which has RS-232C interfaces. This allows users to construct their own original measuring systems. Furthermore, it will also be possible to record data from the personal computer after the equipment is set up and the prism is collimated.

### 1-1. TS and Personal Computer Connections

A special cable is required to connect the PTS-III to external equipment. The PTS-III connector and personal computer connector are commercially available, so that making a special cable should not be difficult. Refer to "2. Interface specifications" in regard to the actual connections.

### 1-2. Setting TS

After the hardware is connected ( with a cable ), the communication parameters must be set for communications. This means that the conditions on both sides must be set, so that electrical signals which are exchanged between the TS and external equipment will be handled as data. The settings are made on the TS with the DIP switches on the right side of the TS body. Refer to "3. Data communications" for details.

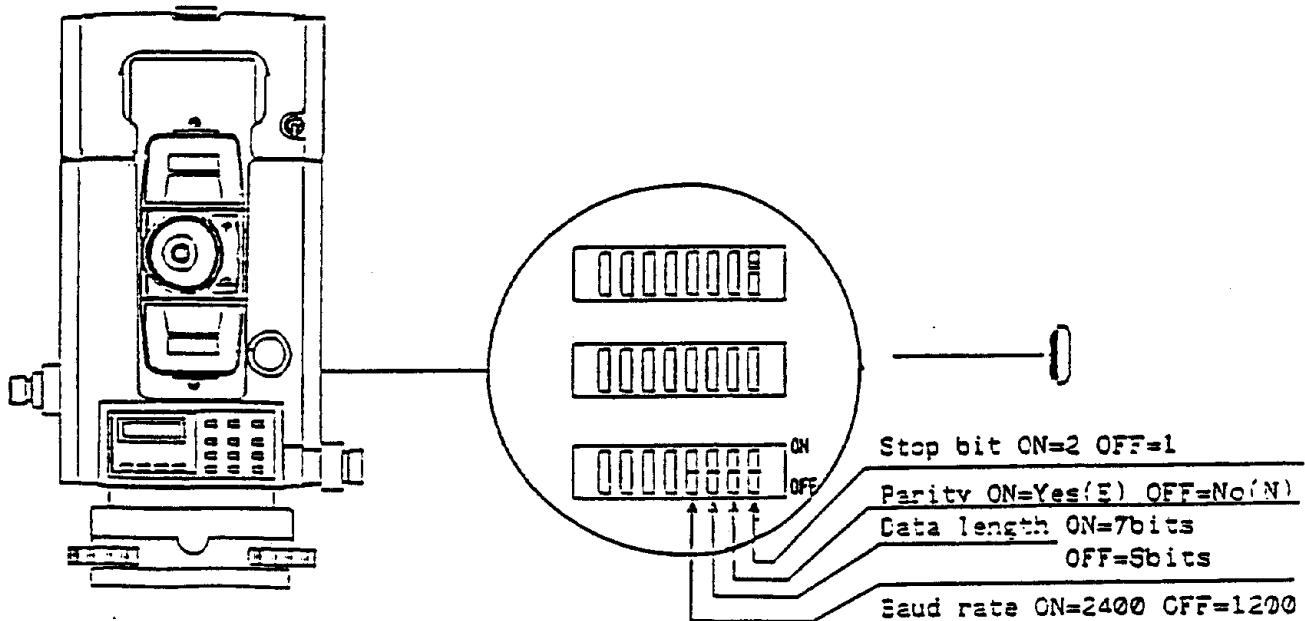

### 1-3. Communication with TS

When TS receives specific code from external equipment, it returns measurement data to the external data, or switches to a specified mode. Also, if the data from external equipment is defective, then the specified code will be sent to the external equipment. Refer to "3. Data communications" for further details.

Example: To receive constant data (Temperature, Atmospheric pressure, Prism constant) from TS.

- 1) External equipment sends "f" to TS.
- 2) Constant data is sent from TS.
- 3) If the code sent to TS is defective, then TS will send "j".

## 2. Interface Specifications

### 2-1. Mechanical and Electrical Characteristics

#### 1. Connector Types

Manufacturer: HIROSE ELECTRIC CO., LTD. Model: HR10A-7R-6S

Round-receptacle 6-pins (receptacle)

#### 2. Signal identification


| Control signal | Frequency | Logic | Code  | Voltage-polarity |
|----------------|-----------|-------|-------|------------------|
| ON             | FA(High)  | 0     | Space | +9               |
| OFF            | FZ(Low)   | 1     | Mark  | -9               |

#### 3. Pin assignment

| Detachable type(PTS-III 05/10) |             |                 |           | Shift type(05C/10C) |
|--------------------------------|-------------|-----------------|-----------|---------------------|
| No                             | Signal name | Circuit name    | Direction | Signal name         |
| 1                              | SD(TXD)     | Sending data    | out       | SD                  |
| 2                              | RD(RXD)     | Receiving data  | in        | RD                  |
| 3                              | CS(CTS)     | Clear to send   | in        | ---                 |
| 4                              | RS(RTS)     | Request to send | out       | ---                 |
| 5                              | SG          | Signal grand    | ---       | SG                  |
| 6                              | FG          | Frame grand     | ---       | FG                  |


\* CS and RS are connected in the instrument. (Shift type only.)

#### 4. Connector shapes

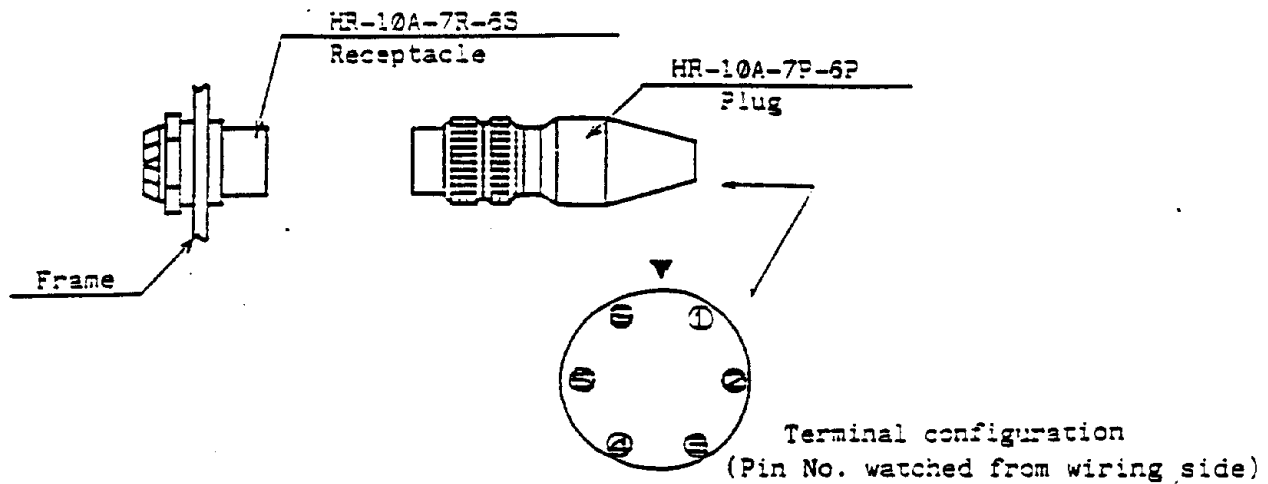


#### 2-2. Connecting to computers

##### 1. IBM-PC

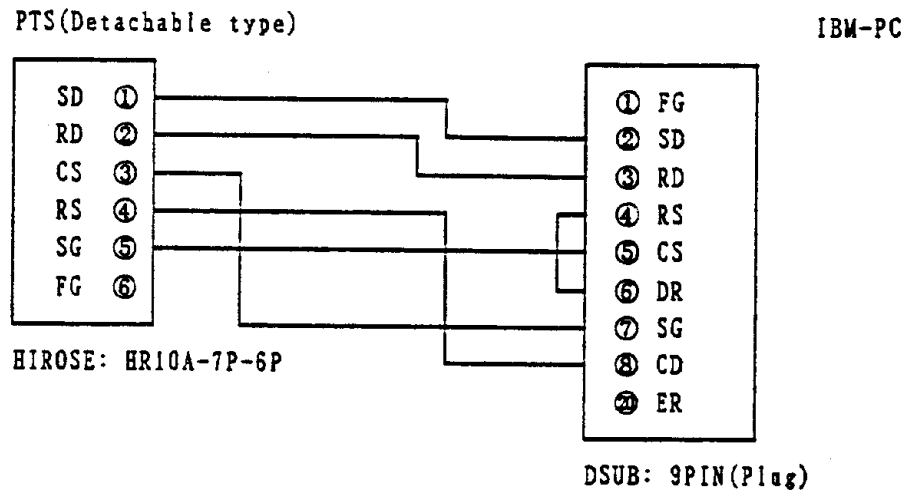


##### 2. J-3100

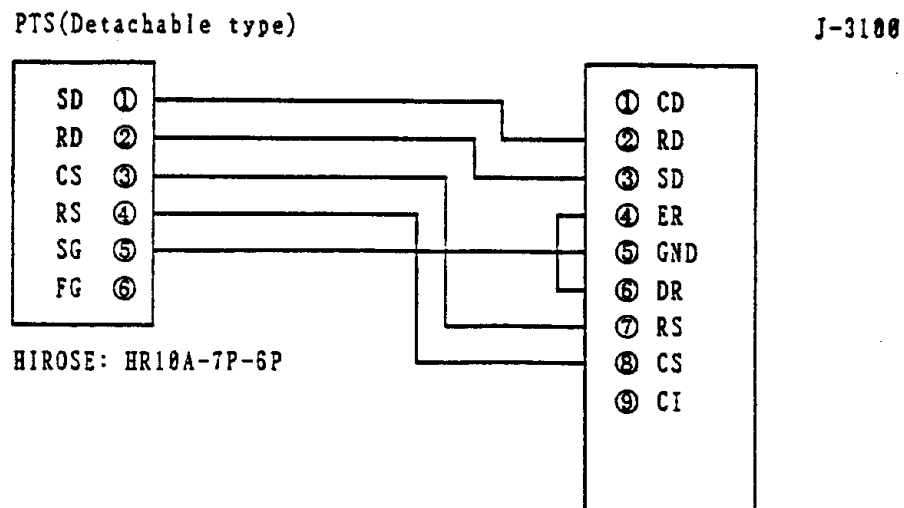

3. J-3100

PTS(Detachable type)

PC-1600K

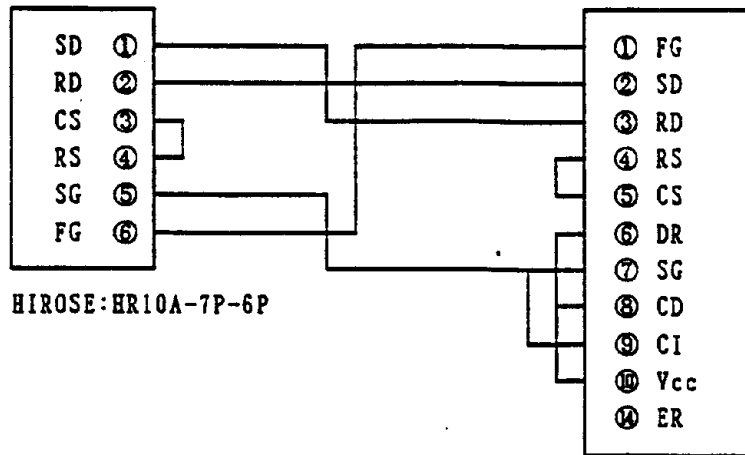

HIROSE:HR10A-7P-6P


SHARP CE1605L

Note: If shift type (05C/10C), then ③ CS and ④ RS are connected internally.


### 3. Data communications

#### 3-1. Communication specifications

- 1) Communication method: Start-stop synchronized  
method(asynchronous), half-duplex
- 2) Transfer rate : 1200 baud, 2400 baud(Switched with DIP switch)
- 3) Stop bit length : 1 bit, 2bit(Switched with DIP switch)
- 4) Parity method : Even(E), None(N) (Switched with DIP switch)
- 5) Data length : 7 bit, 8 bit (Switched with DIP switch)
- 6) Data structure :



- 7) Data flow control : By the X parameter
- 8) Code used : JIS 7 bits or 8 bits character code set
- 9) Time monitoring : None
- 10) Error control : Vertical parity (Dependent on  
external equipment processing.)
- 11) Control method : Control line(handshake) RTS/CTS monitoring  
(RTS on when the power supply is turned on)
- 12) Transmission control method: PENTAX protocol (PTS-III 05C,10C have no capability.)  
Control by TS command characters
- 13) Command format : One command character

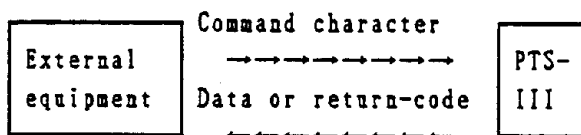

Example: If TS receives "a", then it sends type 1 data.

3-2. TS command characters

| Item                            | Char. | HEX | Direction | E. C | Contents  |
|---------------------------------|-------|-----|-----------|------|---|
| 1. Type 1 data request          | a     | 61h | → TS      | YES  | H. A/V. A/S. D  |
| 2. Type 2 data request          | b     | 62h | → TS      | YES  | H. A/H. D/V. D  |
| 3. Type 3 data request          | c     | 63h | → TS      | NO   | Inst. Coordinates<br>(X0, Y0, Z0)                                 |
| 4. Type 4 data request          | d     | 64h | → TS      | YES  | T. point Coordinates<br>(X, Y, Z)                                 |
| 5. Type 5 data request          | e     | 65h | → TS      | NO   | H. A/V. A.<br>Average of repeat angle<br>/Sum/Numbers/V. A        |
| -----                           |       |     |           |      |   |
| 6. Type 6 data request          | f     | 66h | → TS      | NO   | Tem./Pres./PPM/PRSM<br>/AIM                                       |
| 7. Indicating AIM<br>setting    | g     | 67h | → TS      | NO   | Unnecessary for<br>PTS-II, III                                    |
| 8. Data output<br>ending        | h     | 68h | → TS      |      | Release of retention of<br>measured distance value:<br>Output end |
| 9. Positive response            | i     | 69h | ← TS      |      | With CR+LF  |
| 10. Negative response           | j     | 6Ah | ← TS      |      | Incorrect request   |
| -----                           |       |     |           |      |   |
| 11. Mode, data input<br>request | l     | 6Ch | → TS      | NO   | For mode control data input,<br>send to TS                        |
| 12. Mode data input<br>wait     | m     | 6Dh | ← TS      |      | Receiving "l", TS sends   |
| 13. Data re-request             | n     | 6Eh | ← TS      |      | TS which have different<br>least angle unit sends                 |
| 14. TS mode control<br>request  | p     | 70h | → TS      |      | For TS mode control   |
| 15. Data input request          | q     | 71h | → TS      |      | For data transmission<br>to TS                                    |
| -----                           |       |     |           |      |   |
| 16. Status information          | r     | 72h | → TS      |      | Digit-switch status<br>request                                    |
| 17. Type 7 data request         | s     | 73h | → TS      | NO   | Inst. Height request  |
| 18. Type 8 data request         | t     | 74h | → TS      | NO   | T. Point Height data request                                      |
| 19. Receiving O. K              | X on  | 11h | → TS      |      | Flow control  |
| 20. Receiving stop              | X off | 13h | → TS      |      | Flow control  |
| 21. Data block ending           | ETX   | 03h | → TS      |      |   |

H. A: Horizontal angle  
V. D: Vertical Distance  
H. D: Horizontal distance  
E. C: Ending code

V. A: Vertical angle  
Tem: Temperature  
AIM: AIM value

S. D : Slope distance  
Press. = Pressure  
Inst. = Instrument  
T. point= Target point





(MSB) b7 b6 b5 b4 b3 b2 b1 b0 (LSB)

|    |       |   |   |   |   |       |       |       |       |
|----|-------|---|---|---|---|-------|-------|-------|-------|
| A: |       | - | - | - | - | Disp. | Comp. | Vang. | Unit  |
|    | On 1  |   |   | 1 | 1 | 1"    | on    | 20°   | Deg   |
|    | Off 0 | 8 | 8 |   |   | 5"    | off   | 80°   | Gon   |
| B: |       | - | - | - | - | Ave.  | Unit  | Coef. | Refr. |
|    | On 1  |   |   | 1 | 1 | 3     | M     | 0.14  | on    |
|    | Off 0 | 8 | 8 |   |   | 5     | F     | 0.20  | off   |
| C: |       | - | - | - | - | -     | -     | Poff  | Atm.  |
|    | On 1  |   |   | 1 | 1 |       |       | on    | on    |
|    | Off 0 | 8 | 8 |   |   | 8     | 8     | off   | off   |

Notes: A,B and C are represented by 8 bits ASCII code.  
The top 4 bits are fixed at 3, so that A,B and C are "30" through "3F".

Disp.=Display  
Comp.=Compensator  
Vang.=Vertical angle  
Coef.=Refraction Coefficient  
Refr.=Refraction  
Poff =Power off  
Atm. =Atmosphere

Example: In case STA ??? is received  
A=?(3F) B=?(3F) C=3(33) So that ?=0011 1111 ?=0011 1111 3=0011 0011  
Interpreting these figures with the table above, we get the following.

|                        |                      |                    |                      |       |
|------------------------|----------------------|--------------------|----------------------|-------|
| (b3)                   | (b2)                 | (b1)               | (b0)                 | (LSB) |
| Angle display unit= 1" | Comp.= ON            | Zenith=8°          | Angle Unit= Degree   |       |
| Average number=3       | Distance unit= Meter | Comp.Co-efficient  | Comp.= ON            |       |
|                        |                      | Auto power off= ON | Atmospheric comp.=ON |       |

Comp.=Compensator

2) Input data

Input data means the data which can be sent from external equipment to TS.  
The data format should be arranged, then sent to TS.

( If there is an error in the format or header, then TS will return "j".)

| Data Item                  | Data format                                      |
|----------------------------|--|
| 1) Temp. Press. P. const.  | TEC ±###PRM ###PSM ±##[ETX]                      |
| 2) Prism constant          | PSM ±##[ETX]                                     |
| 3) Inst. coordinates X,Y,Z | XON ±#####.###YOM ±#####.###ZOM ±## ###.###[ETX] |
| 4) Inst. Height            | WZM ##.###[ETX]                                  |
| 5) B. S. coordinates X,Y,Z | X1M ±#####.###Y1M ±#####.###Z1M ±## ###.###[ETX] |
| 6) T. P. coordinates X,Y,Z | XXM ±#####.###YYM ±#####.###ZZM ±## ###.###[ETX] |
| 7) Prism Height            | PZM ##.###[ETX]                                  |
| 8) Horizontal angle        | HHD ±0###.##.##[ETX]                             |
| 9) S. O. distance          |  |
| Horizontal distance        | HSM +#####.###[ETX]                              |
| Slope distance             | SSM +#####.###[ETX]                              |
| 10) V. D. Z coordinates    | VSM ±#####.###ZSM ±#####.###[ETX]                |
| 11) X,Y coordinates        | XSM ±#####.###YSM ±#####.###[ETX]                |

Temp. = Temperature Press. = Pressure P. const. = Prism constant

Inst. = Instrument V. D. = Vertical Distance S. O. = Stake Out

B. S. = Back sight T. P. = Target Point

3-4. Data header

The attributes of TS data are determined by an identifier.  
This identifier is called the header.

| Item \ Unit      | (DEG) | (GRAD) |
|------------------|-------|--------|
| Horizontal angle | HHD   | HG     |

| Item \ Unit    | Zenith $\theta$ DEG | Horizontal $\theta$ DEG | Zenith $\theta$ GRAD | Horizontal $\theta$ GRED |
|----------------|---------------------|-------------------------|----------------------|--------------------------|
| Vertical angle | VDD                 | VHG                     | VDG                  | VHG                      |

| Item \ Unit         | (m) | m/AV | (f) | f/AV |
|---------------------|-----|------|-----|------|
| Slope distance      | SLM | SAM  | SLF | SAF  |
| Horizontal distance | HOM | HAM  | HOF | HAF  |
| Vertical distance   | VEM | VAM  | VEF | VAF  |
| X coordinate        | XXM | XAM  | XXF | XAF  |
| Y coordinate        | YYM | YAM  | YYF | YAF  |
| Z coordinate        | ZZM | ZAM  | ZZF | ZAF  |

| Item \ Unit | ° C | ° F |
|-------------|-----|-----|
| Temperature | TEC | TEF |

| Item \ Unit | mmHG | Inch |
|-------------|------|------|
| Pressure    | PRM  | PRI  |

| Item \ Unit         | m   | f   |
|---------------------|-----|-----|
| XO coordinate       | XOM | XOF |
| YO coordinate       | YOM | YOF |
| ZO coordinate       | ZOM | ZOF |
| F. S. X. coordinate | XSM | XSF |
| F. S. Y. coordinate | YSM | YSF |
| F. S. Z. coordinate | ZSM | ZSF |
| B. S. X. coordinate | Z1M | X1F |
| B. S. Y. coordinate | Y1M | Y1F |
| B. S. Z. coordinate | Z1M | Z1F |

| Item \ Unit      | m   | f   |
|------------------|-----|-----|
| S. O. value(HOR) | HSM | HSF |
| S. O. value(SLP) | SSM | SSF |
| S. O. value(VER) | VSM | VSF |
| S. O. value(X)   | XSM | XSF |
| S. O. value(Y)   | YSM | YSF |
| S. O. value(Z)   | ZSM | ZSF |
| IP Inst. height  | MZM | MZF |
| FS Prism height  | PZM | PZF |

| Item                  |     |
|-----------------------|-----|
| P Const.<br>(mm only) | PSM |
| T/P correction        | PPM |
| Light value           | AIM |

### 3-5. key Code Format(pXX)


By sending specific series of character code to TS from external equipment, it is possible to control the operation mode of TS as if the TS keyboard were being operated. These control character codes are called "Key-code" and are composed of three characters of which first character starts from "p". The two remaining characters are defined according to the table below.

| XX | Corresponding PTS-III key  | XX | Corresponding PTS-III key         |
|----|----------------------------|----|-----------------------------------|
| 00 | TR(High speed)             | 70 | Angle display                     |
| 01 | TR(Medium speed)           | 80 | Left/right turn                   |
| 10 | [Exit special measurement] | 90 | Double angle                      |
| 11 | ROM                        | :0 | Hold                              |
| 12 | TRV                        | :8 | Measured distance average (Input) |
| 13 | INV                        | <0 | LAMP                              |
| 14 | REM                        | =0 | 0 set                             |
| 20 | Temp./Press.               | >1 | HOR/H mode                        |
| 30 | Stake Out                  | >2 | SLP/Z mode                        |
| 40 | Coordinate                 | >3 | VER/Z mode                        |
| 50 | Inst.coordinate            | ?0 | Measuring distance                |
| 60 | Angle setting              |    | (ex)High speed TR=send "p00"      |

Example: "p00" activates TS to start high speed Tracking measurement.

### 3-6. TS mode control protocol

#### 1. Mode Switching

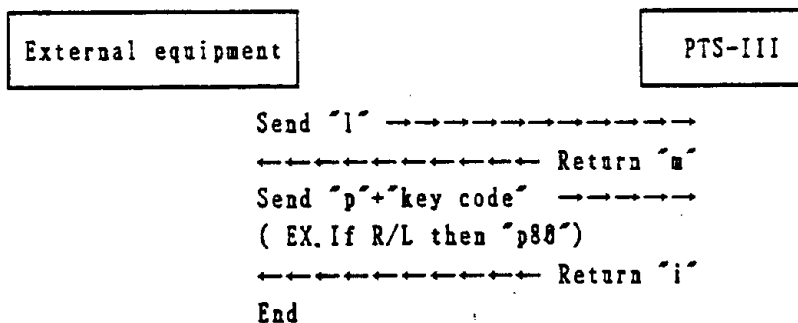

- 1) After TS receives "l", it sends "m"
- 2) Next, TS receives "pXX", then it sends "i" and enters the mode.  
(TS sends "j" when there is a character or code error.)

## 2. Data setting

External equipment

PTS-III

```
Send "l"  ----->
<----- Return "m"
Send "pXX" ----->
<----- Return "i"
Send "l"  ----->
<----- Return "m"
Send "q"  ----->
<----- Return "m"
Send data ----->
<-----
Return "n" or "j" if data are NG.
Return "i" if data are OK.
----->
Re-send data if "n" is received.
End if "i" is received.
```

Note: Add CR+LF when returning "i", "m", "n"

- 1) After TS receives "l", it sends "m".
  - 2) TS receives "pXX", then sends "i" and enters the mode.
  - 3) After TS receives "l", it sends "m"
  - 4) TS receives "q", then sends "m" and it waits for data.
  - 5) TS receives "data", then it sends "i" if data are OK  
and it sends "n" or "j" if data are NG.
- (Data NG): If the minimum unit does not match during angle data input  
then "n" is sent. Other case; "j" is sent.

4 Data Block Format Which is Output from the TH-E

Type 1 data (during normal measuring)


HHD #####.##.##VVD #####.##.##CR/LF

Type 2 data (during repeat measuring)

HHD #####.##.##HAD #####.##.##RNO ##VVD #####.##.##CR/LF


Note: However, output data format completely depends on the operative condition of the TH-E. For example, in case the TH-E displays "ERROR" by some reason, data will not be output with the above format. These cases will be shown below. External device has to receive data, assuming these condition.

1) Type 1 (normal measuring mode)

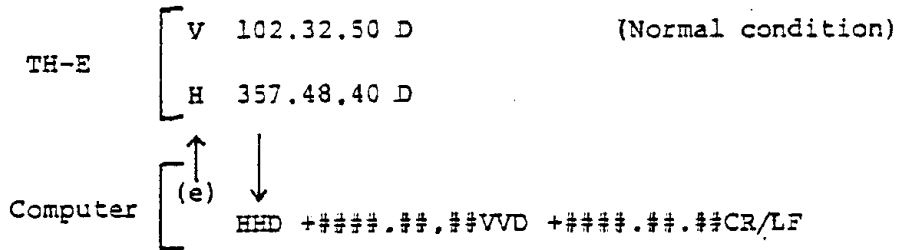


V 102.32.50 D (Horizontal angle error, compe slope)

TILT OVER LENGE

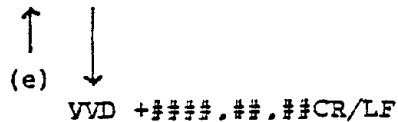

V 0 DETECT (Condition of vertical angle display being halted)

H 357.48.40 D

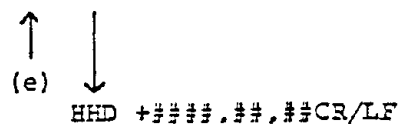

2) Type-2 (Repeat measuring mode)

3 28.10.20 D (Normal condition)

RH 142.40.50 D

↑  
(e)

↓

HHD #####.##.##HAD #####.##.##RNO ##VVD #####.##.##CR/LF

V 79.50.10 D (Horizontal angle error)

RH OVER SPEED

↑  
(e)

↓

VVD #####.##.##CR/LF

3 28,10,20 D (In case an error in vertical angle occurs.)

RH 142.40.50 D

↑  
(e)

↓

HHD #####.##.##HAD #####.##.##RNO ##CR/LF

Note; In this case, as the LCD of the TH-E displays horizontal angle average value in the upper and cumulative angle in the lower, the LCD does not display "ERROR" even though an error occurs in vertical angle. This is, if vertical angle data does not come out after the data request in this mode, some error in vertical angle is judged to occur.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>