




# DPC10-TL Totalizer

## M1662/0693

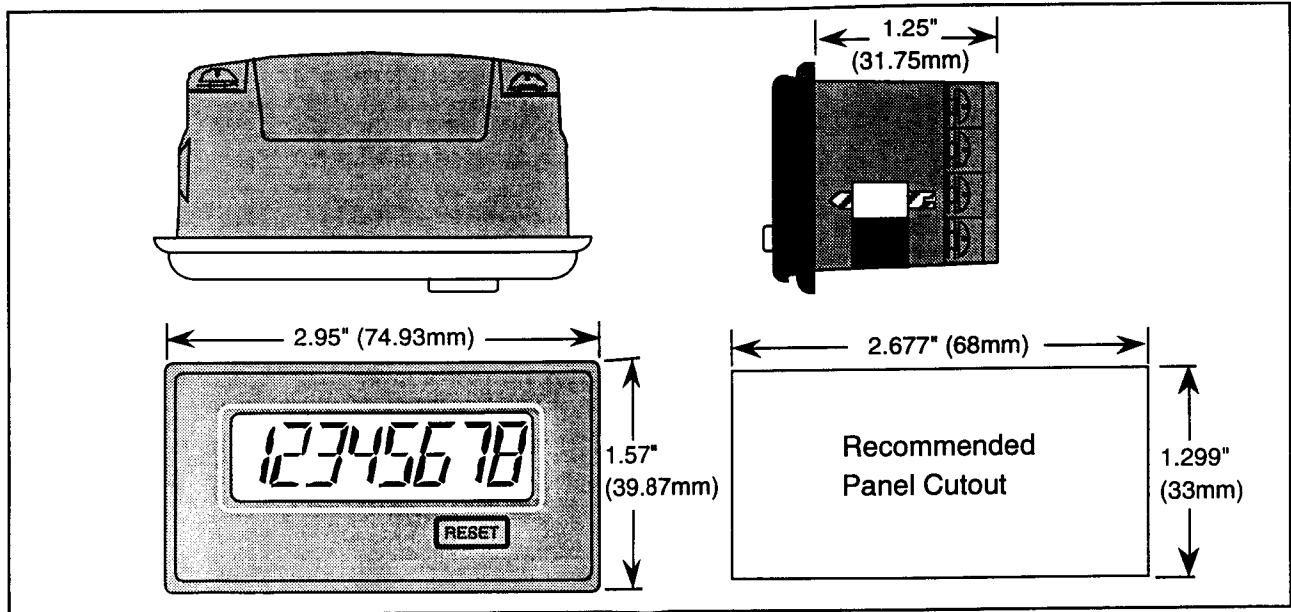

### POWER

Internal battery: 3 V, lithium  
 Life expectancy: 5 years +  
 Replacement Part: DPC10-BAT

### PHYSICAL

Operation Temperature: 0° - 55°C  
 Storage Temperature: -20 - 70°C  
 Operating Humidity: 90% Non-condensing  
 Weight: 2.2 oz. net  
 Display Size: .43" high  
 Front Panel Rating: NEMA-4X when mounted with gasket provided.  
 Case Material: Cylolac X-17

### TOTALIZER

Type: UP counting  
 Digits: 8

### DC COMMON (Terminal 1)

#### COUNT INPUTS

**Input B (Terminal 2) low speed input designed for contact closures to common**

Speed: 0-40 Hz  
 Minimum Low Time: 5 msec  
 Minimum High Time: 20 msec  
 Impedance: 101 kΩ  
 Voltage Thresholds: Low 0 to 0.4 V dc  
 High 2.0 to 28 V dc  
 Max. High 28 V dc

**Input A (Terminal 3) high speed input requiring a voltage source such as a current sourcing sensor or a current sinking sensor used with the provided pull up resistors.**

Speed: 0 to 10 kHz  
 Minimum Low Time: 80 microseconds  
 Minimum High Time: 20 microseconds  
 (The above times are with a 0 to 5.0 V swing.)  
 Input Impedance: 2kΩ above 5 V dc  
 Voltage Thresholds: Low 0 to 1.2 V dc  
 High 2.0 to 28 V dc  
 Max. High 28 V dc

**RESET INPUT (Terminal 4) designed for contact closures to dc common.**

Minimum Low: 0.25 to 1 second (maintained)  
 The required pulse width varies with count speed, scale factor and number of digits displayed.  
 Voltage Thresholds: Low 0 to 0.4 V dc  
 High 2.0 to 28 V dc

### FRONT PANEL RESET ENABLE (Terminal 5)


Operation: Level sensitive (maintained)

### COUNT ACCURACY

100% when operated within specifications.

## INTRODUCTION

Your OMEGA DPC10-TL is an UP counting totalizer with a high-contrast eight-digit LCD display. The front-panel reset key can be disabled. A remote-reset terminal is provided.

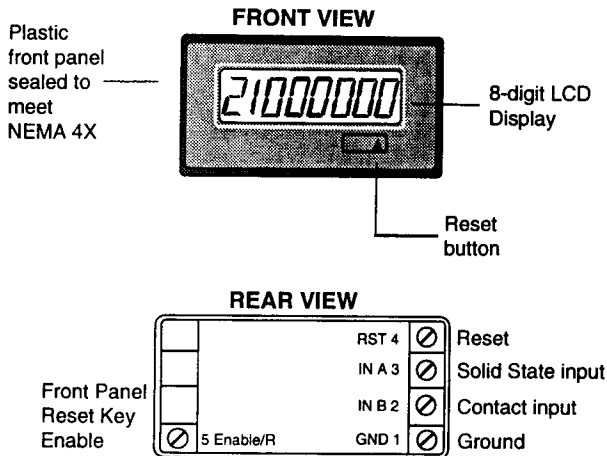

## APPLICATIONS


This totalizer is intended for simple totalizing applications. One count input pulse per item is necessary. The only decisions to be made are:

1. Do you use the high or low speed input?
2. Do you want the front panel reset button active?

## OPERATION


The totalizer display has lead-zero blanking. No decimal point is available.

## MOUNTING

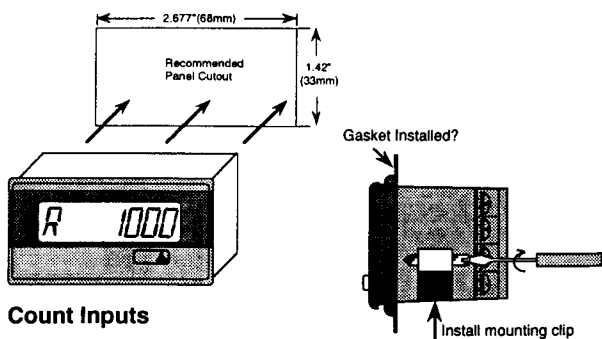

### Count Inputs


Separate contact and solid state count inputs are provided. The solid state input (terminal 3) requires a current-sourcing sensor and can count up to 10 kHz. Inputs into this terminal are counted on the positive-going edge.

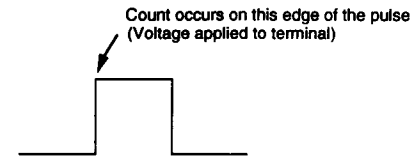

Terminal 3 is pulled down to common. When a sensor output supplies voltage to this terminal, one count is registered on the display. The sourcing signal must supply at least +2.0 V dc but no more than +28 V dc.

**Note:** When a sourcing signal is applied to terminal 3, a power assist feature of the DPC10-TL extends the life of the battery.

Terminal 2 is the low-speed, current-sinking count input designed to be used with a contact closure to ground. It has a maximum count speed of 20 Hz. Inputs into this terminal are counted on the negative-going edge.

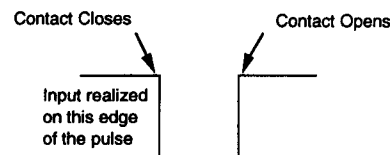


Terminal 2 is pulled up to +3 V dc. When a contact closes, pulling the voltage down to .4 V dc or less, one count is registered.

## RUN MODE

### Screens

The totalizer screen is the only screen available on this model.

### Front Panel Reset Enable

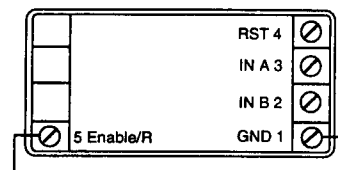

**Note:** The front-panel reset button comes disabled from the factory. To enable the button, install a jumper wire from terminal 5 to ground, terminal 1.

**Note:** The reset terminal on the rear panel is still active when the front reset button is disabled.

## PROGRAM MODE

There is no program mode for this model.

## WIRING RECOMMENDATIONS

Following these suggestions will increase noise immunity and extend the life of the product.

**Cable:** Make the connection between the count source and the totalizer with a two-conductor shielded cable. Connect the shield to earth ground at one end only.

**Relay Coil Suppression:** If a relay contact is used as a count source, suppress the relay coil. This can be accomplished with an RC network for AC coils or a diode for DC coils.

**Mounting:** Do not mount the totalizer near a solenoid or other inductive devices. Supply enough ventilation to keep the totalizer operating within the temperature specifications.

## BATTERY SAFETY


The lithium battery that powers your device contains inflammable materials such as lithium organic solvent, and other chemical ingredients. Explosion or fire may result if the battery is not handled correctly. To avoid an accident follow these guidelines:

- Do not stack or jumble up batteries
- Do not heat batteries above 95°C
- Do not disassemble batteries
- Do not recharge lithium batteries
- Do not apply pressure to, or deform batteries
- Do not solder to batteries
- Do not dispose of batteries in fire
- Insert battery with correct polarity


Terminal	Function	Operation
1	Ground	
2	Input B Count Input	Use with Contact Closure to Ground Maximum 20 Hz Count Speed
3	Input A Count Input	Use with Current Sourcing Sensor maximum 10 kHz Count Speed
4	Reset	Connect to ground to Reset Totalizer. This is a maintained or Level Sensitive Reset
5	Reset Key Enable	Connect to Ground to Enable Reset Key

## WIRING DIAGRAMS


### CONTACT CLOSURE COUNT INPUT

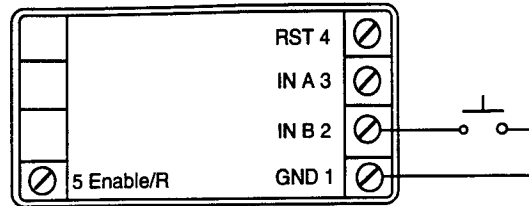


### SOLID STATE COUNT INPUT CURRENT SOURCING SENSOR

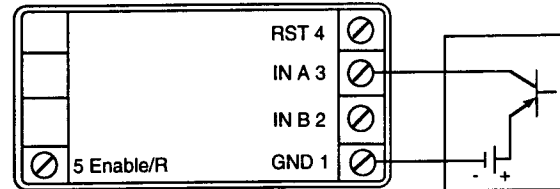


### SOLID STATE INPUT CURRENT SINKING SENSOR

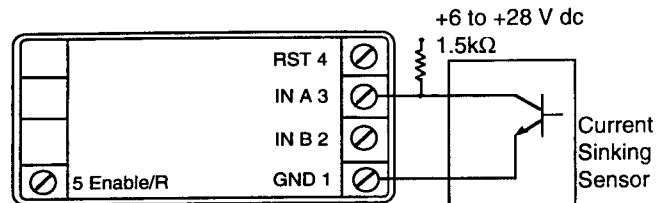

### REMOTE RESET

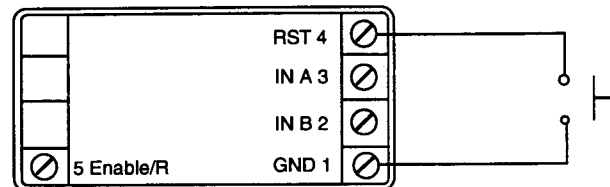

### FRONT PANEL RESET ENABLE

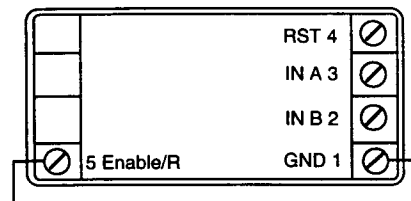

## REPLACEMENT PARTS

DPC10-BAT Battery  
46066-210 Gasket  
53300-241 Mounting Clip  
28772-200 Mounting Screw

## OTHER OMEGA MINI COUNTER PRODUCTS

DPC10-CS Add/Subtract Totalizer  
(Solid State Input)  
DPC10-CC Add/Subtract Totalizer  
(Contact Input)  
DPC10-QT Quadrature Indicator  
DPC10-RM Ratemeter  
DPC10-RT Ratemeter/Totalizer



## WARRANTY

OMEGA warrants this unit to be free of defects in materials and workmanship and to give satisfactory service for a period of **13 months** from date of purchase. OMEGA Warranty adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that our customers receive maximum coverage on each product. If the unit should malfunction, it must be returned to the factory for evaluation. Our Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective it will be repaired or replaced at no charge. However, this WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of being damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear or which are damaged by misuse are not warranted. These include contact points, fuses, and triacs.

We are glad to offer suggestions on the use of our various products. Nevertheless OMEGA only warrants that the parts manufactured by it will be as specified and free of defects.

OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED.

**LIMITATION OF LIABILITY:** The remedies of buyer set forth herein are exclusive and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

Every precaution for accuracy has been taken in the preparation of this manual, however, OMEGA ENGINEERING, INC. neither assumes responsibility for any omissions or errors that may appear nor assumes liability for any damages that result from the use of the products in accordance with the information contained in the manual.

## RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA ENGINEERING Customer Service Department. Call toll free in the USA and Canada: 1-800-622-2378, FAX: 203-359-7811; International: 203-359-1660, FAX: 203-359-7807.

BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, YOU MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OUR CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence. Please have the following information available BEFORE contacting OMEGA:

1. P.O. number under which the product was PURCHASED,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems you are having with the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. That way our customers get the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 1993 OMEGA ENGINEERING, INC. All rights reserved including illustrations. Nothing in this manual may be reproduced in any manner, either wholly or in part for any purpose whatsoever without written permission from OMEGA ENGINEERING, INC. Printed in U.S.A.



One Omega Drive, P.O. Box 4047  
Stamford, CT 06907  
Tel: (203) 359-1660  
Telex: 996404 Cable OMEGA  
Fax: (203) 359-7700

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>