


RF-RBKIT Wireless HD Audio Starter Kit



Package contents:



Wireless sender

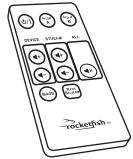

IR remote



DC adapter (for sender)




AC power cable (for receiver)




Quick Setup Guide




User Guide

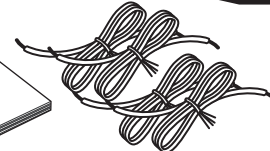


Speaker cable, 3 ft (x4)

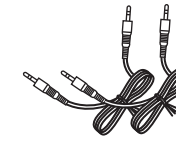

3.5 mm male-to-male stereo cable, 3ft (x2)

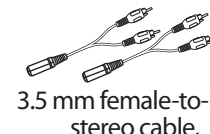

3.5 mm female-to-RCA stereo cable, 6 in. (x2)





Cable spool (for receiver)

Please Read First



Every Rocketboost network must contain at least one hub device, which directs network data traffic and helps devices join the network. The network can have only one hub, which can be enabled by using the hub switch on the back of all Rocketboost transmitters. The sender in this kit is set at the factory for hub mode and the receiver has been pre-joined to this sender at the factory for easy setup. If you have an existing Rocketboost network, the sender's hub mode switch should be set to **Disable**. The sender and receiver also need to be joined to your existing hub device (the one with the green power LED). See your *User Guide* for instructions on joining devices to the network.

Sender

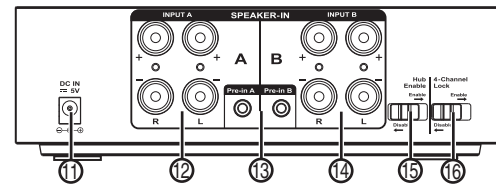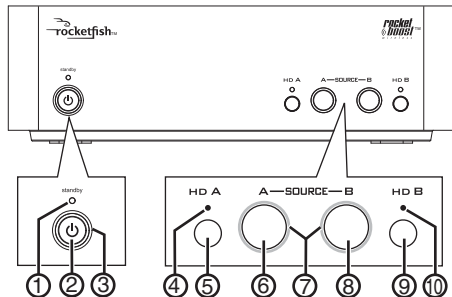

- | | |
|----------------------------|--------------------------|
| 1 Standby LED | 9 HD B button |
| 2 Power/Join button | 10 HD B indicator |
| 3 Power/Join indicator | 11 DC IN jack |
| 4 HD A indicator | 12 SPEAKER IN A jacks |
| 5 HD A button | 13 Pre-in A/B jack |
| 6 Source A button | 14 SPEAKER IN B jacks |
| 7 Source A/B LED indicator | 15 Hub Enable switch |
| 8 Source B button | 16 4-Channel Lock switch |

Receiver

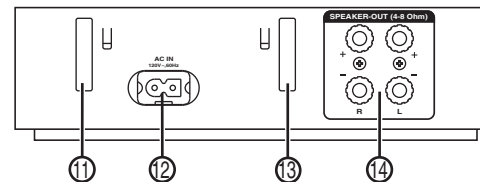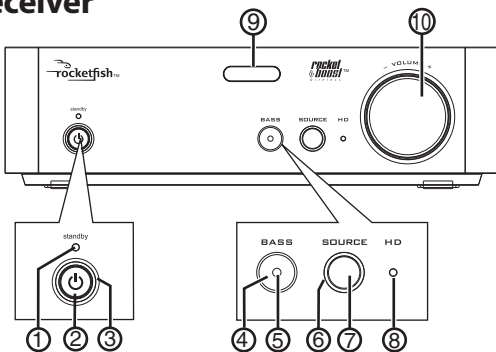


- | | |
|------------------------|--------------------------------------------|
| 1 Standby LED | 9 IR sensor |
| 2 Power/Join button | 10 VOLUME knob |
| 3 Power/Join indicator | 11 Removable cable spool slot |
| 4 BASS button | 12 AC IN jack |
| 5 Bass indicator | 13 Removable cable spool slot (line level) |
| 6 SOURCE indicator | 14 SPEAKER OUT jacks |
| 7 SOURCE button | |
| 8 HD indicator | |

Step 1 Preparing the remote control

To activate the battery: Remove the tab from the bottom of the remote control to enable the battery.



Step 2 Connecting the sender

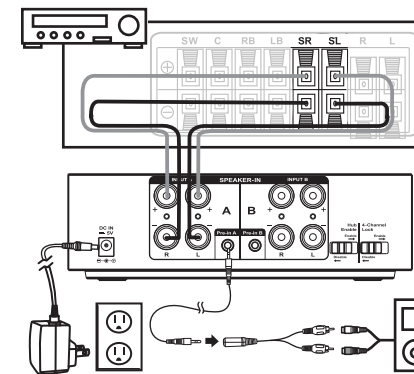

Connecting to an amplifier


(surround mode is described below, as an example)
Connect the right surround speaker terminals of your amplifier to the right speaker terminals of the sender by connecting the red speaker wire to the red (+) terminals, and the black speaker wire to the black (-) terminals. Repeat to connect the left surround speaker terminals.

Connecting to an external audio source (such as an MP3 player)

Connect external audio source(s) to the Pre-in A and/or B jacks on the rear of sender using the 3.5 mm male-to-male stereo cable and the 3.5 mm female-to-RCA stereo cable.

Note: The Input A/Input B buttons on the remote control allow you to select between the Speaker in or Pre in (line level). Each press of the button will toggle to the other source. The unit must be powered up for these buttons to operate and the state when powered down will be remembered.

Step 3 Connecting the receiver

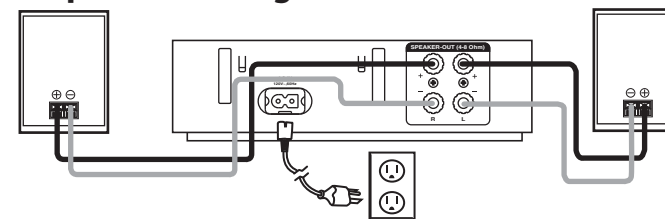

Connect the right surround speaker to the right speaker terminals on the receiver. Use a red speaker wire to connect the red (+) terminals and a black speaker wire to connect the black (-) terminals. Repeat this step to connect the left surround speaker.

Step 4 Establishing communication


The sender and receiver packaged together were pre-joined at the factory, so if you are only using one sender and receiver set, no further configuration is needed. If an active link is established between them, the Power/Join indicators on both units will light steadily (no blink). *If your sender and receiver are not correctly linked (the power LEDs will flash slowly) or you need to add additional Rocketboost products, see your User Guide for more information.* Make sure the Source A or B LED is illuminated on the sender for the channel that you have connected to your network for the audio transmission to be active. Press the **SOURCE** button on the receiver until the audio channel you desire is playing. Adjust the volume as desired.

RF-RBKIT Wireless HD Audio Starter Kit




For a surround sound application

5.1 Surround Sound

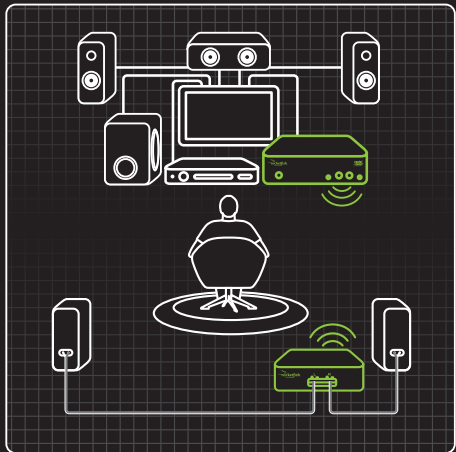

7.1 Surround Sound*

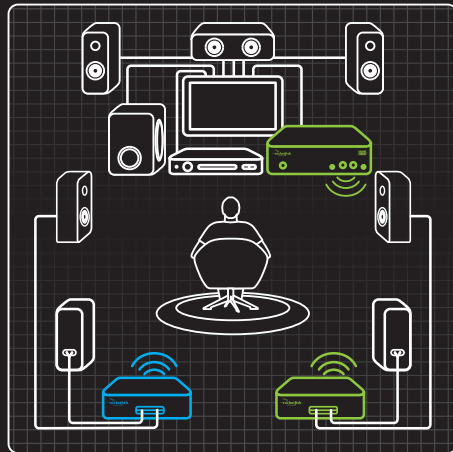


*Requires 7.1 AV Receiver

█ INCLUDED

█ NOT INCLUDED: RF-RBREC TO SUPPORT 7.1 SURROUND SOUND

Tip: When connecting rear and surround channels you can see which device you are connecting to over the air by pressing the Source button. The transmitters LED will blink for a few seconds showing the connection between the transmitter and receiver. This makes it easier to configure rears and surrounds without relying on AVR test patterns.

For distributing music throughout your home

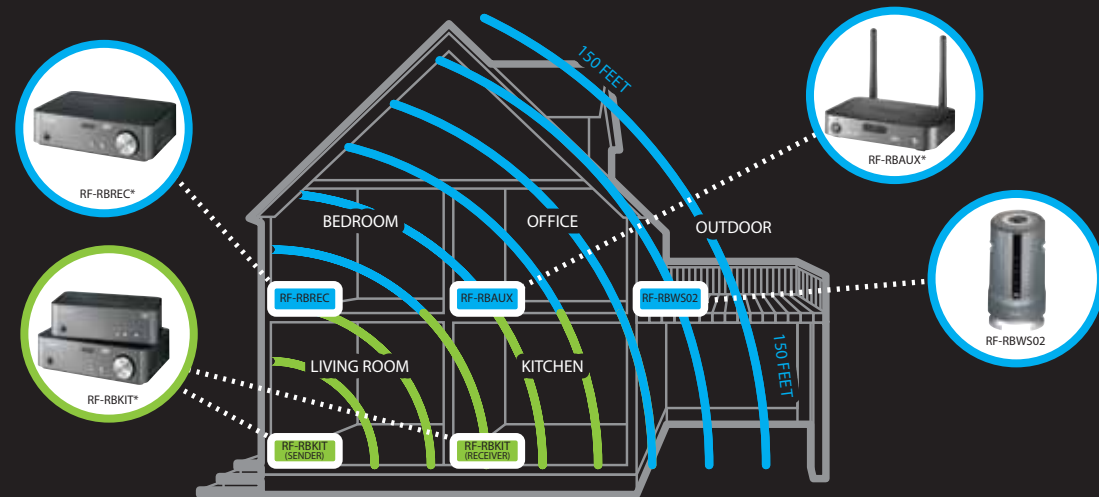

*Upgrades your existing audio products to wireless

█ INCLUDED: CONNECT UP TO 2 ROOMS

█ NOT INCLUDED: OTHER ROCKETBOOST PRODUCTS (CAN CONNECT UP TO 9 ROOMS WITH ONE SENDER)

QUICK SETUP GUIDE

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>