



Sun™ Dual 10GbE SFP+ PCIe ExpressModule User's Guide

Sun Microsystems, Inc.
www.sun.com

Part No. 820-4979-10
August 2008, Revision A

Submit comments about this document at: <http://www.sun.com/hwdocs/feedback>

Copyright © 2008 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

This distribution may include materials developed by third parties.

Sun, Sun Microsystems, the Sun logo, SunSolve, Sun Fire, and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc., or its subsidiaries, in the U.S. and other countries.

UNIX is a registered trademark in the U.S. and other countries, exclusively licensed through X/Open Company, Ltd.

Intel is a trademark or registered trademark of Intel Corporation or its subsidiaries in the United States and other countries. Intel Xeon is a trademark or registered trademark of Intel Corporation or its subsidiaries in the United States and other countries. The Adobe logo is a registered trademark of Adobe Systems, Incorporated.

Use of any spare or replacement CPUs is limited to repair or one-for-one replacement of CPUs in products exported in compliance with U.S. export laws. Use of CPUs as product upgrades unless authorized by the U.S. Government is strictly prohibited.

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

Copyright © 2008 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, Etats-Unis. Tous droits réservés.

Cette distribution peut comprendre des composants développés par des tierces parties.

Sun, Sun Microsystems, le logo Sun, SunSolve, Sun Fire, et Solaris sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc., ou ses filiales, aux Etats-Unis et dans d'autres pays.

UNIX est une marque déposée aux Etats-Unis et dans d'autres pays et licenciée exclusivement par X/Open Company, Ltd.

Intel est une marque de fabrique ou une marque déposée de Intel Corporation ou de sa filiale aux Etats-Unis et dans d'autres pays. Intel Xeon est une marque de fabrique ou une marque déposée de Intel Corporation ou de sa filiale aux Etats-Unis et dans d'autres pays. Le logo Adobe est une marque déposée de Adobe Systems, Incorporated.

L'utilisation de pieces detachees ou d'unites centrales de remplacement est limitee aux reparations ou a l'echange standard d'unites centrales pour les produits exportes, conformement a la legislation americaine en matiere d'exportation. Sauf autorisation par les autorites des Etats-Unis, l'utilisation d'unites centrales pour proceder a des mises a jour de produits est rigoureusement interdite.

LA DOCUMENTATION EST FOURNIE "EN L'ETAT" ET TOUTES AUTRES CONDITIONS, DECLARATIONS ET GARANTIES EXPRESSES OU TACITES SONT FORMELLEMENT EXCLUES, DANS LA MESURE AUTORISEE PAR LA LOI APPLICABLE, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE A LA QUALITE MARCHANDE, A L'APTITUDE A UNE UTILISATION PARTICULIERE OU A L'ABSENCE DE CONTREFACON.



Adobe PostScript

Contents

Preface	xv
1. Sun Dual 10GbE SFP+ PCIe ExpressModule Overview	1
Shipping Kit Contents	1
ExpressModule Hardware Overview	1
ExpressModule Features	2
Indicator Lights on the ExpressModule	3
Hardware and Software Requirements	5
Patch Requirements	5
Patches and Updates	6
2. Installing and Setting Up the Device Driver Software	7
Downloading and Installing the Driver on a Linux Platform	7
▼ To Download the Driver for a Linux Platform	7
▼ To Install the Driver for a Linux Platform	8
▼ To Remove the Driver From a Linux Platform	9
Downloading and Installing the Driver on a Microsoft Windows Platform	10
▼ To Download and Install the Driver on a Microsoft Windows Platform	10
▼ To Remove the Driver From a Microsoft Windows Platform	11
3. Installing the ExpressModule	13

Installing an Optical Transceiver	13
▼ To Install an Optical Transceiver	13
Installing the ExpressModule	16
▼ To Install the ExpressModule With the Power Off	16
Verifying the Installation	19
▼ To Verify the Installation in a Linux System	19
▼ To Verify the Installation in a Microsoft Windows System	19
4. Network Configuration	21
Configuring the Network Host Files for Booting Over the Gigabit Ethernet Network for Linux Systems	21
▼ To Boot Over the Network on Linux Systems	21
5. Configuring the Driver Parameters	23
Driver Overview	23
Driver Parameters for Linux Systems	24
Setting ixgbe Driver Parameters in Linux Systems	25
▼ To Configure Jumbo Frames	25
6. Configuring VLANs	27
VLAN Overview	27
Configuring VLANs	30
▼ To Configure VLANs in a Linux Environment	30
▼ To Configure VLANs in a Microsoft Windows 2003 Environment	31
Configuring Bonding for Multiple Interfaces	32
▼ To Configure Bonding for Multiple ixgbe Interfaces	32
▼ To Remove Bonding	33
A. Sun Dual 10GbE SFP+ PCIe ExpressModule Specifications	35
Connectors	36
Technical Features	37

Physical Characteristics	37
Power and Environmental Requirements	38
Index	39

Regulatory Compliance Statements

Your Sun product is marked to indicate its compliance class:

- Federal Communications Commission (FCC) — USA
- Industry Canada Equipment Standard for Digital Equipment (ICES-003) — Canada
- Voluntary Control Council for Interference (VCCI) — Japan
- Bureau of Standards Metrology and Inspection (BSMI) — Taiwan

Please read the appropriate section that corresponds to the marking on your Sun product before attempting to install the product.

FCC Class A Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and if it is not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Modifications: Any modifications made to this device that are not approved by Sun Microsystems, Inc. may void the authority granted to the user by the FCC to operate this equipment.

ICES-003 Class A Notice - Avis NMB-003, Classe A

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

VCCI 基準について

クラス A VCCI 基準について

クラス A VCCI の表示があるワークステーションおよびオプション製品は、クラス A 情報技術装置です。これらの製品には、下記の項目が該当します。

この装置は、情報処理装置等電波障害自主規制協議会 (VCCI) の基準に基づくクラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

BSMI Class A Notice

The following statement is applicable to products shipped to Taiwan and marked as Class A on the product compliance label.

警告使用者：
這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。



CCC Class A Notice


The following statement is applicable to products shipped to China and marked with "Class A" on the product's compliance label.

以下声明适用于运往中国且其认证标志上注有 "Class A" 字样的产品。

声明
此为A级产品，在生活环境中，该产品可能会造成无线电干扰。
在这种情况下，可能需要用户对其干扰采取切实可行的措施。



GOST-R Certification Mark

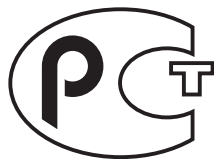

Safety Agency Compliance Statements

Read this section before beginning any procedure. The following text provides safety precautions to follow when installing a Sun Microsystems product.

Safety Precautions

For your protection, observe the following safety precautions when setting up your equipment:

- Follow all cautions and instructions marked on the equipment.
- Ensure that the voltage and frequency of your power source match the voltage and frequency inscribed on the equipment's electrical rating label.
- Never push objects of any kind through openings in the equipment. Dangerous voltages may be present. Conductive foreign objects could produce a short circuit that could cause fire, electric shock, or damage to your equipment.

Symbols

The following symbols may appear in this book:



Caution – There is a risk of personal injury and equipment damage. Follow the instructions.



Caution – Hot surface. Avoid contact. Surfaces are hot and may cause personal injury if touched.



Caution – Hazardous voltages are present. To reduce the risk of electric shock and danger to personal health, follow the instructions.

Depending on the type of power switch your device has, one of the following symbols may be used:



On – Applies AC power to the system.



Off – Removes AC power from the system.



Standby – The On/Standby switch is in the standby position.

Modifications to Equipment

Do not make mechanical or electrical modifications to the equipment. Sun Microsystems is not responsible for regulatory compliance of a modified Sun product.

Placement of a Sun Product



Caution – Do not block or cover the openings of your Sun product. Never place a Sun product near a radiator or heat register. Failure to follow these guidelines can cause overheating and affect the reliability of your Sun product.

System Unit Cover

You must remove the cover of your Sun computer system unit to add cards, memory, or internal storage devices. Be sure to replace the cover before powering on your computer system.



Caution – Do not operate Sun products without the cover in place. Failure to take this precaution may result in personal injury and system damage.

Conformité aux normes de sécurité

Veillez lire attentivement cette section avant de commencer. Ce texte traite des mesures de sécurité qu'il convient de prendre pour l'installation d'un produit Sun Microsystems.

Mesures de sécurité

Pour votre sécurité, nous vous recommandons de suivre scrupuleusement les mesures de sécurité ci-dessous lorsque vous installez votre matériel:

- Suivez tous les avertissements et toutes les instructions inscrites sur le matériel.
- Assurez-vous que la tension et la fréquence de votre source d'alimentation correspondent à la tension et à la fréquence indiquées sur l'étiquette de la tension électrique nominale du matériel
- N'introduisez jamais d'objets quels qu'ils soient dans les ouvertures de l'équipement. Vous pourriez vous trouver en présence de hautes tensions dangereuses. Tout objet étranger conducteur risque de produire un court-circuit pouvant présenter un risque d'incendie ou de décharge électrique, ou susceptible d'endommager le matériel.

Symboles

Vous trouverez ci-dessous la signification des différents symboles utilisés:



Attention – Vous risquez d'endommager le matériel ou de vous blesser. Veuillez suivre les instructions.



Attention – Surfaces brûlantes. Evitez tout contact. Les surfaces sont brûlantes. Vous risquez de vous blesser si vous les touchez.



Attention – Tensions dangereuses. Pour réduire les risques de décharge électrique et de danger physique, observez les consignes indiquées.

Selon le type d'interrupteur marche/arrêt dont votre appareil est équipé, l'un des symboles suivants sera utilisé:



Marche – Met le système sous tension alternative.



Arrêt – Met le système hors tension alternative.



Veilleuse – L'interrupteur Marche/Veille est sur la position de veille.

Modification du matériel

N'apportez aucune modification mécanique ou électrique au matériel. Sun Microsystems décline toute responsabilité quant à la non-conformité éventuelle d'un produit Sun modifié.

Positionnement d'un produit Sun



Attention – Evitez d'obstruer ou de recouvrir les orifices de votre produit Sun. N'installez jamais un produit Sun près d'un radiateur ou d'une source de chaleur. Si vous ne respectez pas ces consignes, votre produit Sun risque de surchauffer et son fonctionnement en sera altéré.

Couvercle de l'unité

Pour ajouter des cartes, de la mémoire ou des périphériques de stockage internes, vous devez retirer le couvercle de votre système Sun. Remettez le couvercle supérieur en place avant de mettre votre système sous tension.



Attention – Ne mettez jamais des produits Sun sous tension si leur couvercle supérieur n'est pas mis en place. Si vous ne prenez pas ces précautions, vous risquez de vous blesser ou d'endommager le système.

Einhaltung sicherheitsbehördlicher Vorschriften

Lesen Sie vor dem Ausführen von Arbeiten diesen Abschnitt. Im folgenden Text werden Sicherheitsvorkehrungen beschrieben, die Sie bei der Installation eines Sun Microsystems-Produkts beachten müssen.

Sicherheitsvorkehrungen

Treffen Sie zu Ihrem eigenen Schutz bei der Installation des Geräts die folgenden Sicherheitsvorkehrungen:

- Beachten Sie alle auf den Geräten angebrachten Warnhinweise und Anweisungen.
- Stellen Sie sicher, dass Spannung und Frequenz der Stromversorgung den Nennleistungen auf dem am Gerät angebrachten Etikett entsprechen.
- Führen Sie niemals Fremdoobjekte in die Öffnungen am Gerät ein. Es können gefährliche Spannungen anliegen. Leitfähige Fremdoobjekte können einen Kurzschluss verursachen, der einen Brand, Stromschlag oder Geräteschaden herbeiführen kann.

Symbole

Die Symbole in diesem Handbuch haben folgende Bedeutung:



Achtung – Gefahr von Verletzung und Geräteschaden. Befolgen Sie die Anweisungen.



Achtung – Heiße Oberfläche. Nicht berühren, da Verletzungsgefahr durch heiße Oberfläche besteht.



Achtung – Gefährliche Spannungen. Befolgen Sie die Anweisungen, um Stromschläge und Verletzungen zu vermeiden.

Je nach Netzschaltertyp an Ihrem Gerät kann eines der folgenden Symbole verwendet werden:



Ein – Versorgt das System mit Wechselstrom.



Aus – Unterbricht die Wechselstromzufuhr zum Gerät.



Wartezustand – Der Ein-/Standby-Netzschalter befindet sich in der Standby-Position.

Modifikationen des Geräts

Nehmen Sie keine elektrischen oder mechanischen Gerätemodifikationen vor. Sun Microsystems ist für die Einhaltung der Sicherheitsvorschriften von modifizierten Sun-Produkten nicht haftbar.

Gehäuseabdeckung

Sie müssen die Abdeckung Ihres Sun-Computersystems entfernen, um Karten, Speicher oder interne Speichergeräte hinzuzufügen. Bringen Sie vor dem Einschalten des Systems die Gehäuseabdeckung wieder an.



Achtung – Nehmen Sie Sun-Geräte nicht ohne Abdeckung in Betrieb. Die Nichtbeachtung dieses Warnhinweises kann Verletzungen oder Geräteschaden zur Folge haben.

Normativas de seguridad

Lea esta sección antes de realizar cualquier operación. En ella se explican las medidas de seguridad que debe tomar al instalar un producto de Sun Microsystems.

Medidas de seguridad

Para su protección, tome las medidas de seguridad siguientes durante la instalación del equipo:

- Siga todos los avisos e instrucciones indicados en el equipo.
- Asegúrese de que el voltaje y frecuencia de la fuente de alimentación coincidan con el voltaje y frecuencia indicados en la etiqueta de clasificación eléctrica del equipo.
- No introduzca objetos de ningún tipo por las rejillas del equipo, ya que puede quedar expuesto a voltajes peligrosos. Los objetos conductores extraños pueden producir cortocircuitos y, en consecuencia, incendios, descargas eléctricas o daños en el equipo.

Símbolos

En este documento aparecen los siguientes símbolos:



Precaución – Existe el riesgo de que se produzcan lesiones personales y daños en el equipo. Siga las instrucciones.



Precaución – Superficie caliente. Evite todo contacto. Las superficies están calientes y pueden causar lesiones personales si se tocan.



Precaución – Voltaje peligroso. Para reducir el riesgo de descargas eléctricas y lesiones personales, siga las instrucciones.

En función del tipo de interruptor de alimentación del que disponga el dispositivo, se utilizará uno de los símbolos siguientes:



Encendido – Suministra alimentación de CA al sistema.



Apagado – Corta la alimentación de CA del sistema.



Espera – El interruptor de encendido/espera está en la posición de espera.

Modificaciones en el equipo

No realice modificaciones de tipo mecánico ni eléctrico en el equipo. Sun Microsystems no se hace responsable del cumplimiento de normativas en caso de que un producto Sun se haya modificado.

Colocación de un producto Sun



Precaución – No obstruya ni tape las rejillas del producto Sun. Nunca coloque un producto Sun cerca de radiadores ni fuentes de calor. Si no sigue estas indicaciones, el producto Sun podría sobrecalentarse y la fiabilidad de su funcionamiento se vería afectada.

Declaration of Conformity

Compliance Model Number: 5945532
Product Family Name: Sun Dual 10GbE SFP+ PCIe ExpressModule

EMC

USA—FCC Class A

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference that may cause undesired operation.

Canada

This Class A digital apparatus complies with Canadian ICES-003.

European Union

This equipment complies with the following requirements of the EMC Directive 2004/108/EC:

As Information Technology Equipment (ITE) Class A per (as applicable):

EN 55022:2006	Class A
EN 61000-3-2:2000 +A2:2005	Pass
EN 61000-3-3:1995 +A1:2001	Pass
EN 55024:1998 +A1:2001 +A2:2003	Required Limits:
IEC61000-4-2	4 kV (Direct), 8 kV (Air)
IEC61000-4-3	3 V/m
IEC61000-4-4	1 kV AC Power Lines, 0.5 kV Signal and DC Power Lines
IEC61000-4-5	1 kV AC Line-Line and Outdoor Signal Lines, 2 kV AC Line-Gnd, 0.5 kV DC Power Lines
IEC61000-4-6	3 V
IEC61000-4-8	1 A/m
IEC61000-4-11	Pass

Safety

This equipment complies with the following requirements of the Low Voltage Directive 2006/95/EC:

EC Type Examination Certificates:

EN 60950-1:2001, 1st Edition

IEC 60950-1:2001, 1st Edition

Evaluated to all CB Countries

UL 60950-1:2003, CSA C22.2 No. 60950-03

CB Scheme Certificate No. NO47596

File: E139761 Vol. 7

Supplementary Information

This equipment was tested and complies with all the requirements for the CE Mark.

This equipment complies with the Restriction of Hazardous Substances (RoHS) directive 2002/95/EC.

/S/

Dennis P. Symanski

DATE

Worldwide Compliance Office

Sun Microsystems, Inc.

4150 Network Circle, MPK15-102

Santa Clara, CA 95054 U.S.A.

Tel: 650-786-3255 Fax: 650-786-3723

Preface

This user's guide provides hardware and software installation instructions for the Sun™ Dual 10GbE SFP+ PCIe Express Module. This document also describes how to configure the driver software for the `ixgbe` driver for Linux operating systems and Microsoft Windows Server 2003.

These instructions are designed for enterprise system administrators with experience installing network hardware and software.

Note – In this document the term x86 refers to 64-bit and 32-bit systems manufactured using processors compatible with the AMD64, Intel® Xeon®, or Intel Pentium product families.

How This Document Is Organized

[Chapter 1](#) describes the Sun 10GbE XFP SR PCI Express Card hardware and software.

[Chapter 2](#) explains how to download, install, and verify the `ixgbe` device driver software on Linux and Microsoft Windows systems.

[Chapter 3](#) describes how to install the Ethernet adapter in your system and verify that it has been installed correctly.

[Chapter 4](#) describes how to edit the network host files after the Ethernet adapter has been installed on your system.

[Chapter 5](#) describes how to configure the `ixgbe` driver parameters.

Chapter 6 explains virtual local area networks (VLANs), and provides configuration instructions and examples.

Appendix A lists the specifications for the Sun 10GbE XFP SR PCI Express Card.

Typographic Conventions

Typeface*	Meaning	Examples
AaBbCc123	The names of commands, files, and directories; on-screen computer output	Edit your <code>.login</code> file. Use <code>ls -a</code> to list all files. % You have mail.
AaBbCc123	What you type, when contrasted with on-screen computer output	% su Password:
<i>AaBbCc123</i>	Book titles, new words or terms, words to be emphasized. Replace command-line variables with real names or values.	Read Chapter 6 in the <i>User's Guide</i> . These are called <i>class</i> options. You <i>must</i> be superuser to do this. To delete a file, type <code>rm filename</code> .

* The settings on your browser might differ from these settings.

Shell Prompts

Shell	Prompt
C shell	<i>machine-name%</i>
C shell superuser	<i>machine-name#</i>
Bourne shell and Korn shell	\$
Bourne shell and Korn shell superuser	#

Related Documentation

The documents listed as online are available at:

<http://docs.sun.com/app/docs/prod/dual.sfp.pcie>

Application	Title	Part Number	Format	Location
Release Notes	<i>Sun 10GbE XFP SR PCI Express Card, Sun Dual 10GbE XFP 2 SR PCI Express Card, and Sun Dual 10GbE SFP+ PCIe ExpressModule Release Notes</i>	820-4505	PDF HTML	Online
Getting Started	<i>Sun Dual 10GbE SFP+ PCIe ExpressModule Getting Started Guide</i>	820-4981	Hardcopy	Ship kit
Safety and compliance	<i>Safety and Compliance Manual</i>	816-7190	Hardcopy	Ship kit

Documentation, Support, and Training

Sun Function	URL
Documentation	http://www.sun.com/documentation/
Support	http://www.sun.com/support/
Training	http://www.sun.com/training/

Third-Party Web Sites

Sun is not responsible for the availability of third-party web sites mentioned in this document. Sun does not endorse and is not responsible or liable for any content, advertising, products, or other materials that are available on or through such sites or resources. Sun will not be responsible or liable for any actual or alleged damage or loss caused by or in connection with the use of or reliance on any such content, goods, or services that are available on or through such sites or resources.

Sun Welcomes Your Comments

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can submit your comments by going to:

<http://www.sun.com/hwdocs/feedback>

Please include the title and part number of your document with your feedback:

Sun Dual 10GbE SFP+ PCIe ExpressModule User's Guide, part number 820-4979-10

Sun Dual 10GbE SFP+ PCIe ExpressModule Overview

This chapter describes the Sun 10GbE XFP SR PCI Express Card hardware and software, and includes the following sections:

- [“Shipping Kit Contents” on page 1](#)
- [“ExpressModule Hardware Overview” on page 1](#)
- [“Hardware and Software Requirements” on page 5](#)
- [“Patch Requirements” on page 5](#)
- [“Patches and Updates” on page 6](#)

Shipping Kit Contents

The carton in which your Sun 10GbE XFP SR PCI Express Card was shipped should contain the following items:

- Sun 10GbE XFP SR PCI Express Card
- *Sun Dual 10GbE SFP+ PCIe ExpressModule Getting Started Guide*
- *Safety and Compliance Manual*


ExpressModule Hardware Overview

The Sun 10GbE XFP SR PCI Express Card is a 10 Gigabit Ethernet (10GbE) fiber network interface card (NIC) for PCI Express systems. The ExpressModule is based on the dual-port Intel 82598EB 10GbE controller.

The ExpressModule is optimized for Intel I/O Acceleration Technology (I/OAT), which is designed to optimize network I/O. The ExpressModule is a high-performance, highly integrated 10 Gigabit Ethernet LAN card with PCIe host interface and fiber LAN connectors on the optical modules.

The product conforms to the IEEE 802.3 standard and supports standards for system manageability and power management.

FIGURE 1-1 Sun Dual 10GbE SFP+ PCIe ExpressModule

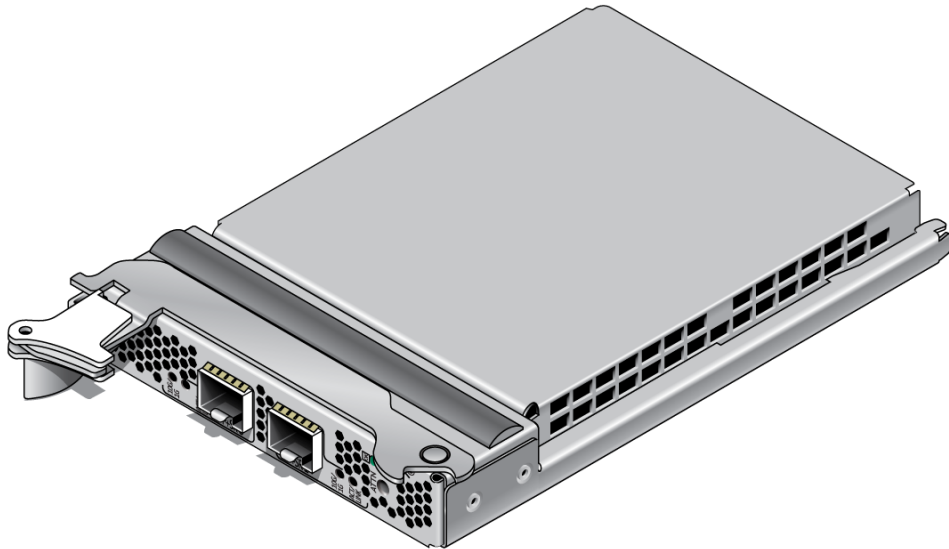

ExpressModule Features

The Sun 10GbE XFP SR PCI Express Card provides the following features and benefits:


- Intel 82598EB 10 Gigabit Ethernet controller
- Load balancing on multiple CPUs
- Intel I/O Acceleration Technology (I/OAT)
- iSCSI remote boot support
- MSI-X support
- Virtual Machine Device queues (VMDq)
- Low latency
- Optimized queues – 32 transmit (Tx) and 64 receive (Rx) per port

- Compatible with x8 standard and low-profile PCI Express slots
- Support for most network operating systems (NOS)
- Remote management support
- Support for SFP+ form factor transceivers
- RoHS compliant, lead-free technology
- Intel PROSet Utility for Windows Device Manager

Indicator Lights on the ExpressModule

On the front panel of the ExpressModule (shown in [FIGURE 1-2](#)) next to each port, there are viewing holes for two lights dedicated to that port.

FIGURE 1-2 Front Panel Lights and Attention Switch

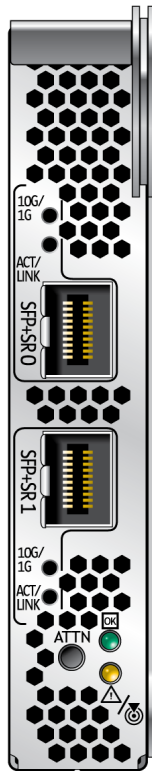

[TABLE 1-1](#) explains the meaning of the lights for each port.

TABLE 1-1 Indicator Lights for Each Port on the ExpressModule

Label	Color	Meaning
ACT/LINK	Green	Activity
10G/1G	Green	10GbE link
10G/1G	Amber	1GbE link

Two LEDs are on the ExpressModule next to the Attention switch. One LED emits green light, the LED other emits amber light. Each light can be on, off, or blinking. [TABLE 1-2](#) explains the meaning of these lights.

TABLE 1-2 LED Indicator Lights on the ExpressModule

LED Color	LED State	Meaning	Action
Green	Off	Power off	Insertion or removal of add-in cards is permitted. All supply voltages (except Vaux) have been removed from the slot if required for add-in card removal.
Green	On	Power on	The slot is powered on. Insertion or removal of add-in cards is not permitted.
Green	Blinking	Power transition	The slot is in the process of powering up or down. Insertion or removal of add-in cards is not permitted.
Amber	Off	Normal	Operation is normal.
Amber	On	Attention	There is an operation problem at this slot.
Amber	Blinking	Locate	This slot is being identified at user request.

Note – The Attention switch currently is not supported.

Hardware and Software Requirements

Before using the Sun 10GbE XFP SR PCI Express Card, ensure that your system meets the hardware and software requirements in [TABLE 1-3](#).

TABLE 1-3 Hardware and Software Requirements

Requirements	Supported Products
Hardware	Sun Blade X6220 Server Module Sun Blade X6250 Server Module Sun Blade X6450 Server Module* Sun Blade X8420 Server Module
Operating system	Red Hat Enterprise Linux 5.1 (32-bit and 64-bit) Red Hat Enterprise Linux 4.6 (32-bit and 64-bit) SUSE 10-Sp1 (64-bit) Microsoft Windows 2008 (32-bit and 64-bit) Microsoft Windows 2003 (32-bit and 64-bit)

* Sun Blade X6450 Server Module supports Linux only.

Note – The preceding information is up-to-date at the time this manual was written. Go to <http://www.sun.com/> for the latest information. Subsequent versions of this document have a higher number following the final dash. That is, 820-4979-10, becomes 820-4979-11.

Patch Requirements

You must install the latest version of the patch from the following web site:

<http://sunsolve.sun.com>

If the patch is not available on the SunSolveSM web site, contact your local sales or service representative.

Patches and Updates

Check the Sun Update Connection to ensure that you have the latest recommended patch clusters and security patches. You can download the latest recommended patch clusters and security patches at:

<http://sunsolve.sun.com/pub-cgi/show.pl?target=patchpage>

Installing and Setting Up the Device Driver Software

This chapter explains how to install and remove the `ixgbe` driver on Linux and Microsoft Windows systems. This chapter contains the following sections:

- “Downloading and Installing the Driver on a Linux Platform” on page 7
- “Downloading and Installing the Driver on a Microsoft Windows Platform” on page 10

Downloading and Installing the Driver on a Linux Platform

If your system uses the RedHat or SuSe Linux operating system, you must download the `ixgbe` device driver to install it.

▼ To Download the Driver for a Linux Platform

1. **Log in to your system.**
2. **With a browser, go to this location:**

<http://support.intel.com/support/network/adapter/10gbe/srdualserverxpr/>

3. **Select the following product:**
Intel® 10 Gigabit XF SR Dual Port ExpressModule

4. **Select this option:**
Download drivers and software
5. **Select Linux as the operating system.**
6. **Locate the following driver and select Download:**
Network Adapter Driver for 10 GbE PCI-E Based Network Connections for Linux
7. **Review and accept the software license agreement.**
8. **Select this option:**
Download Network Adapter Driver for 10 GbE PCI-E Based Network Connections for Linux
The download begins. The file named `ixgbe-1.3.16.1.tar.gz` is saved in the `~/Desktop` directory of your system.

▼ To Install the Driver for a Linux Platform

1. **Copy the file containing the driver from `~/Desktop` to `/temp`.**
The file is named `ixgbe-1.3.16.1.tar.gz`.
2. **Uncompress and untar the file with this command:**

```
# tar -zxvf ixgbe-1.3.16.1.tar.gz
```

3. **Go to the newly created `src` directory:**

```
# cd /temp/ixgbe-1.3.16.1/src
```

4. **Compile the driver source file with these commands:**

```
# make  
# make install
```

5. **Load the `ixgbe` driver with the `modprobe` command:**

```
# modprobe ixgbe
```

6. Verify that the `ixgbe` driver has been successfully installed with this `lsmod` command:

```
# lsmod | grep ixgbe
```

The output should be similar to the following:

```
ixgbe          118052  0
```

7. Check the `ixgbe` driver version with this `modinfo` command:

```
# modinfo ixgbe | grep ver
```

For example, the output might be the following:

```
filename:      /lib/modules/2.6.18-53.el5/kernel/drivers/net/ixgbe/ixgbe.ko
version:      1.3.16.1-lro
description:   Intel(R) 10 Gigabit PCI Express Network Driver
srcversion:   5CFF6AEBA251050F8A4B746
vermagic:     2.6.18-53.el5 SMP mod_unload gcc-4.1
```

▼ To Remove the Driver From a Linux Platform

- Use the `rmmmod` command:

```
# rmmmod ixgbe
```

Downloading and Installing the Driver on a Microsoft Windows Platform

If your system uses the Microsoft Windows Server 2003 operating system, perform the following procedures to download and install the device driver.

▼ To Download and Install the Driver on a Microsoft Windows Platform

1. **Log in to your system.**
2. **With a browser, go to this location:**

<http://support.intel.com/support/network/adapter/10gbe/srdualserverxpr/>

3. **Select the following product:**
Intel® 10 Gigabit XF SR Dual Port ExpressModule
4. **Select this option:**
Download drivers and software
5. **Select one of the following as the operating system:**
 - **For a 64-bit driver:** Windows Server 2003 Standard x64 Edition
 - **For a 32-bit driver:** Windows Server 2003 Standard Edition
6. **Locate one of the following and select Download next to it:**
 - **For a 64-bit driver:** Network Adapter Driver for Windows XP Professional x64 Edition or Windows Server 2003 x64 Edition
 - **For a 32-bit driver:** Network Adapter Drivers for Windows 2000, Windows XP, and Windows Server 2003
7. **Review and accept the software license agreement.**
8. **Select one of the following to start the download:**
 - Download Network Adapter Driver for Windows XP Professional x64 Edition or Windows Server 2003 x64 Edition
 - Download Network Adapter Drivers for Windows 2000, Windows XP, and Windows Server 2003The download begins.

9. Click on the following `exe` files to install the driver:
 - For a 64-bit driver: `PROEM64T.exe`
 - For a 32-bit driver: `PRO2KXP.exe`
10. Follow the instructions in the installation wizard.
11. If the Found New Hardware Wizard screen is displayed, click **Cancel**.
The autorun automatically runs after you have extracted the files.

▼ To Remove the Driver From a Microsoft Windows Platform

1. From the Control Panel, double-click **Add/Remove Programs**.
2. Select **Intel PRO Network Connections Drivers**.
3. Click **Add/Remove**.
4. When the confirmation dialog displays, click **OK**.

Installing the ExpressModule

This chapter describes how to install the ExpressModule in your system and verify that it is recognized by the operating system.

This chapter contains the following sections:

- [“Installing an Optical Transceiver” on page 13](#)
- [“Installing the ExpressModule” on page 16](#)
- [“Verifying the Installation” on page 19](#)

Installing an Optical Transceiver


The Sun 10GbE XFP SR PCI Express Card requires a short-range optical transceiver in at least one port to create an Ethernet connection. The short-range optical transceiver (part number X5561A-Z) is available from Sun Microsystems.

Note – Install the optical transceivers into the ExpressModule *before* installing the ExpressModule into the system.


▼ To Install an Optical Transceiver

1. **Pull the locking handle into the full horizontal position.**

You will feel the handle click into position when it is fully opened.

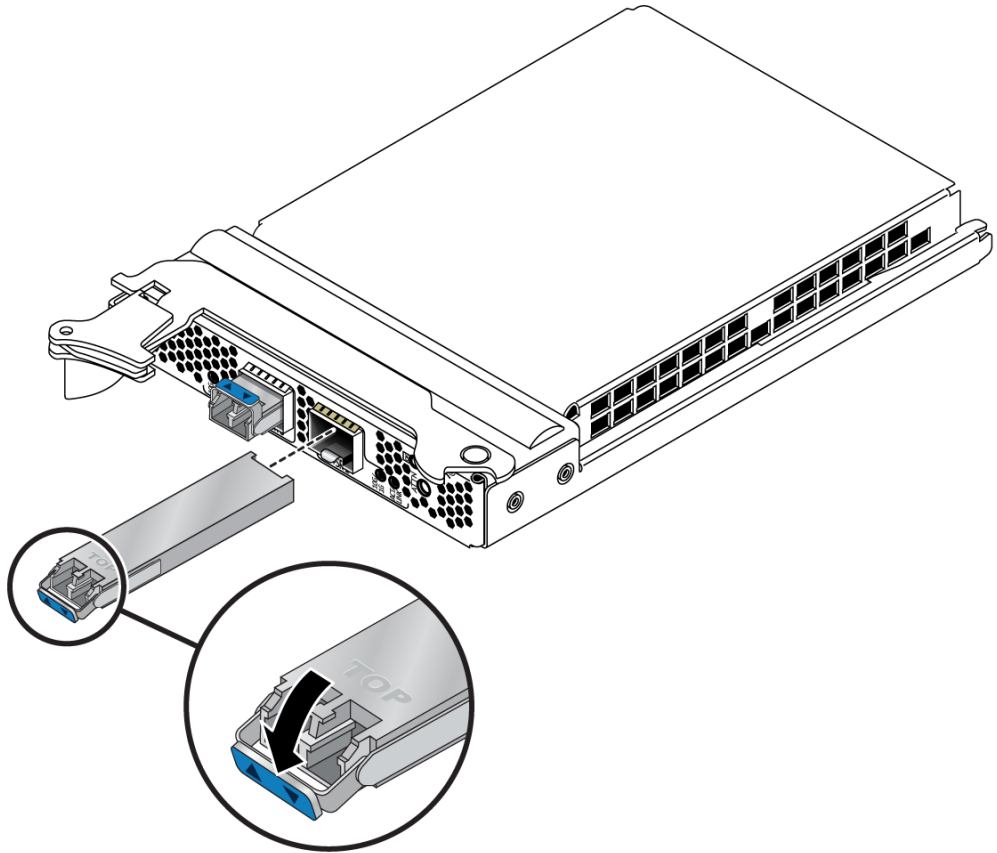

2. Holding the optical transceiver by the edges, align the transceiver with the slot in the ExpressModule and slide the transceiver into the opening.
3. Applying even pressure at both corners of the transceiver, push the transceiver until it is firmly seated in the slot.
4. Push the handle closed to lock the optical transceiver in place.

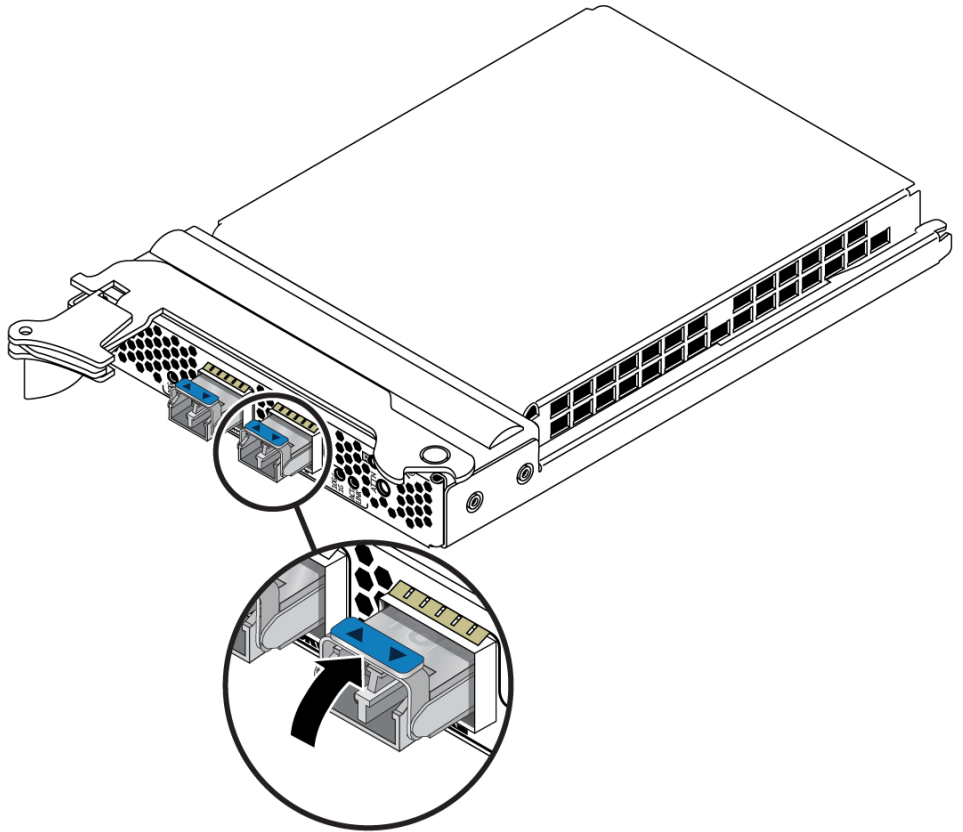

5. Repeat [Step 1](#) through [Step 4](#) to install the second optical transceiver.



Caution – If you pull the locking handle down when the optical transceiver is installed, remove the optical transceiver entirely and reinstall it. The handle operates an internal lock. Pulling the handle down can disconnect the optical transceiver, even though it might appear to be connected.


Installing the ExpressModule

The following instructions describe the basic tasks required to install the ExpressModule. Refer to your system installation or service manual for detailed ExpressModule installation instructions.

Note – To maintain proper cooling for the ExpressModule in your chassis, all ExpressModule slots must be filled with either operating ExpressModules or filler panels.


▼ To Install the ExpressModule With the Power Off

1. **Halt and power off your system.**
2. **Power off all peripherals connected to your system.**
3. **Attach the adhesive copper strip of the antistatic wrist strap to the metal casing of the power supply. Wrap the other end twice around your wrist, with the adhesive side against your skin.**
4. **Remove the filler panel from the ExpressModule opening.**
5. **Open the latch on the ExpressModule.**

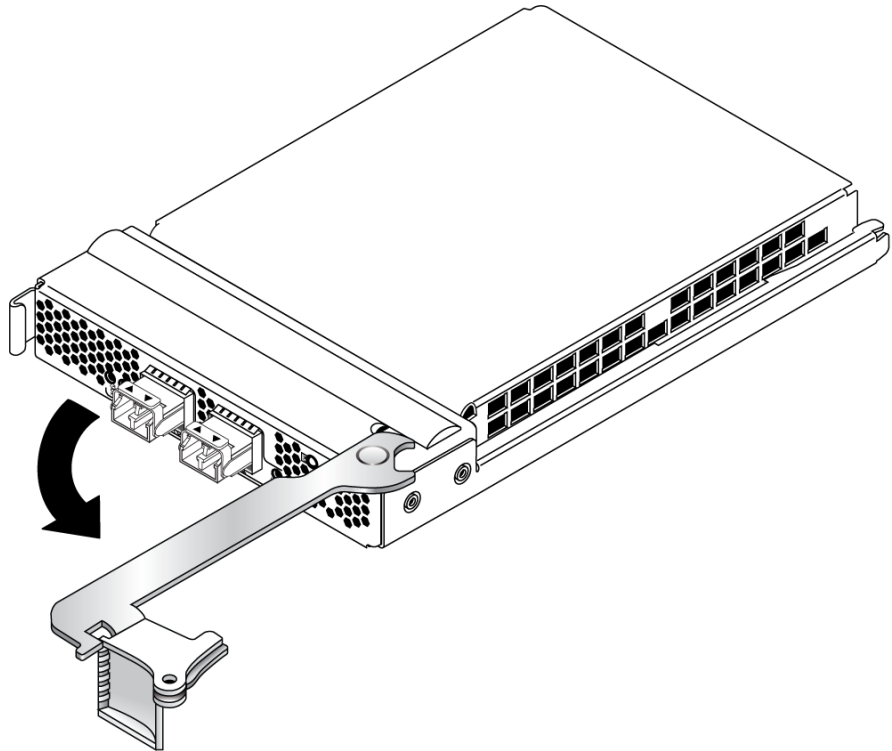

6. Align the ExpressModule with the vacant ExpressModule slot (1 in the following figure).

Ensure that the ExpressModule's indicator lights on the front panel are facing toward you and that the ExpressModule ejector lever on the bottom is fully opened.

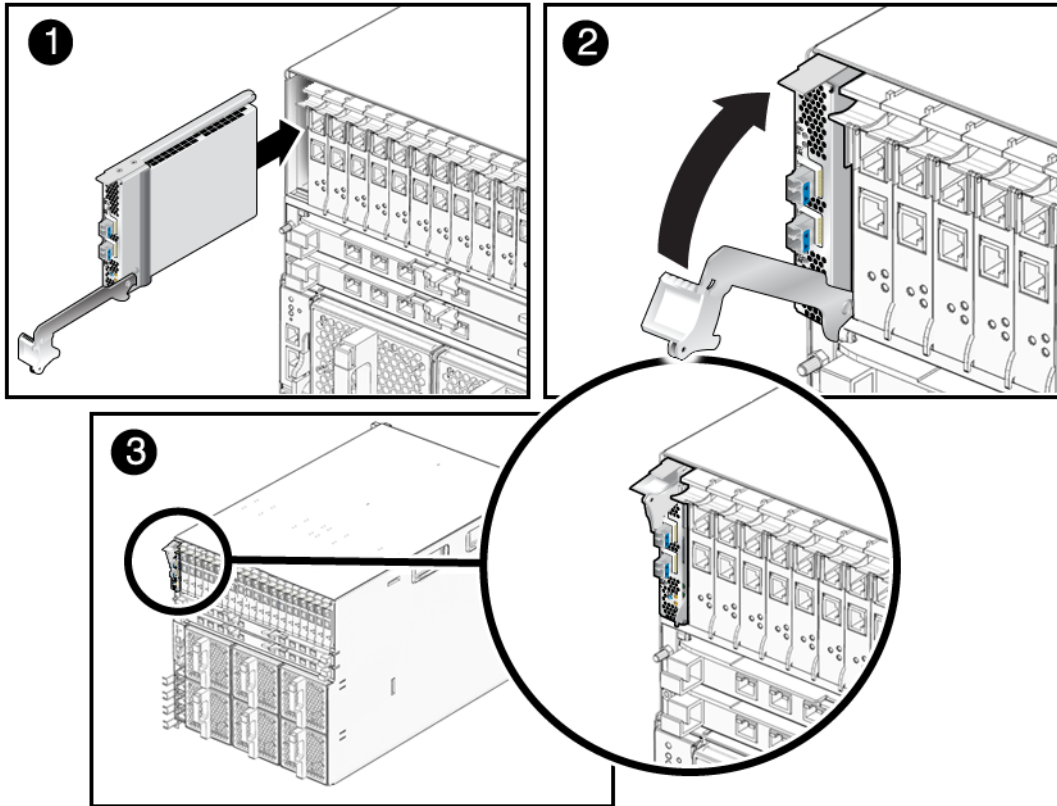

7. Slide the ExpressModule into the vacant ExpressModule chassis slot until the ejector lever engages and starts to close (2 in the preceding figure).


Failure to align the ExpressModule correctly can result in damage with the ExpressModule's internal connection to the chassis midplane.

8. Complete the installation by closing the ejector lever until the latch snaps into place (3 in the preceding figure).



Caution – Do not use excessive force when installing the ExpressModule into the slot. You might damage the ExpressModule's connector. If the ExpressModule does not seat properly when you apply even pressure, remove and carefully reinstall the ExpressModule.

9. Detach the wrist strap.
10. Connect the Ethernet cables.

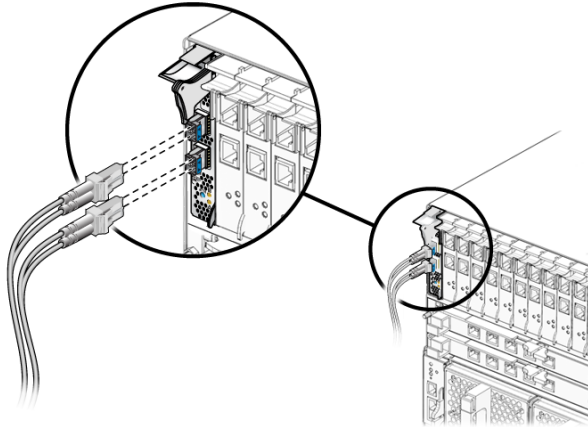

Verifying the Installation

After you have installed the Sun 10GbE XFP SR PCI Express Card, perform the following tasks to verify the installation.

▼ To Verify the Installation in a Linux System

- Verify the new network interface instances corresponding to the Sun 10GbE XFP SR PCI Express Card:

```
# ifconfig -a | grep eth  
  
eth3   Link encap:Ethernet  HWaddr 00:1B:21:17:67:B0  
eth4   Link encap:Ethernet  HWaddr 00:1B:21:17:67:9B
```

▼ To Verify the Installation in a Microsoft Windows System

1. Click on Control Panel.

2. Click on Network Connection.

The Ethernet adapter interfaces labeled as "Intel(R) 82598EB 10 Gigabit AF Dual Port Network Connection" will be displayed at the Network Connection window screen, if the driver is installed successfully.

3. To check the driver version, use the Administration Tool.

The minimum Windows Server 2003 driver version is 1 . 2 . 22 . 0.

4. In the Administration Tool click Computer Management, Device Manager, and Network Adapter.

Network Configuration

This chapter describes how to edit the network host files after the card has been installed on your system. This chapter contains the following section:

- [“Configuring the Network Host Files for Booting Over the Gigabit Ethernet Network for Linux Systems”](#) on page 21

Note – To do a PXE boot (or netboot) on a dual-port card, you *must* use the topmost port. That port is the logical Port 0, and it has the lowest MAC address.

Configuring the Network Host Files for Booting Over the Gigabit Ethernet Network for Linux Systems

▼ To Boot Over the Network on Linux Systems

1. **Obtain the MAC address of the first Sun 10GbE XFP SR PCI Express Card port by checking the label of the card.**

The MAC address of the first port should be the MAC address from the label plus 1.

2. **Set up the PXE boot server with the MAC addresses.**
3. **Use the first Ethernet adapter port as the boot interface.**

Only the first port is enabled for booting over the network.

4. **Plug the Ethernet cable into the card port.**
5. **Power on the system.**
6. **Press the F2 key or the Control-E keys to go to the BIOS.**
7. **Check and ensure that the boot order of the network devices is higher than the hard drive.**
8. **Press the F10 key to save the boot configuration changes and exit.**

The system should reboot after saving the boot configuration.

9. **Press the F12 key to install the OS from the network.**

If the cable is connected to the correct port, you should see the MAC address that you assigned to your PXE server displayed by BIOS.

```
image : pxe-mac-addr
PXE-E61: Media test failure, check cable
PXE-MOF: Exiting Intel Boot Agent.

NVIDIA Boot Agent 217.0513
Copyright (C) 2001-2005) NVIDIA Corporation
Copyright (C) 1997-2000) NVIDIA Corporation
PXE-E61: Media test failure, check cable
PXE-MOF: Exiting Intel Boot Agent.

NVIDIA Boot Agent 217.0513
Copyright (C) 2001-2005) NVIDIA Corporation
Copyright (C) 1997-2000) NVIDIA Corporation
PXE-E61: Media test failure, check cable
PXE-MOF: Exiting Intel Boot Agent.

Intel (R) Boot Agent GE v1.2.43 Beta-1
Copyright (C) 1997-2006) Intel Corporation

CLIENT MAC ADDR; 00 15 17 13 90 00 GUID: 00000000 0000 0000 0000
00144F26E0B7
```

10. **Install the ixgbe driver and configure the Ethernet adapter.**
11. **After the Linux OS install completes, use the BIOS to change the boot device priority to Boot from Hard Disk in order to boot up the newly installed OS.**
Unless the boot device priority is changed, the OS installation process will repeat.

Configuring the Driver Parameters

The `ixgbe` device driver controls the Sun 10GbE SFP+ PCIe ExpressModule interfaces. You can manually set the `ixgbe` device driver parameters to customize each device in your system.

This chapter lists the available device driver parameters and describes how you can set these parameters.

- [“Driver Overview” on page 23](#)
- [“Driver Parameters for Linux Systems” on page 24](#)
- [“Setting `ixgbe` Driver Parameters in Linux Systems” on page 25](#)

Driver Overview

Each `ixgbe` channel provides 10000BASE-T networking interfaces.

The `ixgbe` driver is capable of supporting 10000 Mbit/sec, full-duplex.

Driver Parameters for Linux Systems

TABLE 5-1 lists the tunable `ixgbe` driver parameters for Linux operating systems and describes their function.

TABLE 5-1 Tunable `ixgbe` Driver Parameters for Linux Operating Systems

Keyword	Valid Range	Default Value	Description
FlowControl	0 to 3 (0=none, 1=Rx only, 2=Tx only, 3=Rx and Tx)	Read from the EEPROM. If EEPROM is not detected, default is 3.	This parameter controls the automatic generation (Tx) and response (Rx) to Ethernet PAUSE frames.
RxDescriptors	64 to 512	512	This value is the number of receive descriptors allocated by the driver. Increasing this value allows the driver to buffer more incoming packets. Each descriptor is 16 bytes. A receive buffer is also allocated for each descriptor and can be either 2048, 4056, 8192, or 16384 bytes, depending on the MTU setting. When the MTU size is 1500 or less, the receive buffer size is 2048 bytes. When the MTU is greater than 1500, the receive buffer size will be either 4056, 8192, or 16384 bytes. The maximum MTU size is 16114.
RxIntDelay	0 to 65535 (0=off)	72	This value delays the generation of receive interrupts in units of 0.8192 microseconds. Receive interrupt reduction can improve CPU efficiency if properly tuned for specific network traffic. Increasing this value adds extra latency to frame reception and can end up decreasing the throughput of TCP traffic. If the system is reporting dropped receives, this value might be set too high, causing the driver to run out of available receive descriptors.
TxDescriptors	80 to 4096	256	This value is the number of transmit descriptors allocated by the driver. Increasing this value allows the driver to queue more transmits. Each descriptor is 16 bytes.
XsumRX	0 to 1	1	A value of 1 indicates that the driver should enable IP checksum offload for received packets (both UDP and TCP) to the Ethernet adapter hardware.

Setting ixgbe Driver Parameters in Linux Systems

▼ To Configure Jumbo Frames

Jumbo Frames can support up to 15000 MTU. The default value is 1500 MTU.

- Use the `ifconfig` command to increase MTUs to allow transmission of Jumbo Frames.

For example, where the IP address for `eth7` is `192.1.1.200`, the following command increases MTUs to the maximum:

```
# ifconfig eth7 192.1.1.200 mtu 15000 up
```


Configuring VLANs

This chapter describes how to configure virtual local area networks (VLANs).

This chapter contains the following sections:

- [“VLAN Overview” on page 27](#)
- [“Configuring VLANs” on page 30](#)
- [“Configuring Bonding for Multiple Interfaces” on page 32](#)

Note – If you change any of the VLAN configuration parameters, you must reboot the system before the changes take effect. If you make changes and do not reboot, you might experience configuration problems.

VLAN Overview

With multiple VLANs on a card, a server with a single card can have a logical presence on multiple IP subnets. By default, 128 VLANs can be defined for each VLAN-aware card on your server. However, this number can be increased by changing the system parameters.

If your network does not require multiple VLANs, you can use the default configuration, in which case no further configuration is necessary.


VLANs enable you to split your physical LAN into logical subparts, providing an essential tool for increasing the efficiency and flexibility of your network.

VLANs are commonly used to separate groups of network users into manageable broadcast domains, to create logical segmentation of workgroups, and to enforce security policies among each logical segment. Each defined VLAN behaves as its own separate network, with its traffic and broadcasts isolated from the others, increasing the bandwidth efficiency within each logical group.

Although VLANs are commonly used to create individual broadcast domains or separate IP subnets, it can be useful for a server to have a presence on more than one VLAN simultaneously. Several Sun products support multiple VLANs on a per-port or per-interface basis, allowing very flexible network configurations.

FIGURE 6-1 shows an example network that uses VLANs.

FIGURE 6-1 Example of Servers Supporting Multiple VLANs With Tagging Adapters

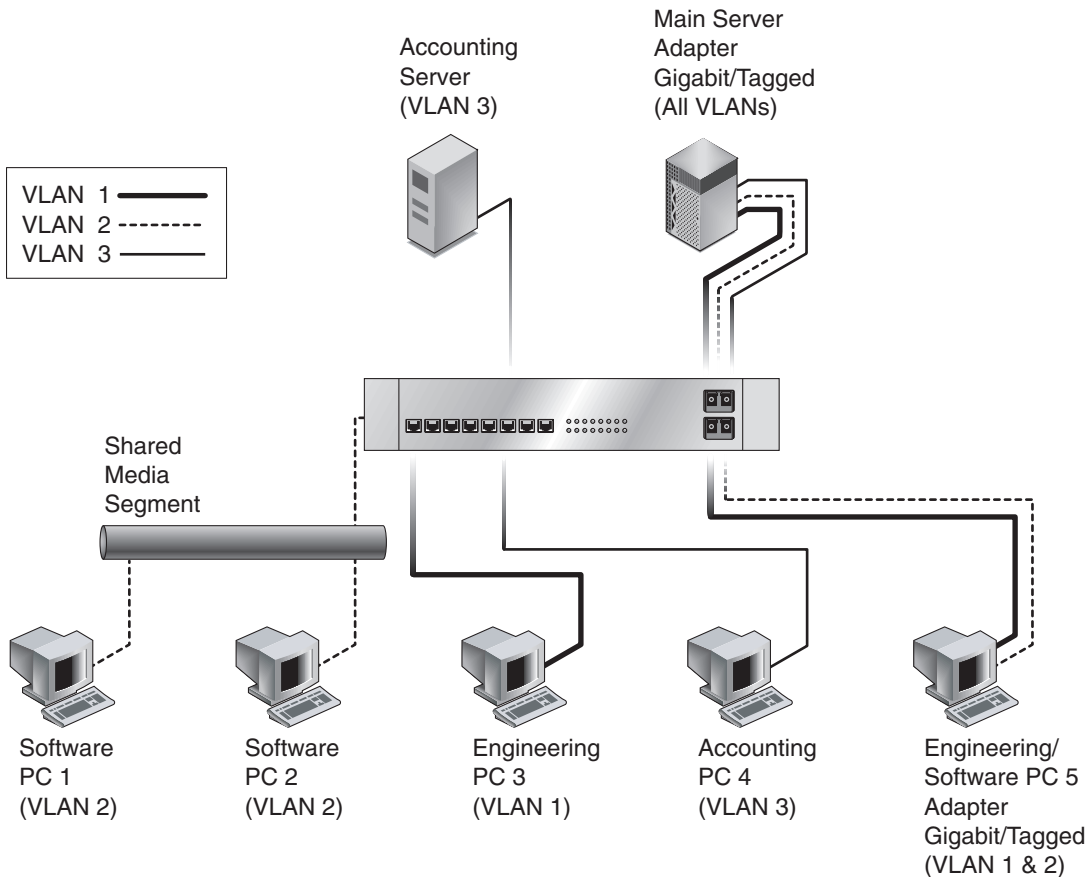

The example network has the following features:

The physical LAN network consists of a switch, two servers, and five clients. The LAN is logically organized into three different VLANs, each representing a different IP subnet.

- VLAN 1 is an IP subnet consisting of the Main Server, Client 3, and Client 5. This represents an engineering group.
- VLAN 2 includes the Main Server, Clients 1 and 2 by means of a shared media segment, and Client 5. This is a software development group.
- VLAN 3 includes the Main Server, the Accounting Server, and Client 4. This is an accounting group.

The Main Server is a high-use server that needs to be accessed from all VLANs and IP subnets. The server has a Sun 10GbE XFP SR PCI Express Card installed. All three IP subnets are accessed by means of the single physical Ethernet adapter interface. The server is attached to one of the switch's Gigabit Ethernet ports, which is configured for VLANs 1, 2, and 3. Both the Ethernet adapter and the connected switch port have tagging turned on. Because of the tagging VLAN capabilities of both devices, the server is able to communicate on all three IP subnets in this network, but continues to maintain broadcast separation between all of those subnets. The following list describes the components of this network:

- The Accounting Server is available to only VLAN 3. The Accounting Server is isolated from all traffic on VLANs 1 and 2. The switch port connected to the server has tagging turned off.
- Clients 1 and 2 are attached to a shared media hub that is then connected to the switch. Clients 1 and 2 belong only to VLAN 2. Those clients are logically in the same IP subnet as the Main Server and Client 5. The switch port connected to this segment has tagging turned off.
- Client 3 is a member of VLAN 1. This client can communicate only with the Main Server and Client 5. Tagging is not enabled on Client 3's switch port.
- Client 4 is a member of VLAN 3. This client can communicate only with the servers. Tagging is not enabled on Client 4's switch port.
- Client 5 is a member of both VLANs 1 and 2. This client has a Sun 10GbE XFP SR PCI Express Card installed. Client 5 is connected to switch port 10. Both the Ethernet adapter and the switch port are configured for VLANs 1 and 2, and both have tagging enabled.


VLAN tagging is only required to be enabled on switch ports that create trunk links to other VLAN-aware Ethernet switches, or on ports connected to tag-capable end-stations, such as servers or workstations with VLAN-aware Ethernet adapters.

Configuring VLANs

VLANs can be created according to various criteria, but each VLAN must be assigned a VLAN tag or VLAN ID (VID). The VID is a 12-bit identifier between 1 and 4094 that identifies a unique VLAN. For each network interface (`ixgbe0`, `ixgbe1`, `ixgbe2`, and so on), 4094 possible VLAN IDs can be selected for each port.

Tagging an Ethernet frame requires the addition of a tag header to the frame. The header is inserted immediately following the destination MAC address and the source MAC address. The tag header consists of two bytes of Ethernet Tag Protocol identifier (TPID, 0x8100) and two bytes of tag control information (TCI). [FIGURE 6-2](#) shows the Ethernet tag header format.

FIGURE 6-2 Ethernet Tag Header Format

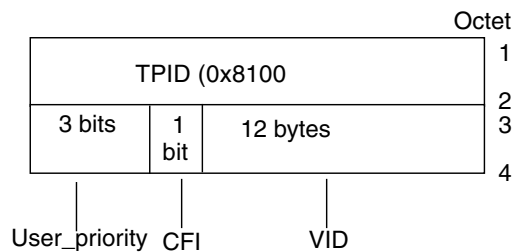

By default, a single VLAN is configured for every port, which groups all ports into the same broadcast domain, just as if there were no VLANs at all. This means that VLAN tagging for the switch port is turned off.

Note – If you configure a VLAN virtual device for an Ethernet adapter, all traffic sent or received by that Ethernet adapter must be in VLAN-tagged format.

▼ To Configure VLANs in a Linux Environment

1. Ensure that the `ixgbe` module is loaded:

```
# modprobe ixgbe
```


2. Plumb the Sun 10GbE XFP SR PCI Express Card interface:

```
# ifconfig eth6 xxx.xxx.xx.xxx up
```

where *xxx.xxx.xx.xxx* = the IP address of the interface.

3. Add the VLAN instance (VID).

For example:

```
# vconfig add eth6 5
```

where *eth6* is the interface and *5* is the VID.

Note – In Linux systems, you can use any single digit as the VID.

4. Configure the ixgbe VLAN (*eth2* in this example):

```
# ifconfig eth6.5 xxx.xxx.xx.xxx up
```

where *xxx.xxx.xx.xxx* = the IP address of the interface.

▼ To Configure VLANs in a Microsoft Windows 2003 Environment

1. Click Control Panel.
2. Click Network Connection.
3. Click the folder icon from the sub-manual bar.
4. Right-click the Sun 10GbE XFP SR PCI Express Card port, then select Properties.
5. Click Configure.
6. Click VLAN, then click on New.
7. Type VLAN with ID (for example, type `Vlan10`).
8. Click Internet Protocol (TCP/IP).
9. Click Use the following IP address.
10. Type the IP address.

11. Click **Subnet Mask**.
The value 255.255.255.0 is displayed.
12. Click **OK**.
13. Repeat [Step 3](#) through [Step 10](#) until all the network ports are VLAN configured.

Note – Ensure that the firewall is configured to allow VLAN traffic. Otherwise, the VLAN might not operate properly.

Configuring Bonding for Multiple Interfaces

▼ To Configure Bonding for Multiple ixgbe Interfaces

1. Use the `modprobe` command to configure the mode:

```
# modprobe bonding mode=balance-rr miimon=100 max_bonds=1
```

In this command,

- `max_bonds` is the number of bond interfaces to be created.
- `mode` specifies the bonding policy. (This example uses `balance-rr`.)

2. Use the `ifconfig` command to create the bond:

```
# ifconfig bond0 192.2.2.15 netmask 255.255.255.0 broadcast 192.2.2.255  
# ifenslave bond0 eth4 eth5
```

In this command `bond0` is the bonding device.

3. Configure the `bond n` interfaces.

In this example, two bonds (bond0 and bond1) are configured:

```
# modprobe bonding mode=balance-rr miimon=100 max_bonds=2
# ifconfig bond0 192.2.2.15 netmask 255.255.255.0 broadcast 192.2.2.255
# ifenslave bond0 eth4 eth5
# ifconfig bond1 193.2.2.15 netmask 255.255.255.0 broadcast 193.2.2.255
# ifenslave bond1 eth6 eth7
```

Refer to Linux documentation for more information.

▼ To Remove Bonding

- Use the `rmmmod` command to remove bonding:

```
# rmmmod bonding
```


Sun Dual 10GbE SFP+ PCIe ExpressModule Specifications


This appendix lists the specifications for the Sun 10GbE XFP SR PCI Express Card. This appendix contains the following sections:

- [“Connectors” on page 36](#)
- [“Technical Features” on page 37](#)
- [“Physical Characteristics” on page 37](#)
- [“Power and Environmental Requirements” on page 38](#)

Connectors

FIGURE A-1 shows the connectors for the Sun 10GbE XFP SR PCI Express Card.

FIGURE A-1 Sun Dual 10GbE SFP+ PCIe ExpressModule Connectors

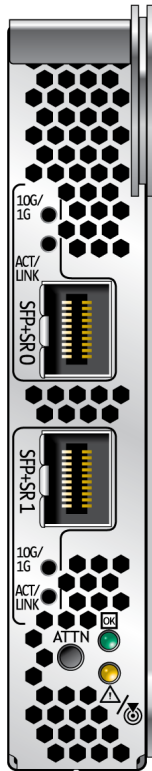

Technical Features

TABLE A-1 Performance Specifications

Feature	Specification
Data rate supported per port	10 Gigabit (Gb)
Bus type	PCI Express 2.0
Bus width	x8 lane PCI Express
Conforms to Ethernet Standard	802.3
Boot ROM	2 Mbit SPI Flash
Electromagnetic Interference (EMI)	FCC Class A

Physical Characteristics

TABLE A-2 Physical Characteristics

Dimension	Measurement
Length	6.62 in. (168.2 mm)
Width	4.25 in. (108 mm)
Power LED (green)	
Attention LED (yellow)	
Attention button (recessed)	
Activity LED (each port)	Green: 10 GbE link Yellow: 1 GbE link

Power and Environmental Requirements

TABLE A-3 Card Power Requirements

Specification	Measurement
Typical power consumption	14W (1.17A at 12V) dual port
Main host power supply	12 V \pm 15%
Operating temperature	35 to 70 °C (95 to 158 °F) module inlet temperature
Storage temperature	-40 to 70 °C (-40 to 158 °F)
Storage humidity	90% noncondensing relative humidity at 35 °C
Airflow	2 to 12 CFM

Index

B

- bonding for multiple interfaces, 32
- booting over the network
 - on Linux systems, 21

C

- configuring bonding, 32
- configuring the network host files, 21
- configuring VLANs, 30
 - in Linux environments, 30
- connectors, 36

D

- driver parameters
 - tunable for Linux OS, 24

E

- editing the network host files, 21
- Ethernet adapter features, 2

H

- hardware and software requirements, 5
- hardware components, 1

I

- installing the ExpressModule, 16
- installing the ixgbe driver
 - on Linux platforms, 7
 - on Windows platforms, 10

J

- Jumbo Frames, 25

N

- networking interfaces, 23

P

- patches
 - recommended patch clusters, 6
 - recommended security, 6
- patches and updates, 6
- power requirements, 38

R

- removing the ixgbe driver
 - from Linux platforms, 9
 - from Windows platforms, 11

S

- setting ixgbe driver parameters, 23
- shipping kit contents, 1
- software and hardware requirements, 5
- specifications, 35
- Sun Dual 10GbE SFP+ PCIe ExpressModule interfaces, 23

V

- verifying the installation, 19
- VLAN ID (VID), 30

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>