

DECT1363 Series User's Guide

What's in the box?



DECT1363 base
with cordless
handset



Battery
cover

Not pictured:

- Rechargeable battery (BT-1007)
- AC adapter (PS-0035)
- Telephone cord

- If any items are missing or damaged, contact our Customer Care Line immediately. Never use damaged products!
- Need help? Get answers 24/7 at our website: www.uniden.com.

If You...	Contact Uniden's...	Phone Number
have a question or problem	Customer Care Line*	817-858-2929 or 800-297-1023
need a replacement part or an accessory	Parts Department*	800-554-3988
need special assistance due to a disability	Accessibility Help Line	800-874-9314 (voice or TTY)

- * During regular business hours, Central Standard Time; see our website for detailed business hours.

What's in the manual?

Getting Started.....	3	Chain Dialing.....	11
Installing Your Phone	3	Using a Voice Mail Service	11
Getting to Know Your Phone	4	Important Information	12
Using the Menu	6	Solving Problems	12
Using Your Phone	8	AC Adapter and Battery	
Basics	8	Information	15
Using the Phonebook	10	Compliance Information	16
Finding the Handset.....	11	Warranty (1 Year, Limited)	19
Using Special Features.....	11		

Important Safety Instructions!

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- **This unit is NOT waterproof.** DO NOT expose it to rain/moisture.
- Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use a telephone to report a gas leak in the vicinity of the leak.
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- Do not place the handset in any charging cradle without the battery installed and the battery cover securely in place.

SAVE THESE INSTRUCTIONS!

CAUTION! Risk of explosion if battery is replaced by an incorrect type! Dispose of used batteries according to the instructions. Do not open or mutilate the battery. Disconnect the battery before shipping this product.


For more details, see the *Important Information* section.

GETTING STARTED

Installing Your Phone

Charge the Battery

1. Unpack the handset, battery pack, and battery cover. If you need to remove the battery cover, press in on the notch and slide the cover down and off.
2. Line up the battery connector with the jack inside the handset. (The battery connector will only fit one way.)
3. Push the connector in until it clicks into place; tug gently on the wires to make sure the battery pack is securely connected.
4. Replace the battery cover and slide it into place.
5. Connect the AC adapter to the **AC IN 8V** jack on the base. Set the plug into the notch.
6. Plug the other end of the adapter into a standard 120V AC outlet.
7. Place the handset in the base with the display facing forward. The display on the handset should light up; if it doesn't, reseal the handset or try plugging the AC adapter into a different outlet.

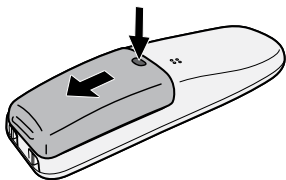

 **Charge the handset completely (about 15 hours) before using it.**

Connect the Telephone Cord

Use the telephone cord to connect the **TEL LINE** jack on the base to a standard telephone wall jack.

Test the Connection

1. Pick up the handset from the cradle and press **TALK**. You should hear a dial tone, and the display should say *Talk*.
 - If you don't hear a dial tone or the display says *Check Tel Line*, check the connection between the base and the phone jack.
2. Make a quick test call. (Press **END** to hang up.)
 - If you keep hearing a dial tone, try changing to pulse dialing mode.

- If there is a lot of noise, see page 13 for tips on avoiding interference.


Changing from Tone to Pulse Dialing

Your phone communicates with the telephone network in two ways: tone dialing or pulse dialing. Most telephone companies use tone dialing. If your phone company uses pulse dialing, you will need to change your phone's dial mode.

1. From the handset, open the menu and select *Global Setup*. (See page 6 for details on using the menu.)
2. Select *Dial Mode*, then select *Pulse*. The phone sounds a confirmation tone.

If you use pulse dialing and you need to send DTMF tones during a call (if you're using an automated response system, for example), press * to temporarily switch to tone dialing. When the call ends, the phone automatically returns to pulse dialing mode.

Getting to Know Your Phone

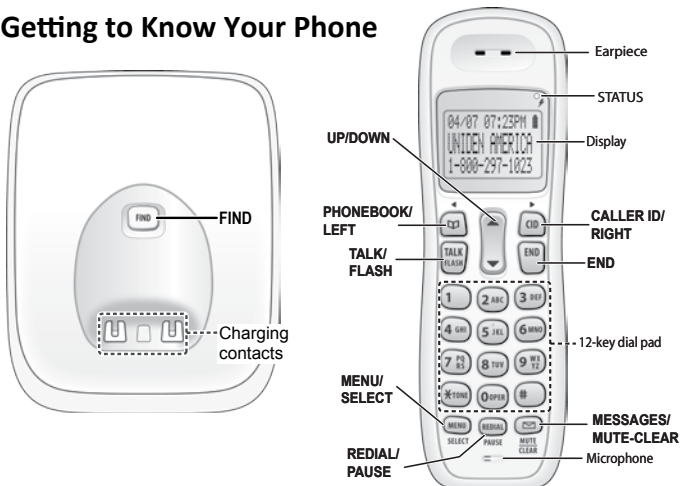

Base key and how it works

Key (icon)	What it does
FIND	- In standby: page the handset.

Handset keys/LEDs and how they work

Key (icon)	What it does
TALK/FLASH	- In standby: start a telephone call (get a dial tone). - During a call: switch to a waiting call.
END	- During a call: hang up. - In the menu or any list: exit and go to standby.
UP (▲)	- In standby: increase the ringer volume. - During a call: increase the audio volume. - In any menu or list: move the cursor up one line.
DOWN (▼)	- In standby: decrease the ringer volume. - During a call: decrease the audio volume. - In any menu or list: move the cursor down one line.
PHONEBOOK/ LEFT (📖)	- In standby or during a call: open the phonebook. - In the menu: go back to the previous screen. - During text entry: move the cursor to the left.
CALLER ID /RIGHT	- In standby or during a call: open the Caller ID list. - During text entry: move the cursor to the right.
MENU/ SELECT	- In standby: open the menu. - In the menu or any list: select the highlighted item.
REDIAL/ PAUSE	- In standby: open the redial list. - While entering a phone number: insert a 2-second pause.
MESSAGES/ MUTE-CLEAR (✉)	- In standby: access your voice mail service. - During a call: mute the microphone. - If the phone is ringing: mute the ringer for this call only. - While entering text: Delete the entered text.

Handset Setup **Menu**

<i>T-coil</i>	Turn on T-coil mode to reduce noise on some hearing aids (for more details, see page 13).
<i>Ringer Tones</i>	Choose the handset's ring tone. As you highlight each ring tone, the phone plays a sample. When you hear the tone you want, press MENU/SELECT .
<i>AutoTalk</i>	Have the handset answer a call when you pick it up from the cradle (without pressing any buttons).
<i>Any Key Answer</i>	Have the handset answer a call when you press any key on the 12-key dialpad.
<i>Handset Language</i>	Change the display language.
<i>Key Touch Tone</i>	Have the keypad sound a tone when you press a key.

Day & Time **Menu**

Use this menu to set the clock manually. (If you have Caller ID, the phone sets the day and time from the CID data.) Select the day of week, then use the number keypad to enter the hour and minutes in HHMM format (e.g., enter 0345 for 3:45). Use **UP** or **DOWN** to select *AM/PM*.

Global Setup **Menu**

<i>Dial Mode</i>	Change the way your phone communicates with the telephone network (see page 4).
<i>Edit Voice Mail</i>	Program your voice mail access number so you can get messages by pressing one button (see page 11).
<i>VMWI Reset</i>	Reset your Visual Message Waiting Indicator to bring it back in sync with your voice mail service.

Entering Text on Your Phone

Use the 12-key dial pad when you want to enter text into your phone (a name in the phonebook, etc.).

- The phone defaults to a capital letter for the first letter and any letter after a space; otherwise, it uses small letters.

- To switch to all capital letters, press *****. The phone defaults to all capital letters first (e. g. ABCabc2) until you enter a blank space or press ***** again. (Any time you want to change case, just press *****.)
- If two letters in a row use the same number key, enter the first letter and wait a few seconds (or press **RIGHT**); the cursor will move to the next space. Enter the next letter.
- Press **#** to enter a blank space.
- To change a letter, move the cursor to that letter and press **CLEAR** to erase the letter. Then, enter the new letter.
- To erase the entire entry, press and hold **CLEAR**.
- Press **0** to cycle through all available symbols and punctuation.

USING YOUR PHONE

Basics

To do this...	Do this...
make a call	Dial the number, then press TALK/FLASH .
answer a call	Press TALK/FLASH .
hang up	Press END or put the handset in the cradle.
mute the microphone during a call	Press MESSAGES/MUTE-CLEAR . Press again to turn the microphone back on.
mute the ringer for this call only	While the phone is ringing, press MESSAGES/MUTE-CLEAR .

Changing the Volume

Anytime you are listening to the earpiece, press **UP** to increase the volume and **DOWN** to decrease it.

To set the ringer volume: when the phone is in standby, press **UP** to increase the ringer volume and **DOWN** to decrease it. If you turn the ringer volume all the way down, the ringer turns off.

Using the Caller ID and Redial Lists

Caller ID (CID) is a service available from your telephone provider that shows the phone number (and sometimes the caller's name) of incoming calls. Contact your telephone provider for more information.

Caller ID list	Redial list
<ul style="list-style-type: none">- When a call comes in, the phone displays the number and name (if available) of the caller.- The phone saves the information for the last 30 received calls to the <i>CID list</i>.- When it's in standby, the handset shows how many calls came in since the last time you checked the CID list.	<ul style="list-style-type: none">- The handset remembers the last 5 numbers you dialed on it.

To...	Follow these steps:
Open the CID list	Press CALLER ID/RIGHT .
Open the redial list	REDIAL/PAUSE .
Scroll through the lists	Press DOWN to scroll from newest to oldest. Press UP to scroll from oldest to newest.
Dial a number from the lists	Highlight the number you want and press TALK/FLASH .*
Close the lists	Press PHONEBOOK/LEFT .

* If the number is a toll or long distance call, but there's no **1** at the front of the CID record, press ***** to add the **1** before dialing.

To select a number, highlight the number and press **MENU/SELECT**. The phone gives you the following options:

<i>Delete Entry</i>	Erase the number from the list.
<i>Store Into Pb</i>	Add the number to the phonebook. The handset prompts you to edit the name and number.
<i>Delete All</i>	(CID list only) Erase all numbers from the list.

Using Call Waiting

Call Waiting, a service available from your telephone provider, lets you receive calls while you are on another call. Caller ID on Call Waiting (CIDCW) service displays Caller ID information for a waiting call.

If you get a Call Waiting call, the phone sounds a tone and displays any CID information received from the waiting call. Press **TALK/FLASH** to switch between the current call and the waiting call; each time you switch, there is a short pause before you're connected to the other call.

Using the Phonebook

The phone can store up to 30 entries in its phonebook.

To...	Press...
Open/close the phonebook	PHONEBOOK/LEFT.
Scroll through the entries	DOWN (to scroll through the phonebook from A to Z) or UP (to scroll from Z to A).
Jump to entries that start with a certain letter	the number key corresponding to the letter you want.
Dial an entry	UP or DOWN to find the entry you want to dial, then press TALK/FLASH.

Phonebook Menu Options

Open the phonebook with the phone in standby, then press **MENU/SELECT** to open the phonebook menu. Choose one of these options:

<i>Create New</i>	Add an entry to your phonebook. The phone prompts you to enter a name and number.
<i>Delete All</i>	Erase all the entries in the phonebook.

- If you need the phone to pause before sending the next set of digits, press **REDIAL/PAUSE** to insert a 2-second pause. The pause shows as a **P** in the display.
- You can insert as many pauses as you need, but each pause counts as one of your 20 digits.

Phonebook Entry Options

With the phone in standby, open the phonebook and find the entry you want. Press **MENU/SELECT** to open the individual phonebook entry menu. The phone prompts you to edit or delete the entry.

Finding the Handset

With the phone in standby, press **FIND** on the base. The handset will beep in a 3-beep pattern for 1 minute or until you press **FIND** again. You can also end the page by pressing any key from the found handset.

USING SPECIAL FEATURES

Chain Dialing

If you often have to enter a series of digits or a code number during a call, you can save that code number to a phonebook entry and use the phonebook to send the code number.

1. Enter the code number (up to 20 digits) into the phonebook just like a regular phonebook entry. Be sure to enter the code number into the phonebook exactly as you would enter it during a call.
2. When you hear the prompt that tells you to enter the number, open the phonebook and find the entry that contains your code number. Press **MENU/SELECT** to transmit the code. The phone transmits the code number entered in the previous step. If you change your mind, use **PHONEBOOK/LEFT** to close the phonebook.

Using a Voice Mail Service

If you subscribe to a voice mail service, your phone can notify you when you have a new message and give you one-touch access to your voice mailbox.

To Program Your Access Number

The voice mail company will provide you with the access number.

1. With the phone in standby, open the menu and select *Global Setup*.

2. Select *Edit Voice Mail*.
3. Enter the access number (up to 20 digits) that your voice mail provider gave you. Be sure to enter the number exactly as you would dial it.
4. When you're finished, press **MENU/SELECT**.

To access your mailbox, just press **MESSAGES/MUTE-CLEAR** when the phone is in standby. The phone dials the access number exactly as you entered it.

New Message Notification

- This feature supports Frequency-Shift Keying (FSK) message notification. Contact your voice mail provider for more information.
- When you have new messages, the voice message icon appears in the display, and the **STATUS** light on the handset blinks.
- After you listen to your messages, the voice message icon turns off. If it doesn't, you can reset it: With the phone in standby, open the menu and select *Global Setup*; select *VMWI Reset*, then select *Yes*.

Important Information

Solving Problems

If you have any trouble with your phone, try these simple steps first. If you need help, call our Customer Care line listed on the front cover.

If...	Try...
I can't make or receive calls.	<ul style="list-style-type: none"> - Checking the telephone cord connection. - Disconnecting the base AC adapter. Wait a few minutes, then reconnect it. - Making sure the base is plugged in.
The handset won't ring.	<ul style="list-style-type: none"> - Making sure the ringer is turned on.
The handset is not working.	<ul style="list-style-type: none"> - Charging the battery for 15-20 hours. - Checking the battery connection.

If...	Try...
The handset won't display CID information.	<ul style="list-style-type: none"> - Letting calls ring twice before answering. - Making sure your CID service is active.
I hear a beeping during a call.	<ul style="list-style-type: none"> - The battery is getting low. Check the handset for a low battery alert. Finish your conversation and return the handset to the cradle as soon as possible.

Weak or Hard To Hear Audio

If a caller's voice sounds weak or soft, the signal might be blocked by large metal objects or walls; you might also be too far from the base or the handset's battery may be weak.

- Try moving around while you're on a call or moving closer to the base to see if the sound gets louder.
- Make sure the handset's battery is fully charged.
- Try adjusting the earpiece volume.

Do you use a T-Coil hearing aid?

- If you have a hearing aid equipped with a telecoil (T-coil) feature, the interaction between the hearing aid & digital cordless phones can cause noise in the handset. If you have a T-coil hearing aid & you have problems with noise on the line, try turning on *T-coil* mode. Open the menu. Select *Handset Setup*, then select *T-coil*.
- Using T-coil mode can shorten the handset's talk time; make sure to watch the battery status and keep the battery charged.

Noise or Static on the Line

Interference is the most common cause of noise or static on a cordless phone. Here are some common sources of interference:

- electrical appliances, especially microwave ovens
- computer equipment, especially wireless LAN equipment and DSL modems
- radio-based wireless devices, such as room monitors, wireless controllers, or wireless headphones or speakers
- fluorescent light fixtures (especially if giving off a buzzing noise)
- other services that use your phone line, like alarm systems, intercom systems, or broadband Internet service

If static is in 1 location:	If static is in all locations:
<ul style="list-style-type: none"> - Check nearby for one of the common interference sources. - Try moving the handset away from a suspected source, or try moving the suspected source so it's not between the handset and the base. - There is always more noise at the edges of the base's range. If an <i>Out of Range</i> message displays, try moving closer to the base. 	<ul style="list-style-type: none"> - Check near the base for the source of interference. - Try moving the base away from a suspected source, or turn off the source if possible. - If the base has an adjustable antenna, try raising the antenna so it stands straight up. - If you have any service that uses the phone line, you might need a filter (see below).

Installing a Line Filter or DSL Filter

Sometimes, broadband Internet services that use the telephone line can interfere with phones. One of these services—DSL—often causes static on telephones. A DSL filter or telephone line filter usually solves this problem. The technician who installed your DSL service might have left some filters for you; if not, call your DSL provider or look in any electronics store.

Plug the DSL filter into the telephone wall jack and plug your phone's base into the filter. Make a test call to make sure the noise is gone.

Liquid Damage

Moisture and liquid can damage your cordless phone.

- If the exterior housing of the handset or base is exposed to moisture or liquid, wipe off the liquid, and use as normal.
- If moisture or liquid is inside the plastic housing (i.e. liquid can be heard in the phone or liquid has entered the handset battery compartment or vent openings on the base), follow these steps:

Handset	Base
1. Remove the battery cover and disconnect the battery.	1. Disconnect the AC adapter to cut off the power.
2. Let dry for at least 3 days with the battery disconnected and the cover off for ventilation.	2. Disconnect the telephone cord.
3. After the handset dries, reconnect the battery and replace the cover. Recharge the battery fully (15-20 hours) before using.	3. Let dry for at least 3 days before reconnecting.

CAUTION! DO NOT use a microwave oven to speed up the drying process. This will cause permanent damage to the handset, base and the microwave oven.

AC Adapter and Battery Information

- Use only the supplied AC adapters. Be sure to use the proper adapter for the base & any chargers.

AC adapter	Part number	PS-0035
	Input voltage	120V AC, 60 Hz
	Output voltage	8V AC @ 300mA
Battery pack	Part number	BT-1007
	Capacity	500mAh, 2.4V DC

- Do not place the power cord where it creates a trip hazard or where it could become chafed and create a fire or electrical hazard.
- Do not place the unit in direct sunlight or subject it to high temperatures.
- Fully charged, the battery should provide about 10 hours of talk time and about 7 days of standby time. For best results, return the handset to the cradle after each call to keep it fully charged.
- When the battery gets too low, the handset shows a low battery alert. If you hear a strange beep during a call, check the display: if you see the low battery alert, finish your conversation as quickly as possible and return the handset to the cradle. If the handset is in standby, none of the keys will operate.
- With normal use, the battery should last about one year. Replace the battery when the talk time becomes short even when the battery is charged. To buy a replacement battery, call the Parts Department listed on the front cover.

Rechargeable Nickel-Cadmium Battery Warning

- This equipment contains a rechargeable Nickel-Cadmium (Ni-Cd) battery.

- Cadmium and Nickel are chemicals known to the State of California to cause cancer.
- Do not short-circuit the battery.
- The rechargeable Ni-Cd batteries contained in this equipment may explode if disposed of in a fire.
- Do not charge the battery used in this equipment in any charger other than the one designed to charge this battery as specified in the owner's manual. Using another charger may damage the battery or cause it to explode.
- As part of our commitment to protecting our environment and conserving natural resources, Uniden voluntarily participates in an RBRC® industry program to collect and recycle used Ni-Cd batteries within the United States. Please call 1-800-8-BATTERY for information on Ni-Cd battery recycling in your area. (RBRC® is a registered trademark of the Rechargeable Battery Recycling Corporation.)



Rechargeable batteries must be recycled or disposed of properly. Uniden works to reduce lead content in PVC coated cords in our products & accessories.

Warning! The cords on this product and/or accessories contain lead, a chemical known to the State of California to cause birth defects or other reproductive harm. Wash hands after handling.

Compliance Information

FCC Part 68 information

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US: AAAEQ##TXXXX. If requested, this number must be provided to the phone company.

An applicable Universal Service Order Codes (USOC) certification for the jacks used in this equipment is provided (i.e., RJ11C) in the packaging with each piece of approved terminal equipment. A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The REN is used to determine the number of devices that may be connected to a phone line. Excessive RENs on a phone line may result in devices not

ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the telephone provider. The REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3).

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary. The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

Please follow instructions for repairing, if any (e.g. battery replacement section); otherwise do not substitute or repair any parts of the device except as specified in this manual. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information. This equipment is hearing aid compatible.

If you experience trouble with this equipment, contact the manufacturer (see the cover of this manual for contact information) or an authorized agent. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

If your home has wired alarm equipment connected to a phone line, be sure that installing the system does not disable your alarm equipment. If you have questions about what will disable alarm equipment, contact your telephone company or a qualified installer.

Any changes or modifications to this product not expressly approved by the manufacturer or other party responsible for compliance could void your authority to operate this product.

NOTICE: According to telephone company reports, AC electrical surges, typically resulting from lightning strikes, are very destructive to telephone equipment connected to AC power sources. To minimize damage from these types of surges, a surge arrester is recommended.

FCC Part 15 information

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this phone.

FCC PART 15.105(b): Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Information

This product complies with FCC radiation exposure limits under the following conditions:

- The base must be placed to allow a minimum of 20 cm (8 inches) between the antenna and all persons during normal operation.
- The base must not be collocated or operated in conjunction with any other antenna or transmitter.
- The handset is designed for body-worn operation and meets FCC RF exposure guidelines when used with any belt clip, carrying case, or other accessory supplied with this product. (All necessary accessories are included in the package; any additional or optional accessories are not required for compliance with the guidelines.) Third party accessories (unless approved by the manufacturer) should be avoided as these might not comply with FCC RF exposure guidelines.

Industry Canada (I.C.) Notice

Terminal equipment

NOTICE: This equipment meets the applicable **Industry Canada Terminal Equipment Technical Specifications**. This is confirmed by the registration number. The abbreviation *IC* before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

NOTICE: The Ringer Equivalence Number (REN) for this terminal equipment is marked on the equipment itself. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

Radio equipment

The term *IC* before the radio certification number only signifies that Industry Canada technical specifications were met. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. "Privacy of communications may not be ensured when using this telephone".

Warranty (1 Year, Limited)

Evidence of original purchase is required for warranty service.

WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden")

ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit. THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from the Product and separately secure the battery in its own separate packaging within the shipping carton. The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Service
4700 Amon Carter Blvd.
Fort Worth, TX 76155

As an Energy Star® Partner, Uniden has determined that this product meets the Energy Star® guidelines for energy efficiency. Energy Star® is a U.S. registered mark.

- Uniden® is a registered trademark of Uniden America Corporation.
- The pictures in this manual are for example only. Your phone may not look exactly like the pictures.

May be covered under one or more of the following U.S. patents:

7,206,403 7,310,398 7,460,663

Other patents pending.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>